


28/32 ADHA

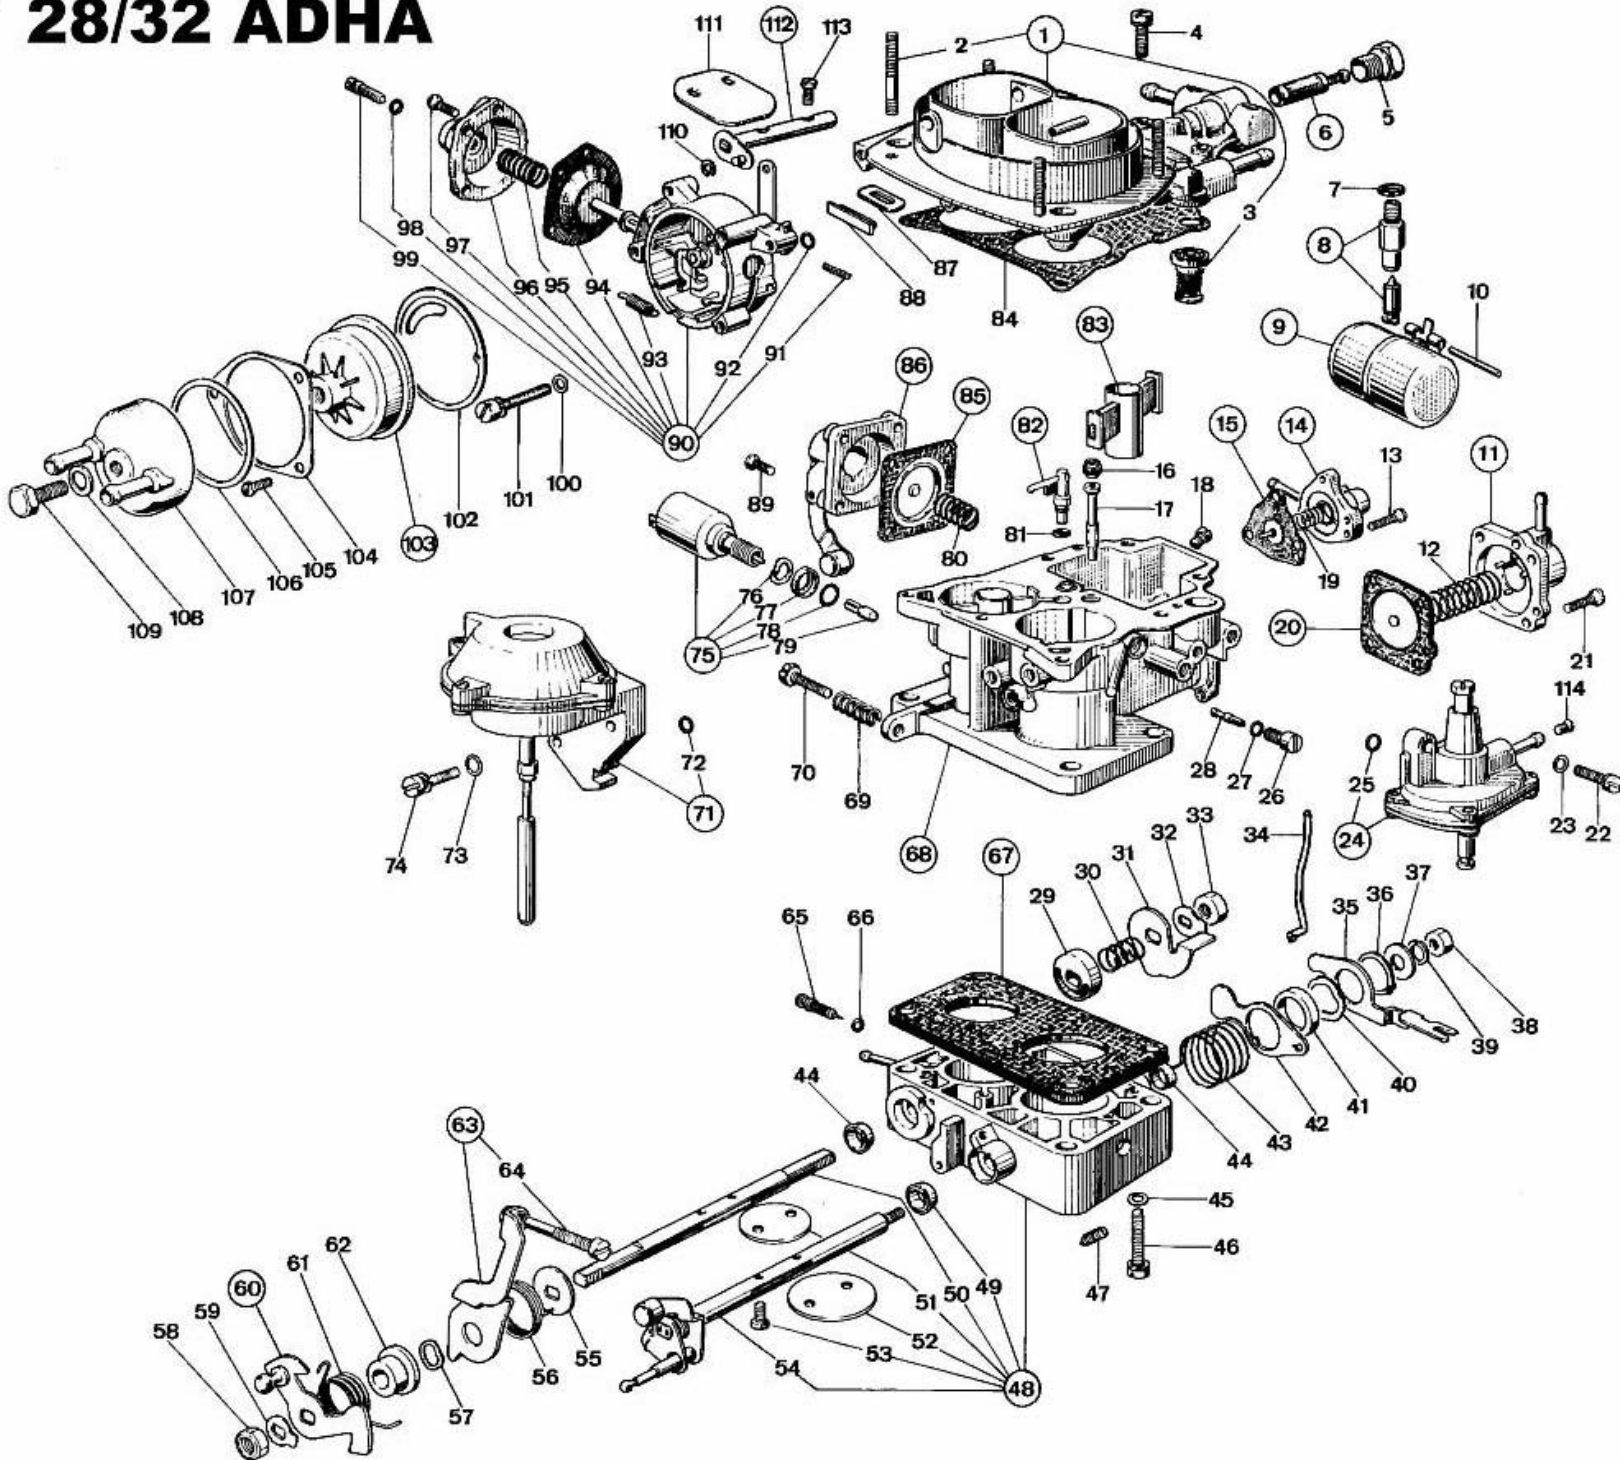


PARTS LIST

TYPE 28/32 ADHA – PART NO. 22560.006

Dia No.	Qty. Req'd	Description	Part Number		Dia No.	Qty. Req'd	Description	Part Number
1	1	Top Cover	Not Serviced		58	1	Throttle Shaft Fixing Nut	34715.014
2	4	Top Cover Stud	64955.007		59	1	Shaft Lock Tab	55520.002
3	1	Plunger	64372.009		60	1	Throttle Lever	45027.137
4	6	Top Cover Fixing Screw	64700.005		61	1	Spring	Not Serviced
5	1	Plug	61002.019		62	1	Bushing	12775.075
6	1	Fuel Screen	37022.004		63	1	Lever	45069.055
7	1	Needle Valve Gasket	83102.070		64	1	Screw	64590.010
8	1	Needle & Seat	79510.+++		65	1	Mixture Screw	64750.051
9	1	Brass Float	41015.004		66	1	O-Ring	41565.010
10	1	Float Pin	52000.015		67	1	Flange	39152.019
11	1	Auxiliary Pump Cover	32486.080		68	1	Carburetor Body	Not Serviced
12	1	Auxiliary Diaphragm Spring	47600.175		69	1	Spring	47600.094
13	3	Screw	64565.001		70	1	Screw	64895.011
14	1	Power Valve Cover	32386.024		71	1	Capsule	31800.047
15	1	Diaphragm	47407.156		72	1	O-Ring	41565.008
16	1	Air Corrector Jet	77201.*		73	2	Washer	55510.034
17	1	Emulsion Tube	61440.*		74	2	Top Cover Fixing Screw	64700.005
18	1	Main Jet	73801.*		75	1	Idle Cut Off Solenoid	43903.055
19	1	Spring	47600.171		76	1	Wavey Washer	55530.016
20	1	Diaphragm	47407.163		77	1	Plate	58000.019
21	4	Screw	64565.001		78	1	O-Ring	41565.001
22	2	Screw	64700.011		79	1	Idle Jet	74409.*
23	2	Washer	55510.018		80	1	Pump Loading Spring	47600.092
24	1	Capsule	31800.046		81	1	O-Ring	41565.001
25	1	O-Ring	41565.008		82	1	Pump Jet	76407.*
26	1	Idle Jet Holder	52570.006		83	1	Auxiliary Venturi	70508.450
27	1	O-Ring For Idle Jet Holder	41565.002		84	1	Top Cover Gasket	41705.049
28	1	Idle Jet	74403.*		85	1	Diaphragm	47407.118
29	1	Shaft Bushing	50002.008		86	1	Accelerator Pump Cover	32486.069
30	1	Bush Retaining Spring	47600.027		87	1	Dust Seal Plate	52135.018
31	1	Lever	Not Serviced		88	1	Dust Seal Plug	61070.002
32	1	Shaft Lock Tab	55520.004		89	4	Screw	64565.001
33	1	Throttle Spindle Nut	34710.003		90	1	Starting Device	57804.321
34	1	Rod Arm	Not Serviced		91	1	Spring	Not Serviced
35	1	Lever	Not Serviced		92	1	O-Ring	41565.008
36	1	Spring Ring	10140.304		93	1	Spring	47605.031
37	1	Washer	55510.081		94	1	Diaphragm	47407.149
38	1	Nut	34705.001		95	1	Pump Loading Spring	47600.092
39	1	Lock Washer	55525.003		96	1	Cover	32384.039
40	1	Washer	12750.103		97	3	Screw	64560.004
41	1	Bushing	12750.103		98	1	O-Ring	41565.010
42	1	Spring Retainer	Not Serviced		99	1	Screw	64895.010
43	1	Spring	47610.102		100	2	Washer	55510.034
44	2	Bushing	41575.010		101	2	Top Cover Screw (Long)	64695.021
45	2	Washer	55510.034		102	1	Auto Choke Body Gasket	41640.052
46	2	Screw	64700.016		103	1	Choke Element	57804.298
47	1	Screw	64595.013		104	1	Choke Lock Ring	52135.029
48	1	Lower Body	Not Serviced		105	3	Screw	64615.004
49	1	Bushing	41575.010		106	1	Water Cover Gasket	41555.001
50	1	Primary Throttle Shaft	Not Serviced		107	1	Water Choke Cover	32444.011
51	1	Primary Throttle Plate	Not Serviced		108	1	Gasket	41530.002
52	1	Secondary Throttle Plate	Not Serviced		109	1	Screw	64610.008
53	4	Screw	64520.027		110	1	Spring Ring	10140.501
54	1	Secondary Throttle Shaft	Not Serviced		111	1	Throttle Valve	64010.034
55	1	Washer	55555.054		112	1	Choke Shaft	10015.274
56	1	Spring	47610.144		113	2	Choke Plate Fixing Screw	64525.003
57	1	Wavey Washer	55530.002		114	1	Screw	64570.005
		*Calibrated Parts Require 3 Digits To						
		Complete Part Number					+++ Call For Sizes.	
		See Calibrated Parts Section For						
		Sizes.						

28/36 DCD

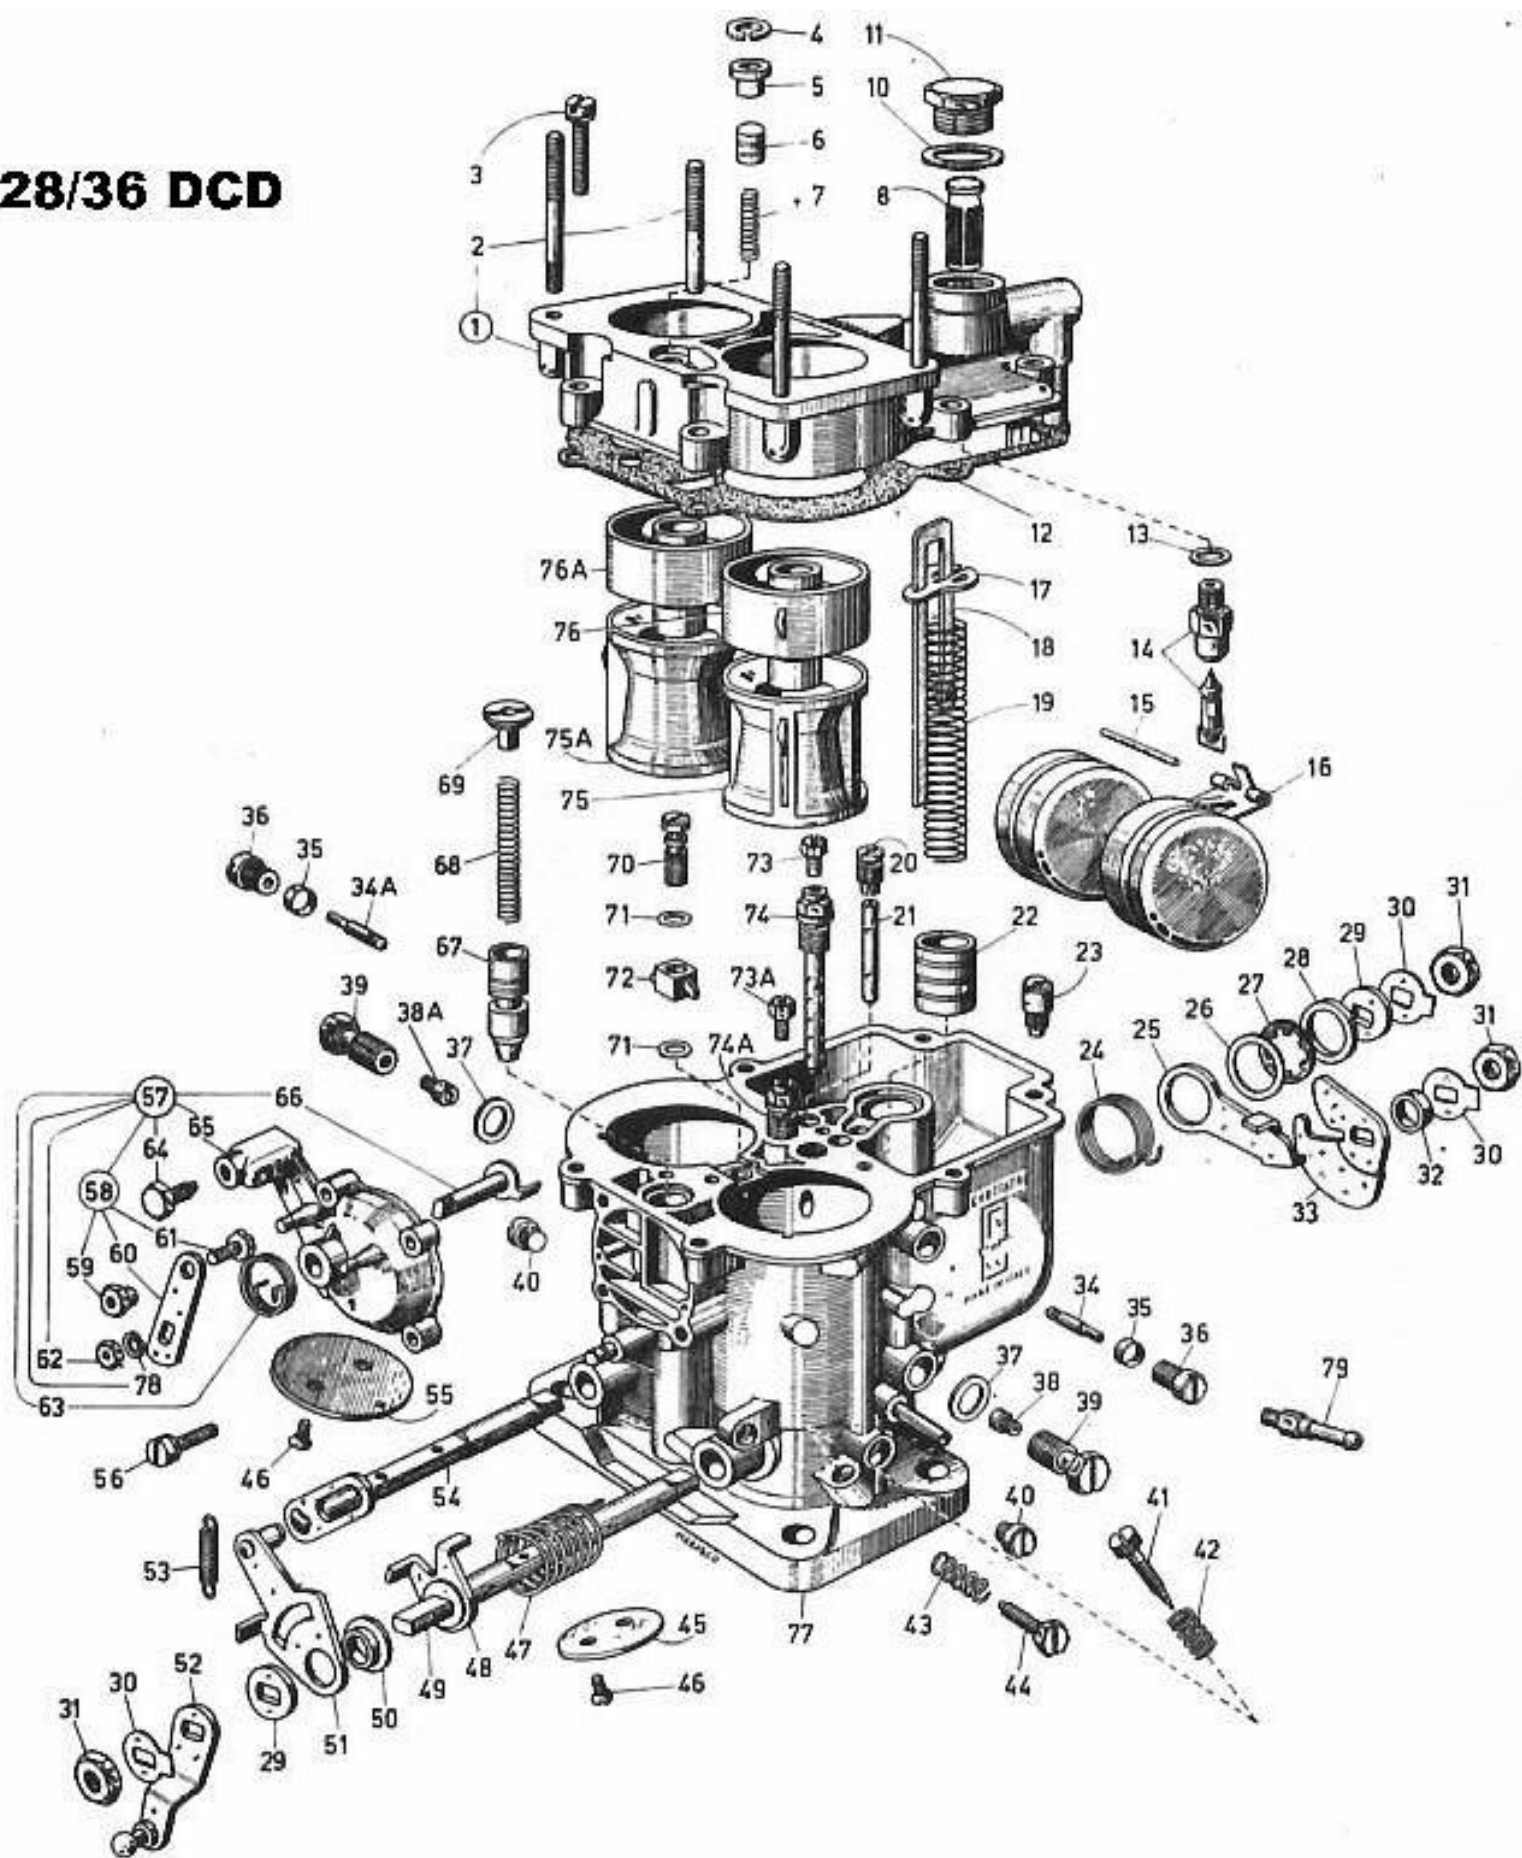


PARTS LIST

TYPE 28/36 DCD

Dia No.	Qty. Req'd	Description	Part Number		Dia No.	Qty. Req'd	Description	Part Number
1	1	Top Cover	Not Serviced		41	1	Idle Mixture Screw	64750.001
2	4	Top Cover Stud	64955.007		42	1	Spring	47600.007
3	6	Mixture Screw	64700.005		43	1	Spring	47600.084
4	1	Clip	10140.010		44	1	Screw	64625.002
5	1	Bushing	12775.013		45	1	Primary Throttle Plate	64005.017
6	1	Plunger	58600.007		46	4	Screw	64570.008
7	1	Spring	47600.052		47	1	Spring	47610.039
8	1	Fuel Filter	37022.010		48	1	Carb Lever	45039.017
10	1	Fuel Filter Gasket	41530.024		49	1	Primary Shaft	10000.439
11	1	Fuel Filter Cover	61002.010		50	1	Bushing	12775.027
12	1	Top Cover Gasket	41705.002		51	1	Slotted Lever	45131.002
13	1	Needle Valve Gasket	83102.070		52	1	Ball Lever	45027.036
14	1	Needle And Seat	79507.*		53	1	Spring	47605.001
15	1	Float Pin	52000.001		54	1	Secondary Shaft	10015.436
16	1	Brass Float	41030.011		55	1	Secondary Throttle Plate	64005.088
17	1	Pump Spring Retainer	52140.002		56	4	Choke Cover Fixing Screw	64700.004
18	1	Pump Rod	10400.024		57	1	Choke Housing	32536.005
19	1	Spring	47600.085		58	1	Choke Lever <i>Including</i>	45027.017
20	1	Starter Air Jet	77505.*		59	1	<i>-Nut</i>	34720.002
21	1	Starter Air Jet	75504.*		60	1	<i>-Choke Lever</i>	45025.003
22	1	Plunger	58602.005		61	1	<i>-Cold Start Bolt W/ Hole</i>	64800.002
23	1	Exhaust Valve	79701.*		62	1	<i>-Fixing Nut</i>	34715.010
24	1	Spring	47610.040		63	1	<i>-Spring</i>	47610.004
25	1	Lever	45039.026		64	1	<i>-Choke Cable Clamp</i>	64605.017
26	1	Washer	55510.041		65	1	<i>-Choke Housing</i>	32534.003
27	1	Spring Ring	10140.401		66	1	<i>-Choke Shaft</i>	10085.004
28	1	Washer	Not Serviced		67	1	Valve	64330.001
29	2	Shaft Spacer	55555.016		68	1	Spring	47600.051
30	3	Shaft Lock Tab	55520.002		69	1	Spring Retainer	52030.001
31	3	Throttle Shaft Fixing Nut	34715.014		70	1	Valve	64290.005
32	1	Bushing	12750.058		71	2	Pump Jet Gasket	41540.014
33	1	Cam	14850.010		72	2	Pump Jet	76203.*
34	2	Idle Jet	74401.*		73	2	Air Corrector Jet	77502.*
35	2	Gasket	41565.045		74	2	Emulsion Tube	61455.*
36	2	Idle Jet Holder	52570.005		75	1	Primary Choke	71702.*
37	2	Gasket	41540.001		75A	1	Secondary Choke	71701.*
38	2	Main Jet	73801.*		76	2	Auxiliary Venturi	69001.*
39	2	Jet Holder	52590.001		77	-	Carburetor Body	Not serviced
40	1	Plug	61015.001		78	1	<i>-Spring Washer</i>	55525.010
		*Calibrated Parts Require 3 Digits To			79	1	Union	10525.014
		Complete Part Number.						
		See Calibrated Parts Section For Sizes						

30 DICA

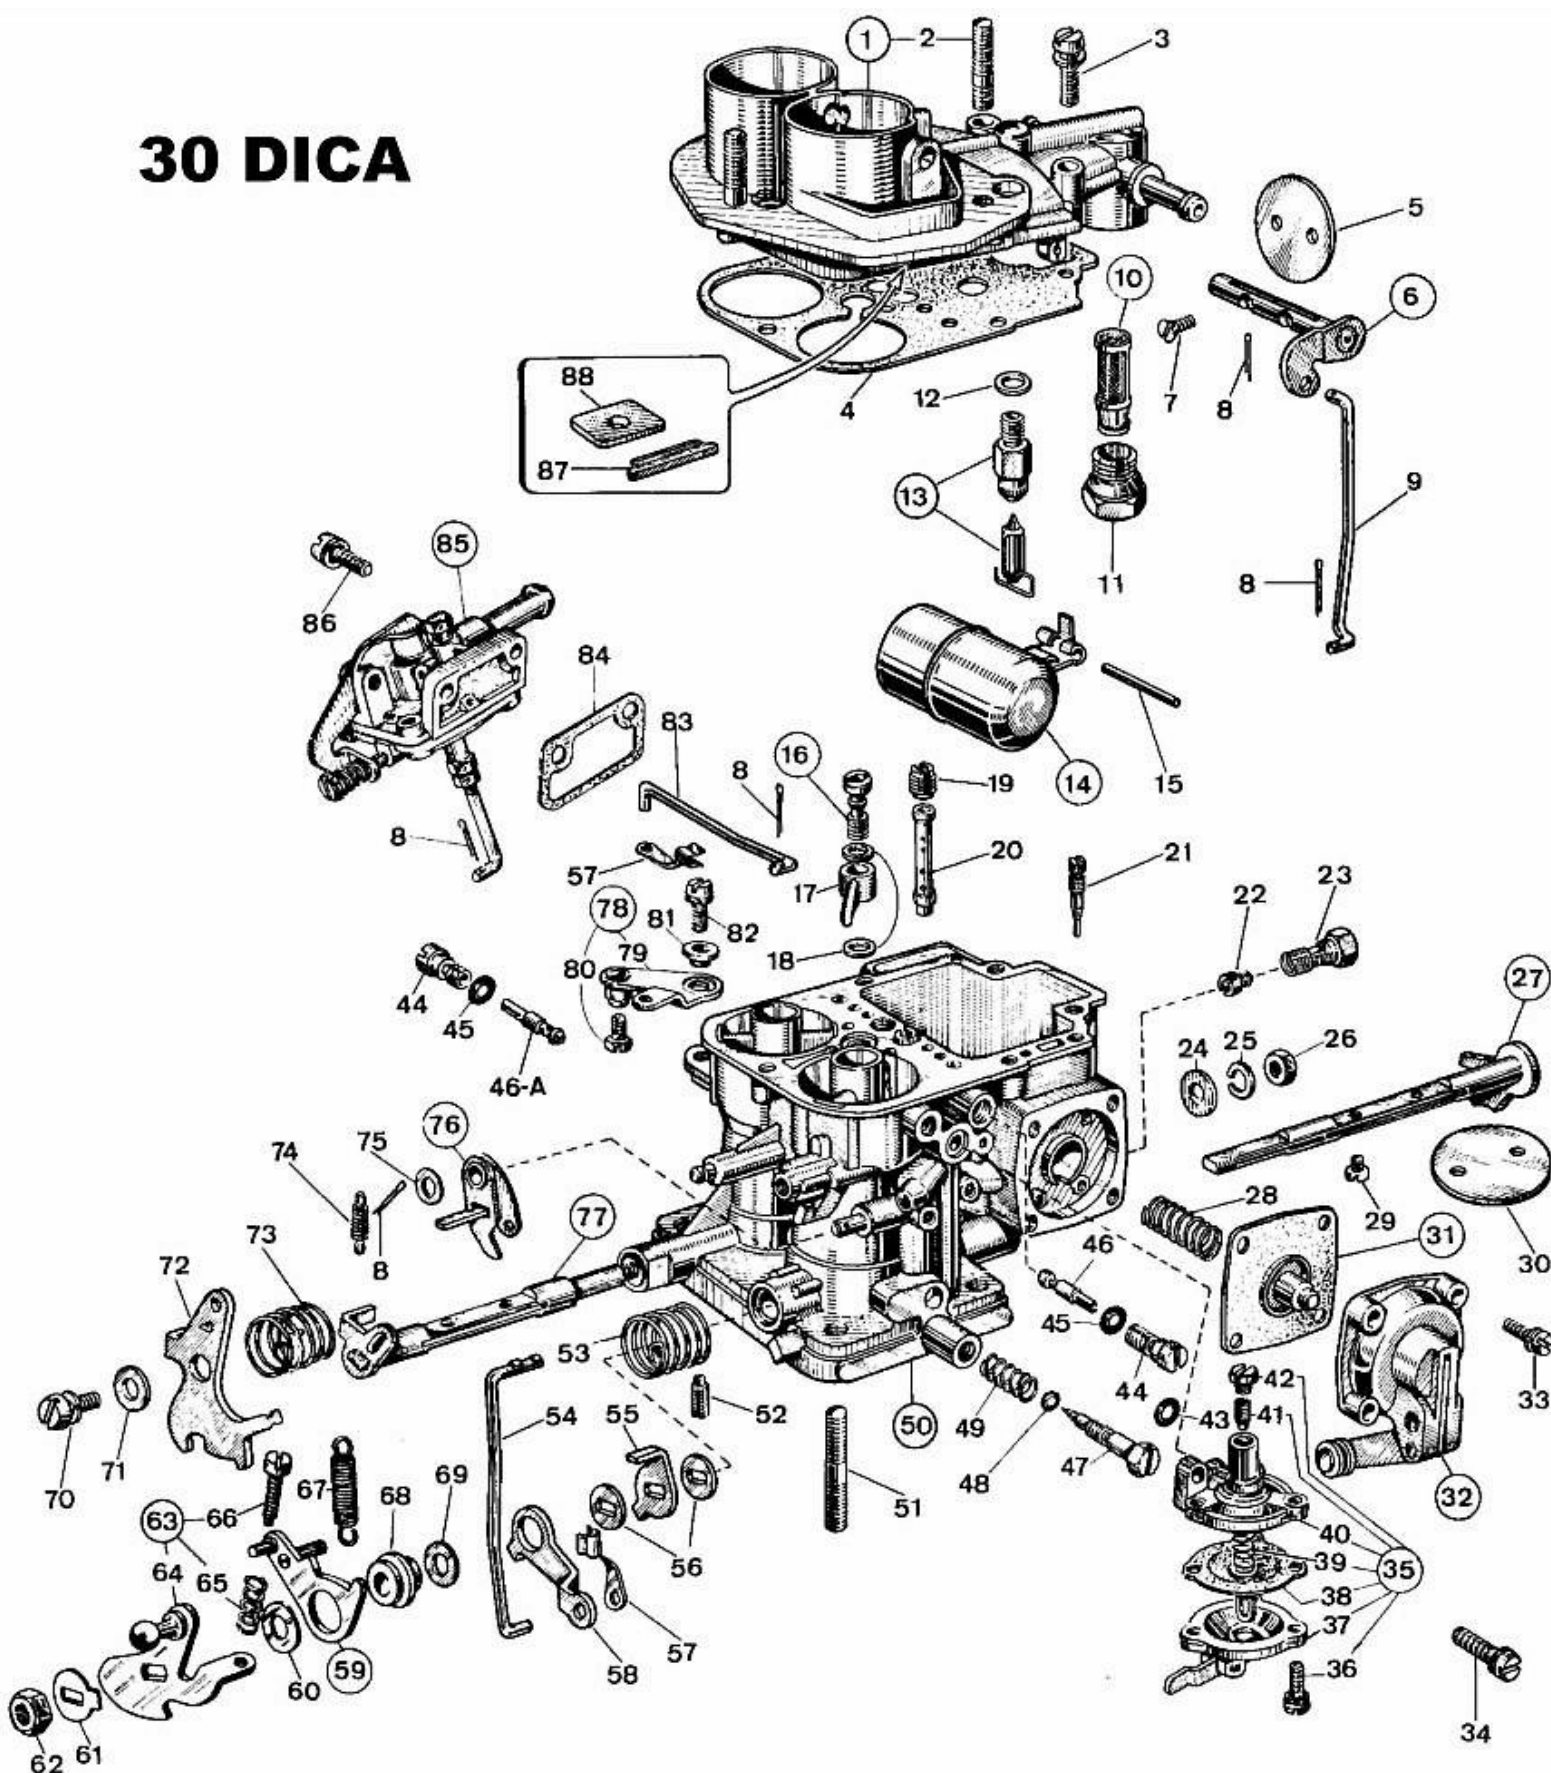


PARTS LIST

TYPE 30 DICA

Dia No.	Qty. Req'd	Description	Part Number		Dia No.	Qty. Req'd	Description	Part Number
1	1	Carburetor Top Cover	Not Serviced		45	2	O-Ring	41565.002
2	3	Stud	64955.001		46	2	Idle Jet	74403.*
3	5	Top Cover Fixing Screw	64700.005		47	1	Mixture Screw	64755.008
4	1	Top Cover Gasket	41705.004		48	1	O-Ring	41565.010
5	1	Choke Plate	64005.003		49	1	Spring	47600.095
6	1	Choke Rod	10015.204		50	1	Carburetor Body	Not Serviced
7	2	Screw	64570.007		51	2	Stud	64955.102
8	5	Split Pin	32610.005		52	2	Stud	64595.030
9	1	Carburetor Rod	61280.009		53	1	Spring	47610.039
10	1	Fuel Filter	37022.010		54	1	Carburetor Rod	61280.010
11	1	Strainer Inspection Plug	61002.018		55	1	Throttle Stop	45136.005
12	1	Needle Valve Gasket	83102.070		56	2	Shaft Spacer	55555.016
13	1	Needle & Seat	79507.*		57	2	Rod Clamp	47670.002
14	1	Float	41015.011		58	1	Lever	45032.001
15	1	Float Pin	52000.010		59	1	Loose Lever	45069.004
16	1	Valve	64290.015		60	1	Washer For Loose Lever	55510.061
17	1	Pump Jet	76216.*		61	1	Shaft Lock Tab	55520.002
18	2	Pump Jet Gasket	41540.014		62	1	Throttle Shaft Fixing Nut	34715.014
19	2	Air Corrector	77201.*		63	1	Lever	45034.024
20	2	Emulsion Tube	61440.*		64	1	Lever	45034.025
21	1	Pump Discharge Blanking Needle	64900.001		65	1	Spring	47600.007
22	2	Main Jet	73801.*		66	1	Screw	64590.004
23	2	Jet Holder	52590.002		67	1	Spring	47605.011
24	1	Washer	55510.002		68	1	Bushing For Loose Lever	12775.006
25	1	Spring Washer	55525.001		69	1	Wavey Washer	55530.002
26	1	Nut	34705.001		70	1	Lever Fixing Screw	64700.012
27	1	Oversized Primary Throttle Shaft	10016.469		71	1	Washer	55510.002
28	1	Accelerator Pump Spring	47600.107		72	1	Lever	45200.001
29	4	Throttle Plate Fixing Screw	64520.023		73	1	Spring	47610.056
30	2	Throttle Plate	64005.004		74	1	Spring	47605.022
31	1	Accelerator Pump Diaphragm	47407.249		75	1	Carburetor Washer	55510.034
32	1	Accelerator Pump Cover	32486.006		76	1	Lever	45034.056
33	4	Fixing Screw	64700.004		77	1	Oversized Secondary Shaft	10016.470
34	1	Screw	64700.002		78	1	Lever	45096.024
35	1	Starting Device	57804.029		79	1	Lever	45096.023
36	3	Fixing Screw	64700.004		80	1	Screw	64615.004
37	1	Cover	32386.004		81	1	Bushing For Lever	12775.010
38	1	Diaphragm	47407.044		82	1	Lever Fixing Screw	64700.012
39	1	Spring	47600.070		83	1	Carburetor Rod	61280.008
40	1	Starting Device	57804.028		84	1	Gasket	41640.025
41	1	Screw	64595.005		85	1	Capsule	31800.009
42	1	Plug	61015.003		86	2	Screw	64700.002
43	1	O-Ring	41565.008		87	1	Dust Seal Plug	61070.002
44	2	Idle Jet Holder	52570.006		88	1	Dust Seal Plate	52135.010
							*Calibrated Parts Require 3 Digits To	
							Complete Part Number	
		4/27/01					See Calibrated Parts Section For Sizes	

32/34 DFT

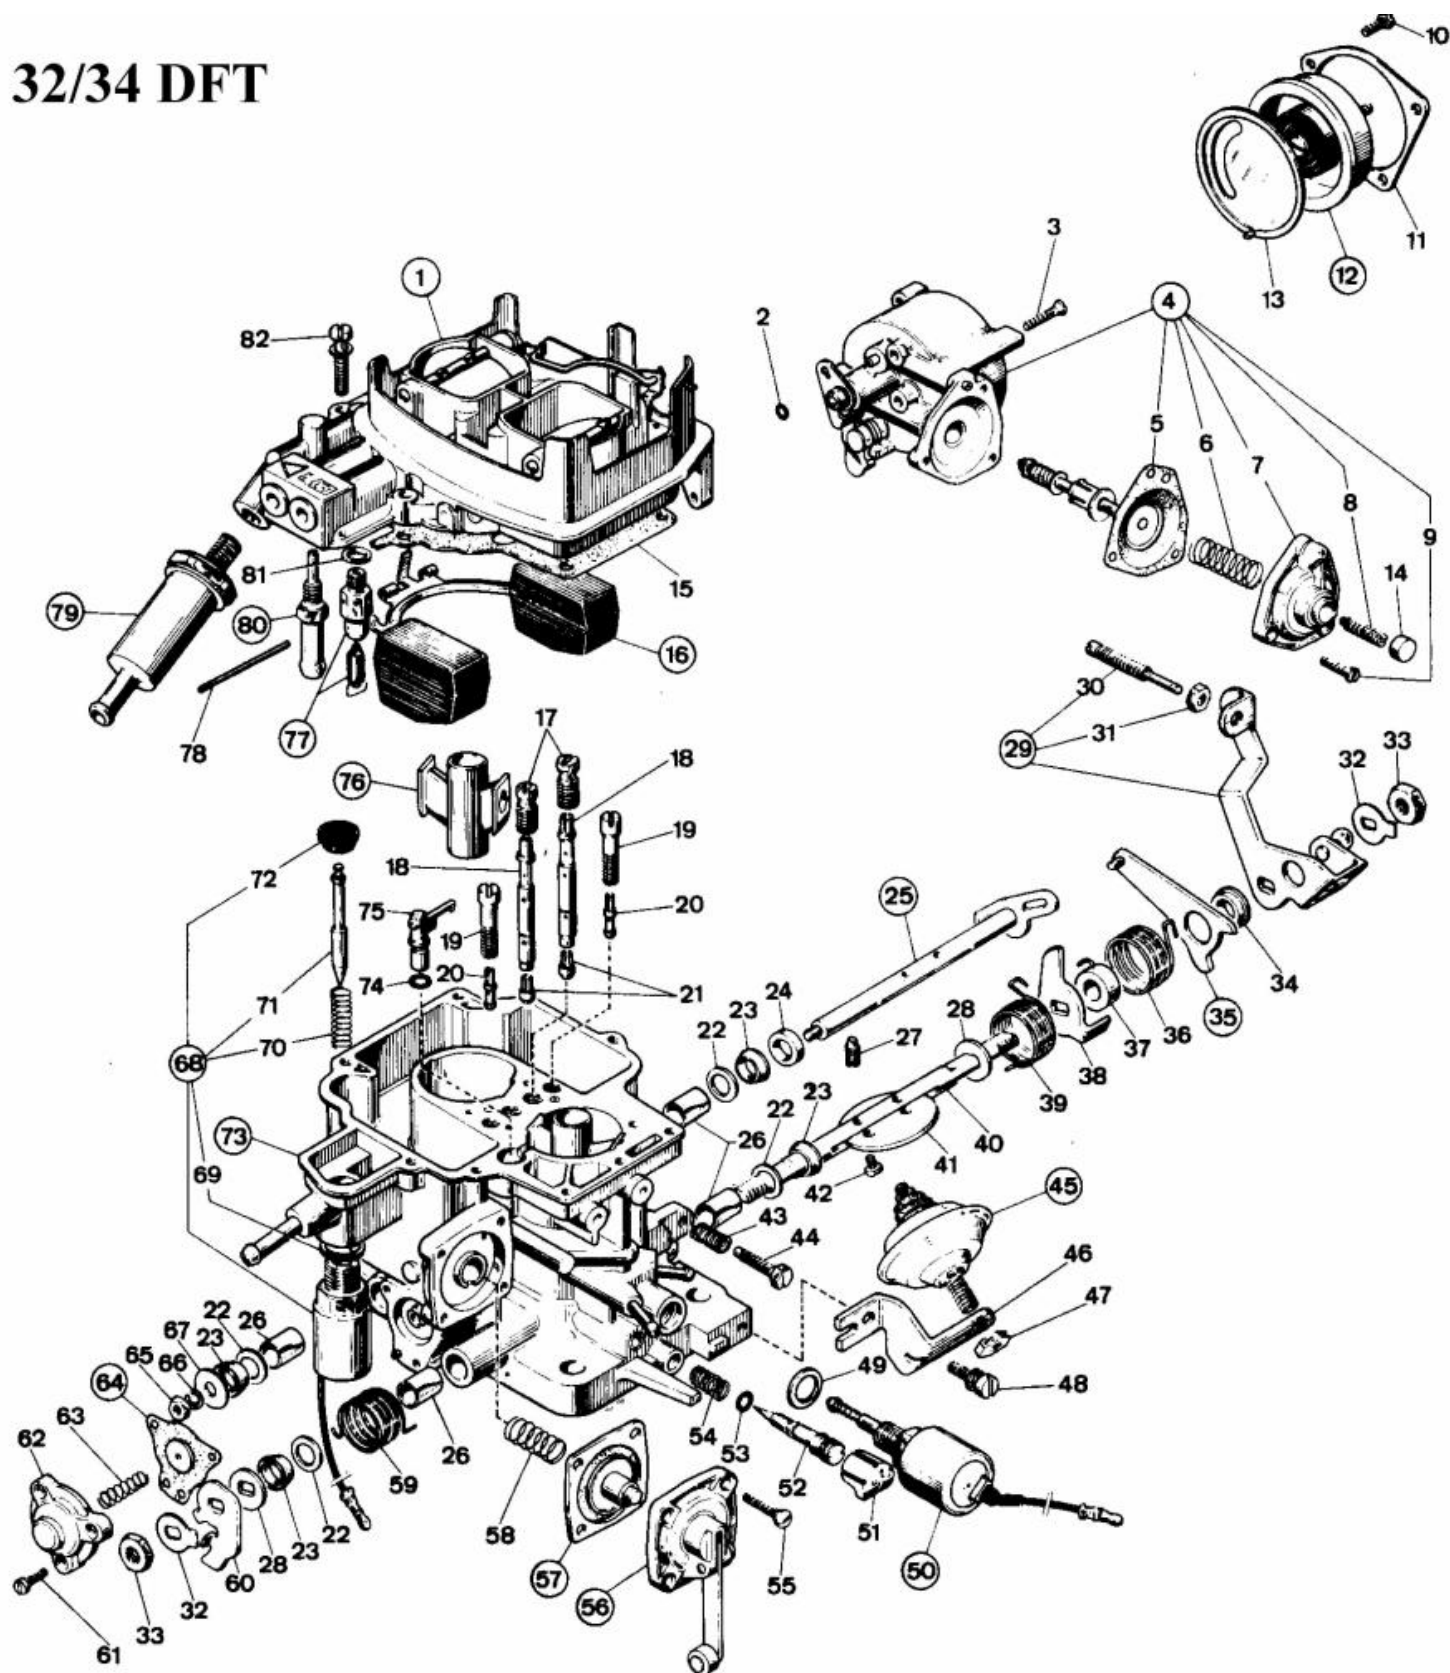


PARTS LIST

TYPE 32/34 DFT

Dia No.	Qty. Req'd	Description	Part Number		Dia No.	Qty. Req'd	Description	Part Number
1	1	Top Cover Assy	Not Serviced		42	4	Throttle Plate Fixing Screw	64520.027
2	1	Auto Choke O-Ring Seal	41565.008		43	1	Spring – Primary Throttle Lever	47600.007
3	3	Auto Choke Fixing Screw	64565.001		44	1	Primary Throttle Adjusting Screw	64625.012
4	1	Auto Choke Assy. –Including	57804.400		45	1	Dash Pot	10104.001
5	1	-Choke Diaphragm	47407.159		46	1	Dash Pot Bracket	Not Serviced
6	1	-Diaphragm Loading Spring	Not Serviced		47	1	Dash Pot Fixing Nut	34715.008
7	1	-Diaphragm Cover	Not Serviced		48	1	Dash Pot Bracket Fixing Screw	Not Serviced
8	1	-Diaphragm Adjusting Screw	Not Serviced		49	1	Idle Cut Off Solenoid Gasket	41535.003
9	3	-Diaphragm Cover Fixing Screw	Not Serviced		50	1	Idle Cut Off Solenoid	43840.013 Or .014
10	3	Plate Fixing Screw	64615.005		51	1	Mixture Screw Tamper Proof Plug	Not Serviced
11	1	Thermostat Housing Lock Ring	52135.029		52	1	Idle Mixture Adjusting Screw	64750.051
12	1	Thermostat Housing	57804.416		53	1	Mixture Screw O-Ring Seal	41565.001
13	1	Heat Sealing Gasket	41640.056		54	1	Idle Mixture Screw Spring	47600.095
14	1	-Screw Plug	Not Serviced		55	4	Pump Cover Fixing Screw	64565.001
15	1	Carburetor Cover Gasket	41705.057		56	1	Pump Cover	Not Serviced
16	1	Float	41030.012		57	1	Pump Diaphragm	47407.261
17	2	Air Correction Jet	77501.*		58	1	Pump Loading Spring	47600.107
18	2	Emulsion Tube	61450.*		59	1	Primary Shaft Return Spring	47610.012
19	2	Idle Jet Holder	52570.004		60	1	Pump Cam	Not Serviced
20	2	Idle Jet	74403.*		61	3	Power Valve Cover Fixing Screw	Not Serviced
21	2	Main Jet	73405.*		62	1	Power Valve Cover	Not Serviced
22	4	Washer	55510.087		63	1	Power Valve Diaphragm Spring	47600.131
23	4	Shaft Bearing Plate	52130.010		64	1	Power Valve Diaphragm	47407.156
24	1	Spacer	12750.085		65	1	Secondary Shaft Fixing Nut	34705.001
25	1	Secondary Shaft	10015.255		66	1	Spring Washer	55525.001
26	4	Shaft Bearing Plate	52130.010		67	1	Washer	Not Serviced
27	1	Secondary Throttle Adjusting Screw	Not Serviced		68	1	EVAP Solenoid -Includes	92.4052.05
28	2	Washer	55555.019		69	1	-Gasket	41535.009
29	1	Throttle Valve Control Lever - Including	Not Serviced		70	1	-Spring	Not Serviced
30	1	-Fast Idle Adjusting Screw	64595.025		71	1	-Spindle	Not Serviced
31	1	-Adjusting Screw Fixing Nut	34715.018		72	1	-Sealing Valve	Not Serviced
32	2	Lock Washer	55520.002		73	1	Carburetor Body	Not Serviced
33	2	Primary Shaft Fixing Nut	34715.014		74	1	Pump Jet O-Ring	41565.002
34	1	Bushing For Free Lever	12775.053		75	1	Pump Jet	76407.*
35	1	Free Lever	45069.015		76	2	Auxiliary Venturi	71115.*
36	1	Spring For Free Lever	47610.109		77	1	Needle Valve	79519.*
37	1	Spacer	12750.087		78	1	Float Fulcrum Pin	52000.036
38	1	Primary Throttle Control Lever	Not Serviced		79	1	Strainer	37022.005
39	1	Primary Shaft Return Spring	47610.118		80	1	Return Fuel Line Pipe	10525.032
40	1	Primary Shaft	Not Serviced		81	1	Needle Valve Gasket	83102.070
41	1	Primary Throttle Plate	64005.090		82	6	Carburetor Cover Fixing Screw	64700.005
							*Calibrated Parts Require 3 Digits to	
							Complete Part Number	
							See Calibrated Parts Section For Sizes	

32/36 DFAV
Part Number:
22680.056
Water Choke

32/36 DFEV
Part Number:
22680.070
Electric Choke

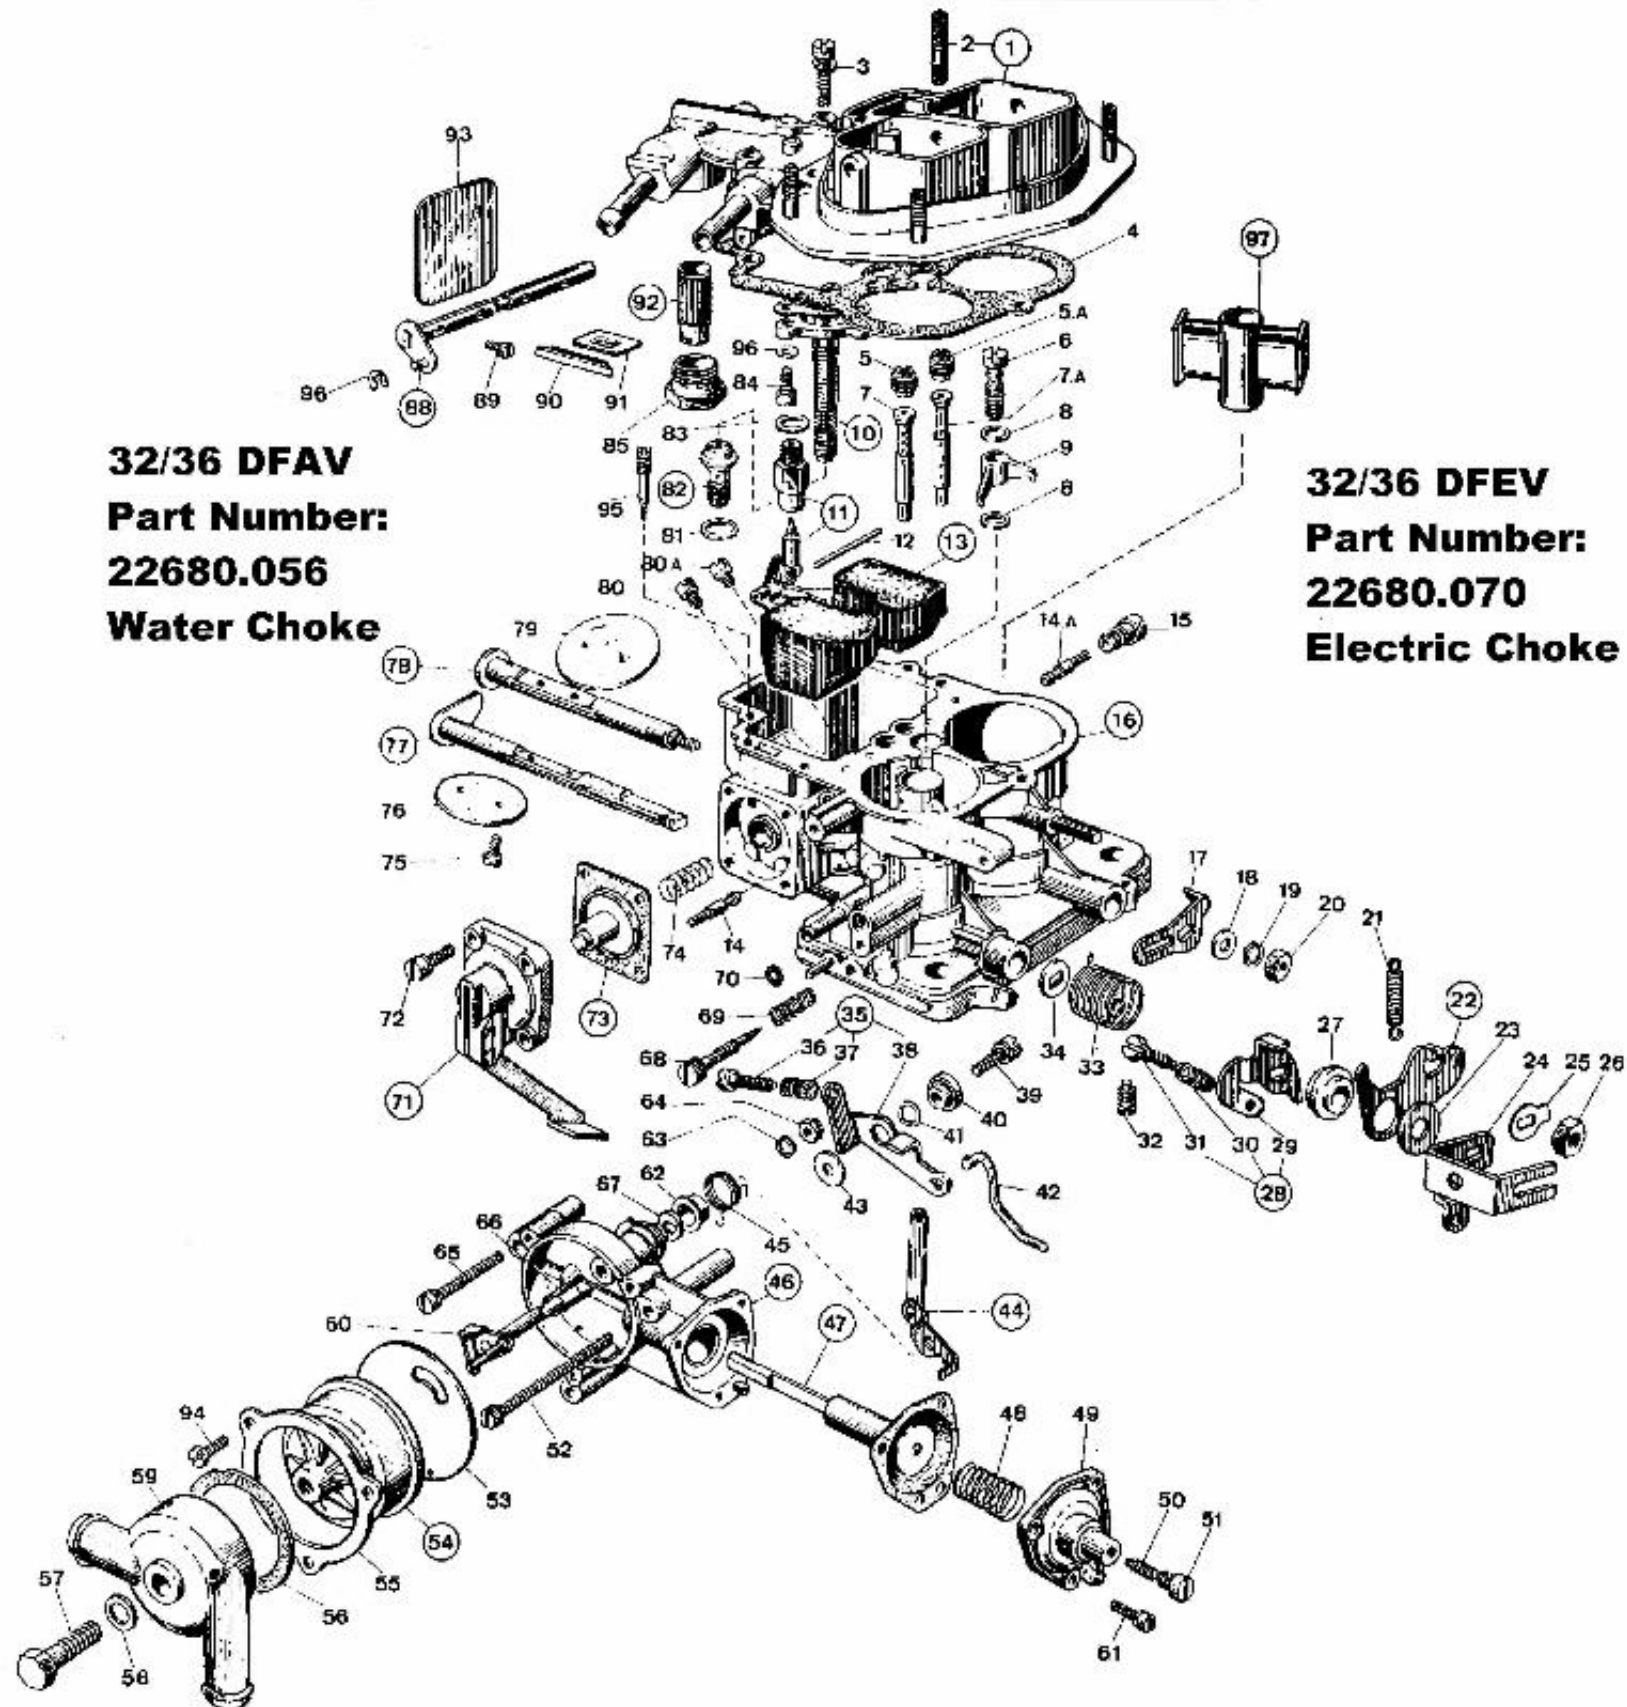

PARTS LIST


TYPE 32/36 DFAV – PART NO. 22680.056

32/36 DFEV – PART NO. 22680.070

Dia No.	Qty. Req'd	Description	Part Number		Dia No.	Qty. Req'd	Description	Part Number
1	1	Carburetor Cover Assy	Not Serviced		51	1	Screw Plug	61015.003
2	4	Stud Bolt	64955.002		52	1	Screw Securing Auto Choke Body	64700.015
3	5	Top Cover Fixing Screw	64700.005		53	1	Gasket For Auto Choke Body	41640.005
4	1	Top Cover Gasket	41705.034		54	1	Auto Choke Thermostat Assy	57804.076
5	1	Primary Air Corrector Jet	77201.*		54a	1	Electric Choke Thermostat	57804.332
5a	1	Secondary Ari Corrector Jet	77201.*		55	3	Thermostat Assy Locking Ring	52135.006
6	1	Pump Delivery Valve Assy	64290.024		56	1	Water Chamber Seal Gasket	41555.001
7	1	Primary Emulsion Tube	61440.*		57	1	Water Cover Fixing Screw	64615.001
7a	1	Secondary Emulsion Tube	61440.*		58	1	Gasket For Screw	41530.002
8	2	Pump Jet Gasket	41540.014		59	1	Auto Choke Water Chamber	32444.010
9	1	Accelerator Pump Jet	76211.*		60	1	Choke Shaft & Lever Assy	10085.031
10	1	Power Valve Assy	57804.025		61	3	Screw Securing Auto Choke Cover	64700.007
11	1	Needle & Seat	79519.*		62	1	Spring Retaining Cover	58000.018
12	1	Float Fixing Pin	52000.015		63	1	Spring Washer	Not Serviced
13	1	Plastic Float	41030.022		64	1	Fixing Nut	Not Serviced
14	1	Primary Idle Jet	74403.*		65	2	Screw Securing Auto Choke Body	64700.023
14a	1	Secondary Idle Jet	74403.*		66	1	Plate For Choke Shaft	52130.012
15	2	Idle Jet Holder	52570.005		67	1	Washer For Shaft	55555.029
16	1	Carb Body	Not Available		68	1	Idle Adjusting Screw	64750.001
17	1	Secondary Throttle Control Lever	45032.013		69	1	Spring For Idle Adjusting Screw	47600.007
18	1	Flat Washer	55510.046		70	1	Gasket For Auto Choke Body	41565.008
19	1	Spring Washer	55525.001		71	1	Accelerator Pump Cover Assy	32486.034
20	1	Fixing Nut	34705.001		72	4	Pump Cover Fixing Screw	64700.004
21	1	Spring For Loose Lever	47605.010		73	1	Accelerator Pump Diaphragm Assy	47407.261
22	1	Primary Loose Lever Assy	45069.006		74	1	Pump Loading Spring	47600.107
23	1	Flat Washer	55510.061		75	4	Throttle Valve Fixing Screw	64520.023
24	1	Throttle Control Lever	Not Serviced		76	1	Primary Throttle Valve	64005.090
25	1	Lock Washer	55520.002		77	1	Primary Main Shaft Assy	Not Serviced
26	1	Fixing Nut	34715.014		77a	1	Primary Main Shaft Assy Oversize	10016.475
27	1	Bushing For Loose Lever	12765.002		78	1	Secondary Main Shaft Assy	10015.413
28	1	Lever For Throttle Adjusting Screw Including	Not Serviced		79	1	Secondary Throttle Valve	64005.034
29	1	-Lever	45039.022		80	1	Primary Main Jet	73801.*
30	1	-Spring	47600.073		80a	1	Secondary Main Jet	73801.*
31	1	-Screw	64625.006		81	1	Power Valve Gasket	41530.013
32	1	Secondary Throttle Adjusting Screw	64595.005		82	1	Full Power Need Valve	64235.016
33	1	Primary Shaft Return Spring	47610.012		83	1	Gasket For Needle Valve	83102.070
34	1	Washer	55555.016		84	3	Power Valve Fixing Screw	64700.007
35	1	Fast Idling Loose Lever Including	Not Serviced		85	1	Strainer Inspection Plug	61002.018
36	1	-Screw	64590.004		86	1	Locking Ring	10140.501
37	1	-Spring	47600.007		88	1	Choke Shaft & Lever Assy	10020.214
38	1	-Lever	Not Serviced		89	4	Choke Plates Fixing Screw	64525.003
39	1	Screw Securing Fast Idle Loose Lever	64700.014		90	1	Dust Seal Plug	61070.002
40	1	Bushing For Fast Idle Loose Lever	12765.042		91	1	Dust Seal Plate	52135.018
41	1	Washer	55530.005		92	1	Strainer Assy	37022.010
42	1	Fast Idling Control Rod	61280.042		93	2	Choke Throttle Valve	64010.006
43	1	Flat Washer	55510.003		94	3	Screw For Thermostat Plate	64615.005
44	1	Choke Shaft Control Lever	Not Serviced		95	1	Pump Discharge Blanking Needle	64900.001
45	1	Spring For Fast Idle Cam	47610.083		96	3	Flat Washer	55510.038
46	3	Auto Choke Body Assy	57804.072		97	2	Auxiliary Venturi	71110.*
47	1	Choke Diaphragm Assy	47407.080		98	1	Choke Device 35-52; 61-67	57804.119
48	1	Spring For Diaphragm	47600.141				*Calibrated Parts Require 3 Digits To Complete Part Number	
49	1	Cover For Choke Diaphragm	32384.022				See Calibrated Parts Section For Sizes.	
50	1	Diaphragm Adjusting Screw	64595.005					

32/36 DGAV
Part Number:
22680.051
Water Choke

32/36 DGEV
Part Number:
22680.033
Electric Choke

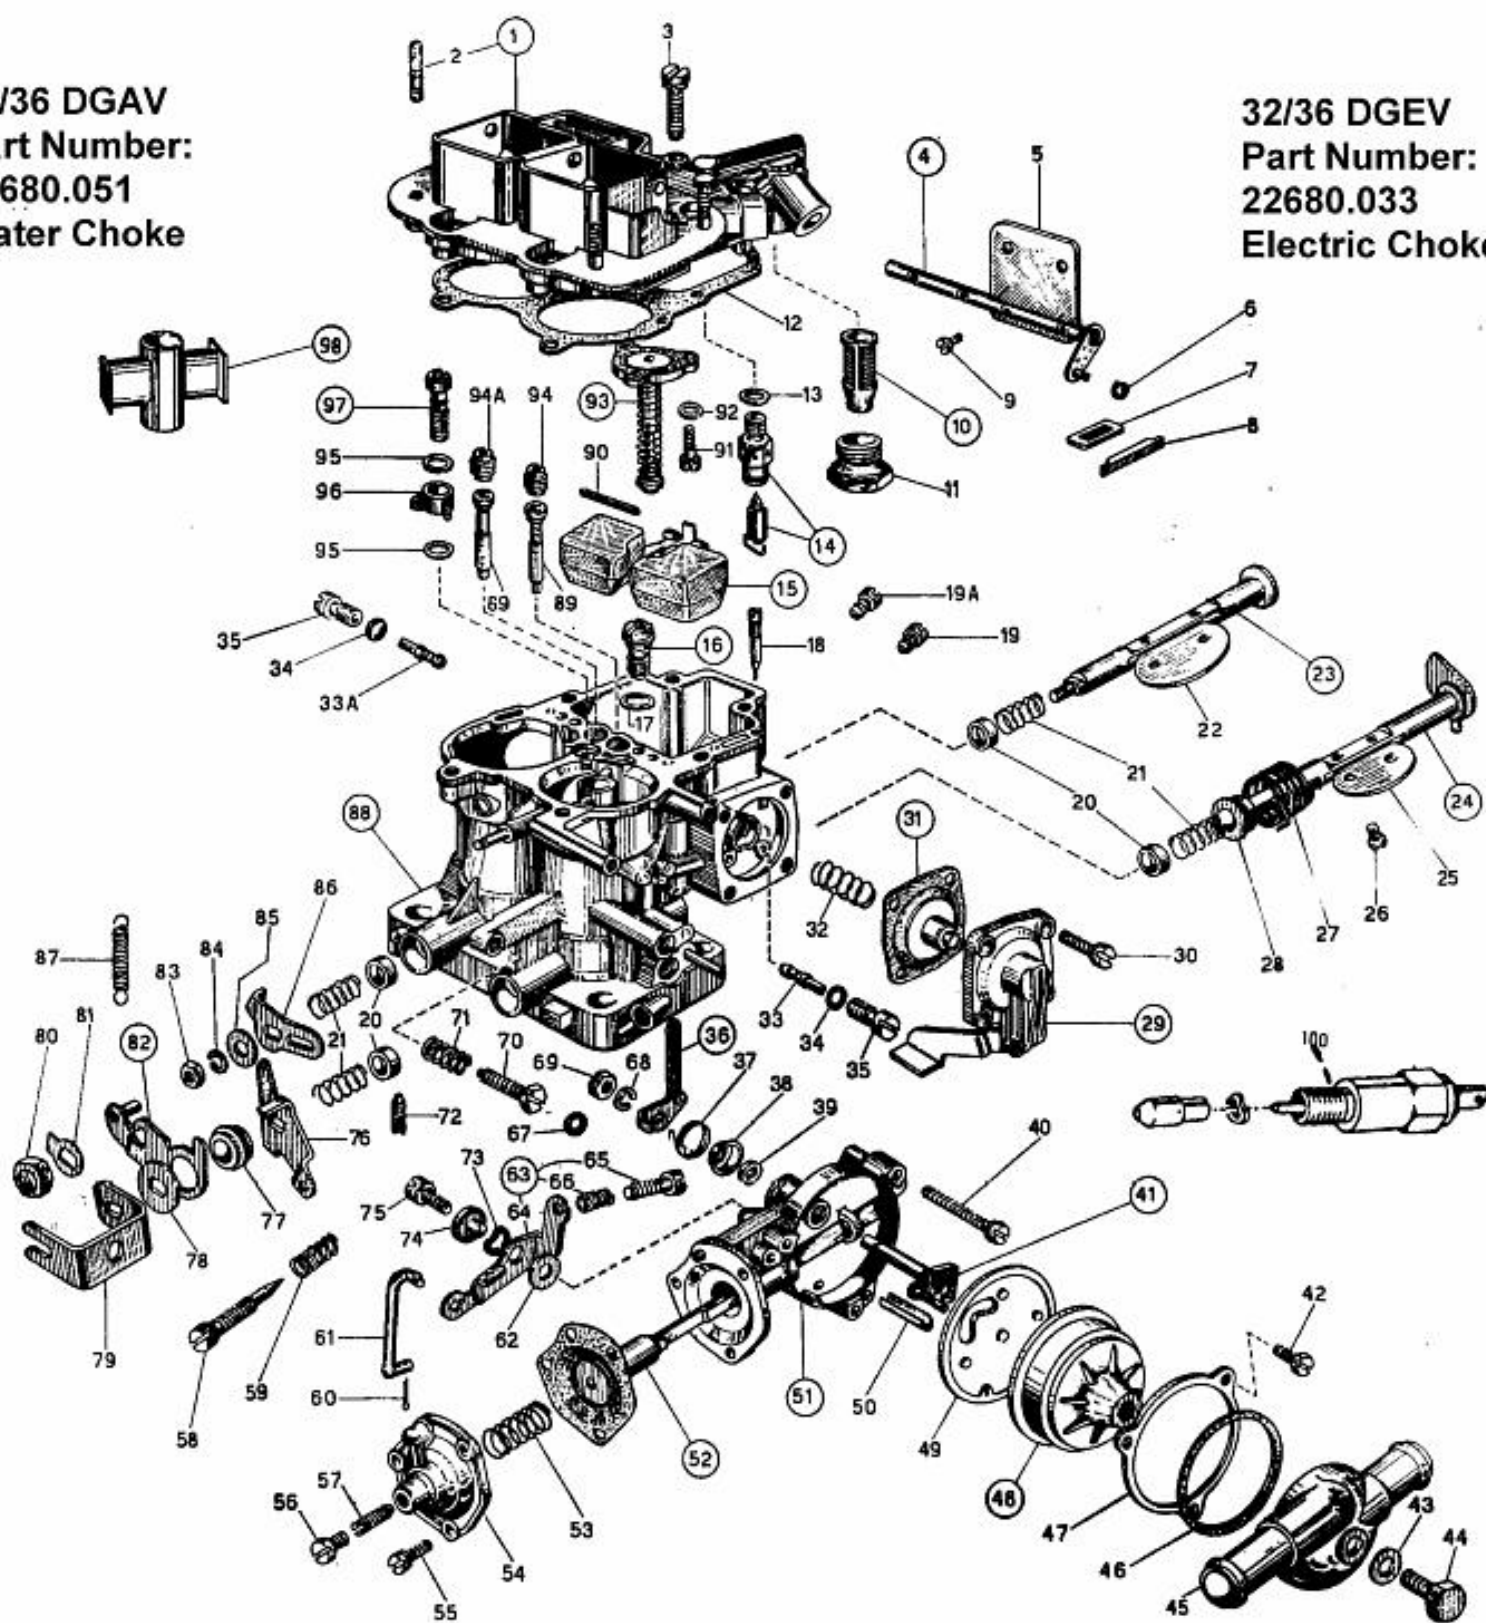


PARTS LIST

TYPE 32/36 DGAV – PART NO. 22680.051

32/36 DGEV – PART NO. 22680.033

Dia No.	Qty. Req'd	Description	Part Number		Dia No.	Qty. Req'd	Description	Part Number
1	1	Carburetor Cover Assy.	31716.166		51	1	Auto Choke Body Assy	57804.074
2	4	Stud Bolt	64955.002		52	1	Choke Diaphragm Assy	47407.056
3	6	Carb Cover Fixing Screw	64700.001		53	1	Diaphragm Loading Spring	47600.141
4	1	Choke Shaft & Lever Assy.	10020.221		54	1	Auto Choke Cover	32384.020
5	2	Starting Throttle Valve	64010.007		55	3	Auto Choke Cover Fixing Screw	64700.007
6	1	Spring Ring	10140.501		56	1	Screw Plug	61015.003
7	1	Dust Seal Plate	52135.018		57	1	Diaphragm Adjusting Screw	64595.005
8	1	Dust Seal Plug	61070.002		58	1	Idle Adjusting Screw	64750.025
9	4	Choke Plate Fixing Screw	64525.003		59	1	Spring For Idle Adjusting Screw	47600.007
10	1	Strainer Assy.	37022.010		60	1	Split Pin	32610.005
11	1	Strainer Inspection Plug	61002.018		61	1	Fast Idling Control Rod	61280.082
12	1	Carb Cover Gasket	41705.035		62	1	Washer For Loose Lever	55510.003
13	1	Needle Valve Gasket	83102.070		63	1	Fast Idling Loose Lever Assy <i>Including</i>	45041.053
14	1	Needle Valve Assy.	79519.*		64	1	- Lever	45039.056
15	1	Float Assy.	41030.019		65	1	-Screw	64590.004
16	1	Full Power Needle Valve Assy.	64235.016		66	1	-Spring	47600.007
17	1	Power Valve Gasket	41530.013		67	1	Auto Choke O Ring Seal	41565.008
18	1	Pump Discharge Blanking Needle	64900.001		68	1	Spring Washer	Not Serviced
19	1	Primary Main Jet	73801.*		69	1	Throttle Shaft Fixing Nut	Not Serviced
19A	1	Secondary Main Jet	73801.*		70	1	Primary Throttle Adjusting Screw	64625.017
20	4	Shaft Retaining Bushing	12750.085		71	1	Spring For Throttle Adjusting Screw	47600.007
21	4	Bushing Retaining Spring	47600.027		72	1	Secondary Throttle Adjusting Screw	64595.005
22	1	Secondary Throttle Valve	64005.034		73	1	Wavy Washer For Loose Lever	55530.005
23	1	Secondary Shaft	10015.492		74	1	Bushing For Loose Lever	12765.042
23A	1	Secondary Shaft Oversized	10016.477		75	1	Loose Lever Fixing Screw	64700.014
24	1	Primary Shaft	10015.493		76	1	Primary Throttle Control Lever	45046.016
25	1	Primary Throttle Valve	64005.090		77	1	Bushing For Loose Lever	12765.002
26	4	Throttle Plate Fixing Screw	64520.023		78	1	Washer For Loose Lever	55510.061
27	1	Shaft Return Spring	47610.079		79	1	Throttle Valve Control Lever	45136.029
28	1	Spacer	12765.047		80	1	Throttle Shaft Fixing Nut	34715.014
29	1	Accelerator Pump Cover Assy	32486.076		81	1	Lock Washer	55520.002
30	4	Pump Cover Fixing Screw	64700.006		82	1	Loose Lever Assy	45069.011
31	1	Accelerator Pump Diaphragm Assy.	47407.249		83	1	Secondary Shaft Fixing Nut	34705.001
32	1	Pump Loading Spring	47600.092		84	1	Spring Washer	55525.001
33	1	Primary Idle Jet	74403.*		85	1	Washer For Loose Lever	55510.046
33A	1	Secondary Idle Jet	74403.*		86	1	Secondary Throttle Control Lever	45032.124
34	2	Gasket For Idling Jet Holder	41565.002		87	1	Spring For Loose Lever	47605.010
35	2	Idling Jet Holder	52570.006		88	1	Carburetor Body	Not Serviced
36	1	Choke Control Lever Assy.	45034.090		89	1	Primary Emulsion Tube	61440.*
37	1	Spring For Fast Idle Cam	47610.080		89A	1	Secondary Emulsion Tube	61440.*
38	1	Spring Retaining Cover	58000.018		90	1	Float Fixing Pin	52000.015
39	1	Washer For Shaft	55555.029		91	3	Control Valve Retaining Screw	64700.007
40	3	Choke Fixing Screw	64700.008		92	3	Washer For Control Valve Screw	55510.038
41	1	Auto Choke Shaft & Lever Assy.	10085.033		93	1	Carb Power Valve Assy	57804.097
42	3	Plate Screw	64615.005		94	1	Primary Air Corrector Jet	77201.*
43	1	Washer For Water Cover Fixing Screw	41530.002		94A	1	Secondary Air Corrector Jet	77201.*
44	1	Water Cover Fixing Screw	64610.014		95	2	Pump Jet Gasket	41540.014
45	1	Auto Choke Water Chamber	32444.005		96	1	Accelerator Pump Jet	76226.*
46	1	Water Chamber Seal Gasket	41555.001		97	1	Pump Delivery Valve Assy.	64290.024
47	1	Thermostat Assy Locking Ring	52135.006		98	2	Auxiliary Venturi	71111.*
48	1	Auto Choke Thermostat Assy	57804.079		99	1	Choke Device 36-41,50-57,68,69	57804.509
48A	1	Electric Choke Assy	57804.333		100	1	Idle Cut Off Solenoid	43928.060
49	1	Gasket For Auto Choke Body	41640.005				*Calibrated Parts Require 3 Digits To	
50	1	Plate For Choke Shaft	52130.012				Complete Part Number.	
							See Calibrated Parts Section For Sizes	

32/36 DGV 5A
Part Number:
22680.005

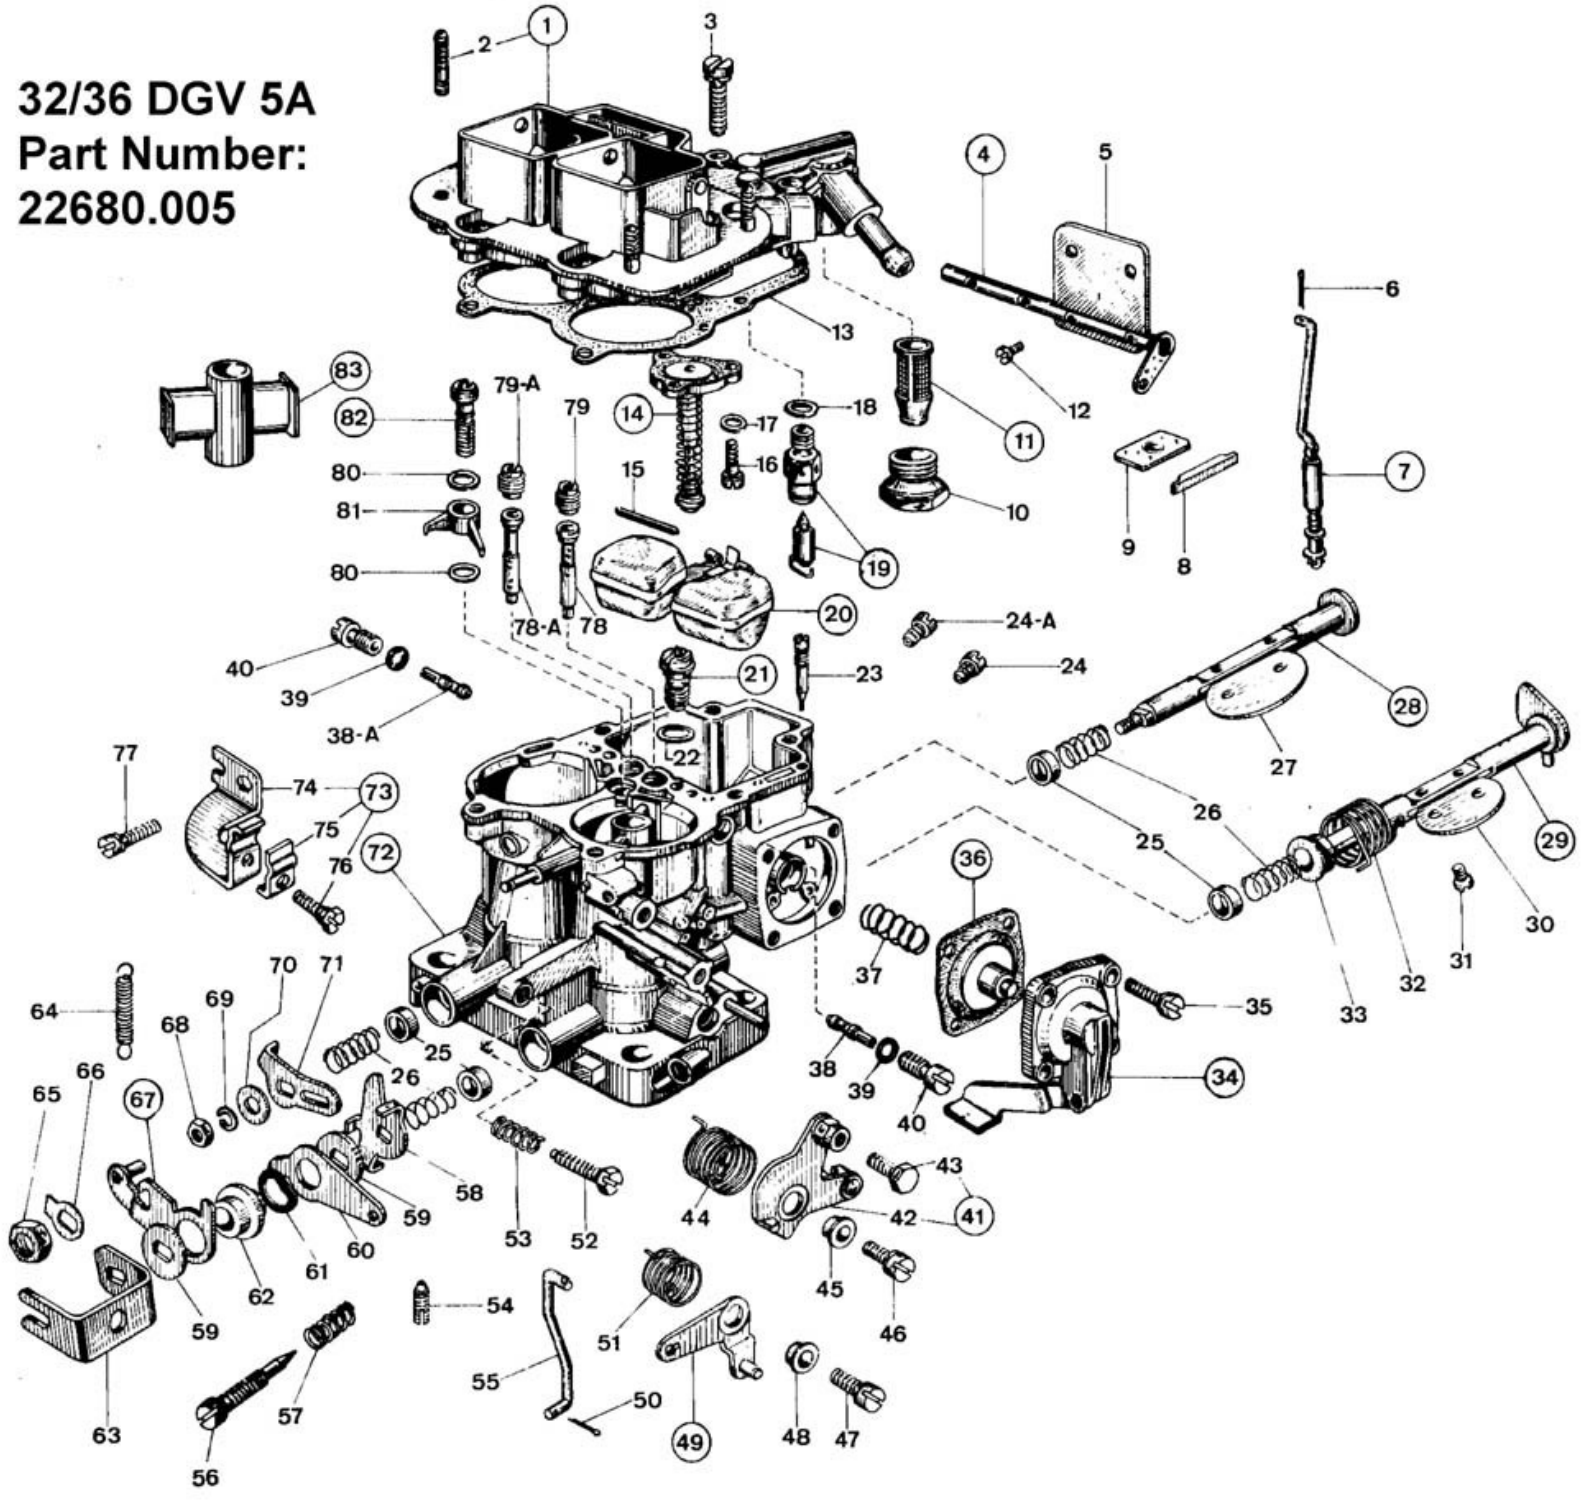


PARTS LIST

TYPE 32/36 DGV 5A – PART NO. 22680.005

Dia No.	Qty. Req'd	Description	Part Number		Dia No.	Qty. Req'd	Description	Part Number
1	1	Carburetor Cover Assy.	31716.132		42	1	-Lever	Not Serviced
2	4	Stud Bolt	64955.002		43	1	-Screw Securing Wire	64615.004
3	6	Carb. Cover Fixing Screw	64700.001		44	1	Spring For Choke Lever	47610.058
4	1	Choke Shaft & Lever Assy.	10020.222		45	1	Bushing For Choke Lever	12775.010
5	2	Choke Valve	64010.007		46	1	Choke Lever Fixing Screw	64700.012
6	1	Split Pin	32610.005		47	1	Square Lever Fixing Screw	64700.012
7	1	Choke Rod	61287.008		48	1	Bushing For Square Lever	12775.010
8	1	Dust Seal Plug	61070.002		49	1	Fast Idle Control Square Lever Assy.	45096.025
9	1	Dust Seal Plate	52135.010		50	1	Split Pin	32610.005
10	1	Strainer Inspection Plug	61002.018		51	1	Spring For Square Lever	47610.033
11	1	Strainer Assy.	37022.010		52	1	Primary Throttle Adjusting Screw	64625.017
12	4	Choke Plates Fixing Screw	64525.003		53	1	Spring For Throttle Adjusting Screw	47600.007
13	1	Carb Cover Gasket	41705.035		54	1	Secondary Throttle Adjusting Screw	64595.005
14	1	Carb Power Valve Assy.	57804.052		55	1	Fast Idling Control Rod	61280.086
15	1	Float Fixing Pin	52000.015		56	1	Idle Adjusting Screw	64750.025
16	3	Control Valve Retaining Screw	64700.007		57	1	Spring For Idle Adjusting Screw	47600.007
17	3	Washer For Control Valve Screw	55510.038		58	1	Primary Throttle Control Lever	45046.020
18	1	Needle Valve Gasket	83102.070		59	2	Washer For Loose Lever	55510.061
19	1	Needle Valve Assy.	79519.*		60	1	Fast Idling Loose Lever	45067.024
20	1	Float Assy.	41030.019		61	1	Wavy Washer	55530.002
21	1	Full Power Needle Valve Assy.	64235.016		62	1	Bushing For Loose Lever	12775.006
22	1	Power Valve Gasket	41530.013		63	1	Throttle Valve Control Lever	45136.029
23	1	Pump Discharge Blanking Needle	64900.001		64	1	Spring For Loose Lever	47605.010
24	1	Primary Main Jet	73801.*		65	1	Throttle Shaft Fixing Nut	34715.014
24A	1	Secondary Main Jet	73801.*		66	1	Lock Washer	55520.002
25	4	Shaft Retaining Bushing	12750.085		67	1	Loose Lever Assy.	45069.011
26	4	Bush Retaining Spring	47600.027		68	1	Secondary Shaft Fixing Nut	34705.001
27	1	Secondary Throttle Valve	64005.034		69	1	Spring Washer	5525.001
28	1	Secondary Shaft	10015.492		70	1	Washer For Loose Lever	55510.046
29	1	Primary Shaft	10015.493		71	1	Secondary Throttle Control Lever	45032.124
30	1	Primary Throttle Valve	64005.090		72	1	Carburetor Body	Not Serviced
31	4	Throttle Plate Fixing Screw	64520.023		73	1	Sheath Support Assy. –Including	58702.024
32	1	Shaft Return Spring	47610.079		74	1	-Sheath Support	58700.028
33	1	Spacer	12765.047		75	1	-Sheath Securing Plate	52145.001
34	1	Accelerator Pump Cover Assy.	32486.076		76	1	-Sheath Plate Fixing Screw	64615.007
35	4	Pump Cover Fixing Screw	64700.006		77	1	Sheath Support Fixing Screw	64700.012
36	1	Accelerator Pump Diaphragm Assy.	47407.249		78	1	Primary Emulsion Tube	61440.*
37	1	Pump Loading Spring	47600.092		78A	1	Secondary Emulsion Tube	61440.*
38	1	Primary Idle Jet	74403.*		79	1	Primary Air Corrector Jet	77201.*
38A	1	Secondary Idle Jet	74403.*		79A	1	Secondary Air Corrector Jet	77201.*
39	2	Gasket For Idling Jet Holder	41565.002		80	2	Pump Jet Gasket	41540.014
40	2	Idling Jet Holder	52570.006		81	1	Accelerator Pump Jet	76226.*
41	1	Choke Control Lever Assy. –Including	45202.064		82	1	Pump Delivery Valve Assy.	64290.024
		Calibrated Parts Require 3 Digits To			83	1	Auxiliary Venturi	71111.
		Complete Part Number.						
		See Calibrated Parts Section For Sizes						

32 ADFA

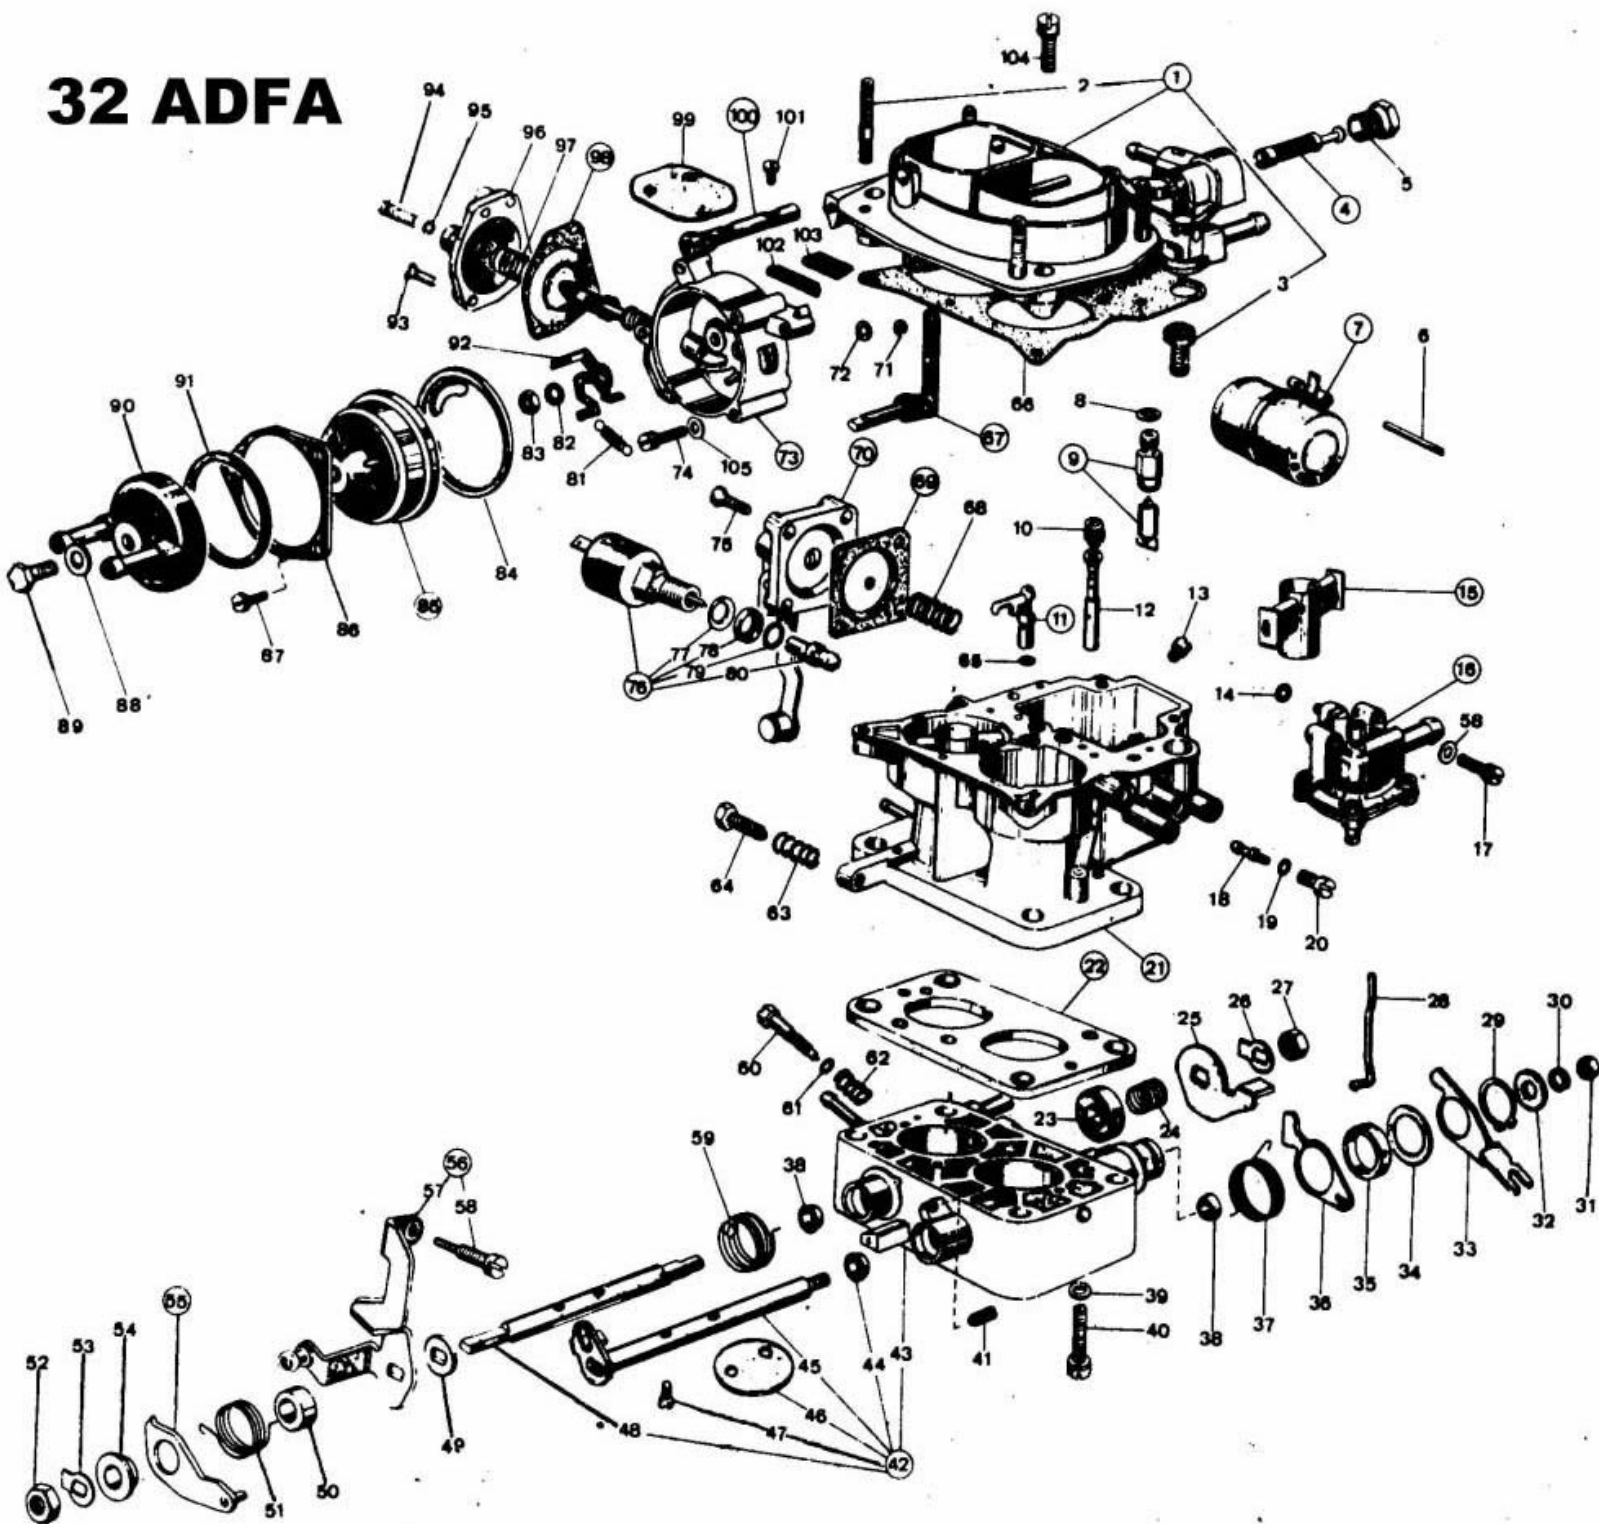


PARTS LIST

TYPE 32 ADFA

Dia No.	Qty. Req'd	Description	Part Number		Dia No.	Qty. Req'd	Description	Part Number
1	1	Top Cover Assembly	Not Serviced		54	1	Bushing	12775.053
2	4	Top Cover Stud	64955.007		55	1	Lever	45069.030
3	1	Plunger	64372.009		56	1	Lever	45041.116
4	1	Fuel Screen	37022.004		57	1	Screw	64590.010
5	1	Plug	61002.019		58	2	Washer	Not Serviced
6	1	Float Pin	52000.015		59	1	Spring	47610.091
7	1	Brass Float	41015.004		60	1	Screw	64755.016
8	1	Needle Valve Gasket	83102.070		61	1	O-Ring	41565.010
9	1	Needle & Seat	79510.*		62	1	Spring	47600.095
10	2	Air Corrector Jet	77201.*		63	1	Spring	47600.007
11	1	Pump Jet	76407.*		64	1	Throttle Stop Screw	64625.012
12	2	Emulsion Tube	61440.*		65	1	O-Ring	41565.001
13	2	Main Jet	73801.*		66	1	Top Cover Gasket	41705.049
14	1	O-Ring	41565.008		67	1	Shaft	10085.042
15	2	Auxiliary Venturi	70512.*		68	1	Pump Loading Spring	47600.092
16	1	Capsule	31800.027		69	1	Diaphragm	47407.118
17	2	Screw	64700.010		70	1	Accelatorator Pump Cover	32486.069
18	1	Idle Jet	74403.*		71	1	Spring Ring	10140.501
19	1	O-Ring For Idle Jet Holder	41565.002		72	1	O-Ring	41565.008
20	1	Idle Jet Holder	52570.006		73	1	Housing	Not Serviced
21	1	Carburetor Body	Not Serviced		74	2	Top Cover Screw	64695.021
22	1	Base Spacer Gasket	39152.015		75	4	Screw	64565.001
23	1	Shaft Bushing	50002.008		76	1	ICU Solenoid	43928.060
24	1	Bush Retaining Spring	47600.027		77	1	Washer	55530.016
25	1	Cam	14850.102		78	1	Plate	58000.019
26	1	Shaft Lock Tab	55520.004		79	1	O-Ring	41565.001
27	1	Throttle Spindle Nut	34710.003		80	1	Idle Jet	74409.*
28	1	Rod	61280.115		81	1	Spring	47605.019
29	1	Spring Ring	10140.304		82	1	Washer	55530.013
30	1	Spring Washer	55525.001		83	1	Nut	34715.016
31	1	Nut	34705.001		84	1	Auto Choke Body Gasket	41640.052
32	1	Washer	55510.081		85	1	Water Choke Element	Not Serviced
33	1	Lever	45067.048		86	1	Choke Lock Ring	52135.029
34	1	Washer	55530.014		87	3	Screw	64615.005
35	1	Bushing	12750.103		88	1	Gasket	41530.002
36	1	Lever	45067.047		89	1	Screw	64610.008
37	1	Spring	47610.102		90	1	Water Choke Cover	32444.011
38	2	Bushing	41575.010		91	1	Water Cover Gasket	41555.001
39	2	Lock Washer	55510.034		92	1	Choke Actuating Lever	45046.037
40	2	Screw	64700.016		93	3	Screw	64560.004
41	1	Screw	64595.013		94	1	Screw	64895.010
42	1	Carburetor Base Assembly	Not Serviced		95	1	O-Ring	41565.010
43	1	Carburetor Base	Not Serviced		96	1	Screw	32384.039
44	1	Bushing	41575.010		97	1	Pump Loading Spring	47600.092
45	1	Secondary Throttle Shaft	10015.273		98	1	Diaphragm	Not Serviced
46	2	Throttle Valve	64005.090		99	1	Throttle Valve	64010.034
47	4	Screw	64520.027		100	1	Shaft	10015.274
48	1	Primary Throttle Shaft	10000.264		101	2	Choke Plate Fixing Screw	64525.003
49	1	Shaft Spacer	55555.019		102	1	Dust Seal Plug	61070.002
50	1	Spacer	12750.097		103	1	Dust Seal Plate	52135.018
51	1	Spring	47610.092		104	6	Top Cover Fixing Screw	64700.005
52	1	Nut	34715.014		105	2	Carb Washer	55510.034
53	1	Shaft Lock Tab	55520.002				*Calibrated Parts Require 3 Digits To	
							Complete Part Number	
	3/30/01						See Calibrated Parts Section For Sizes	

32 DCOF

**Part Number:
19470.010**

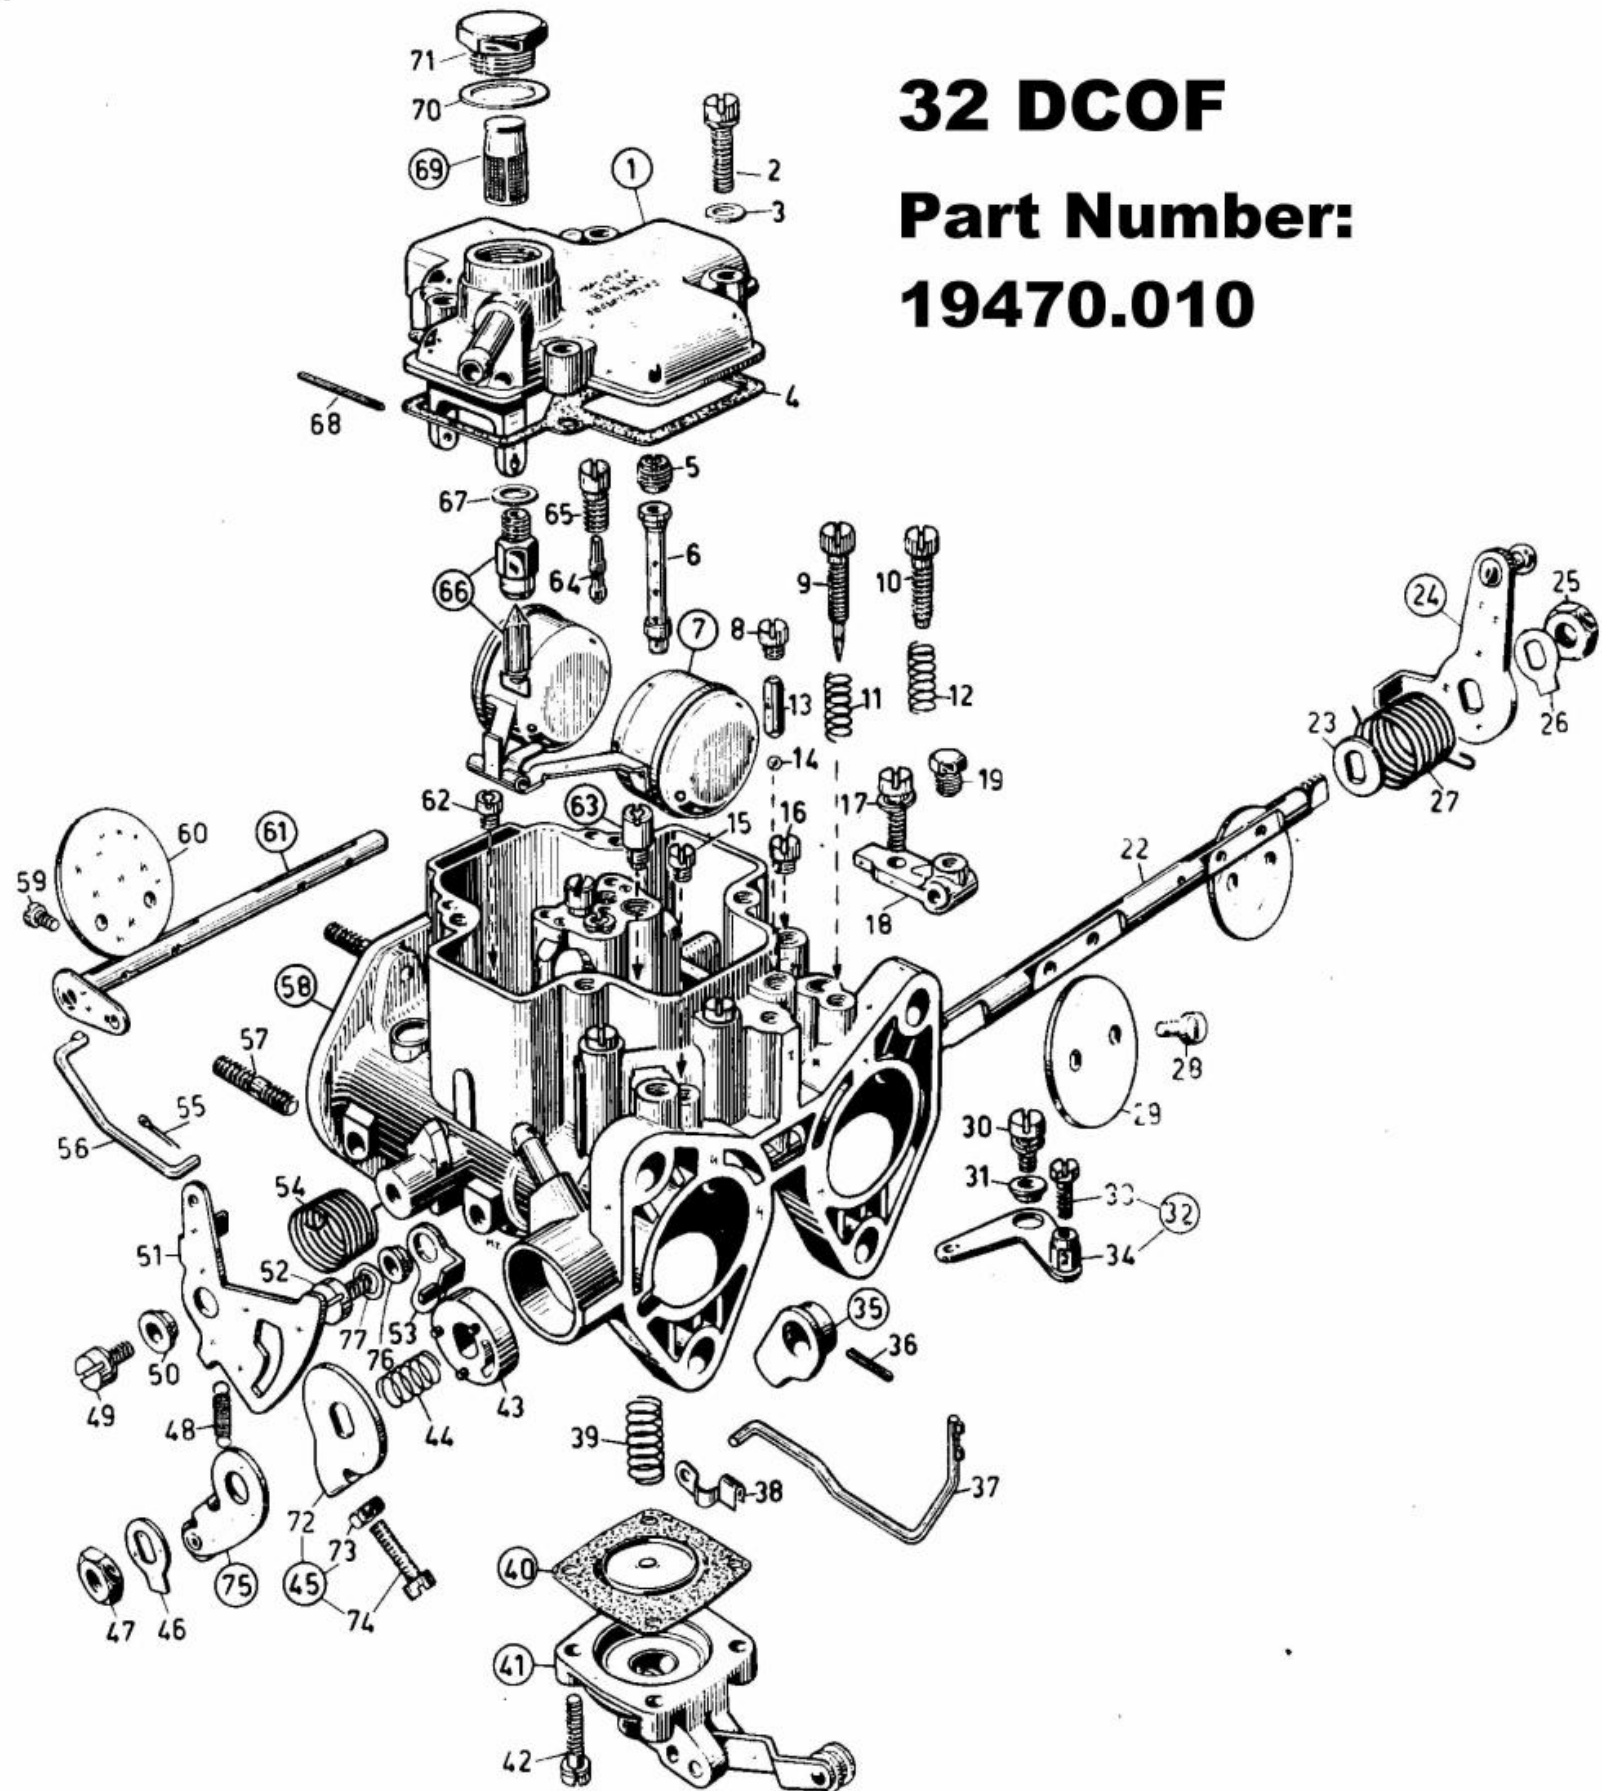


PARTS LIST

TYPE 32 DCOF – PART NO. 19470.010

[illegible]

32 DIR

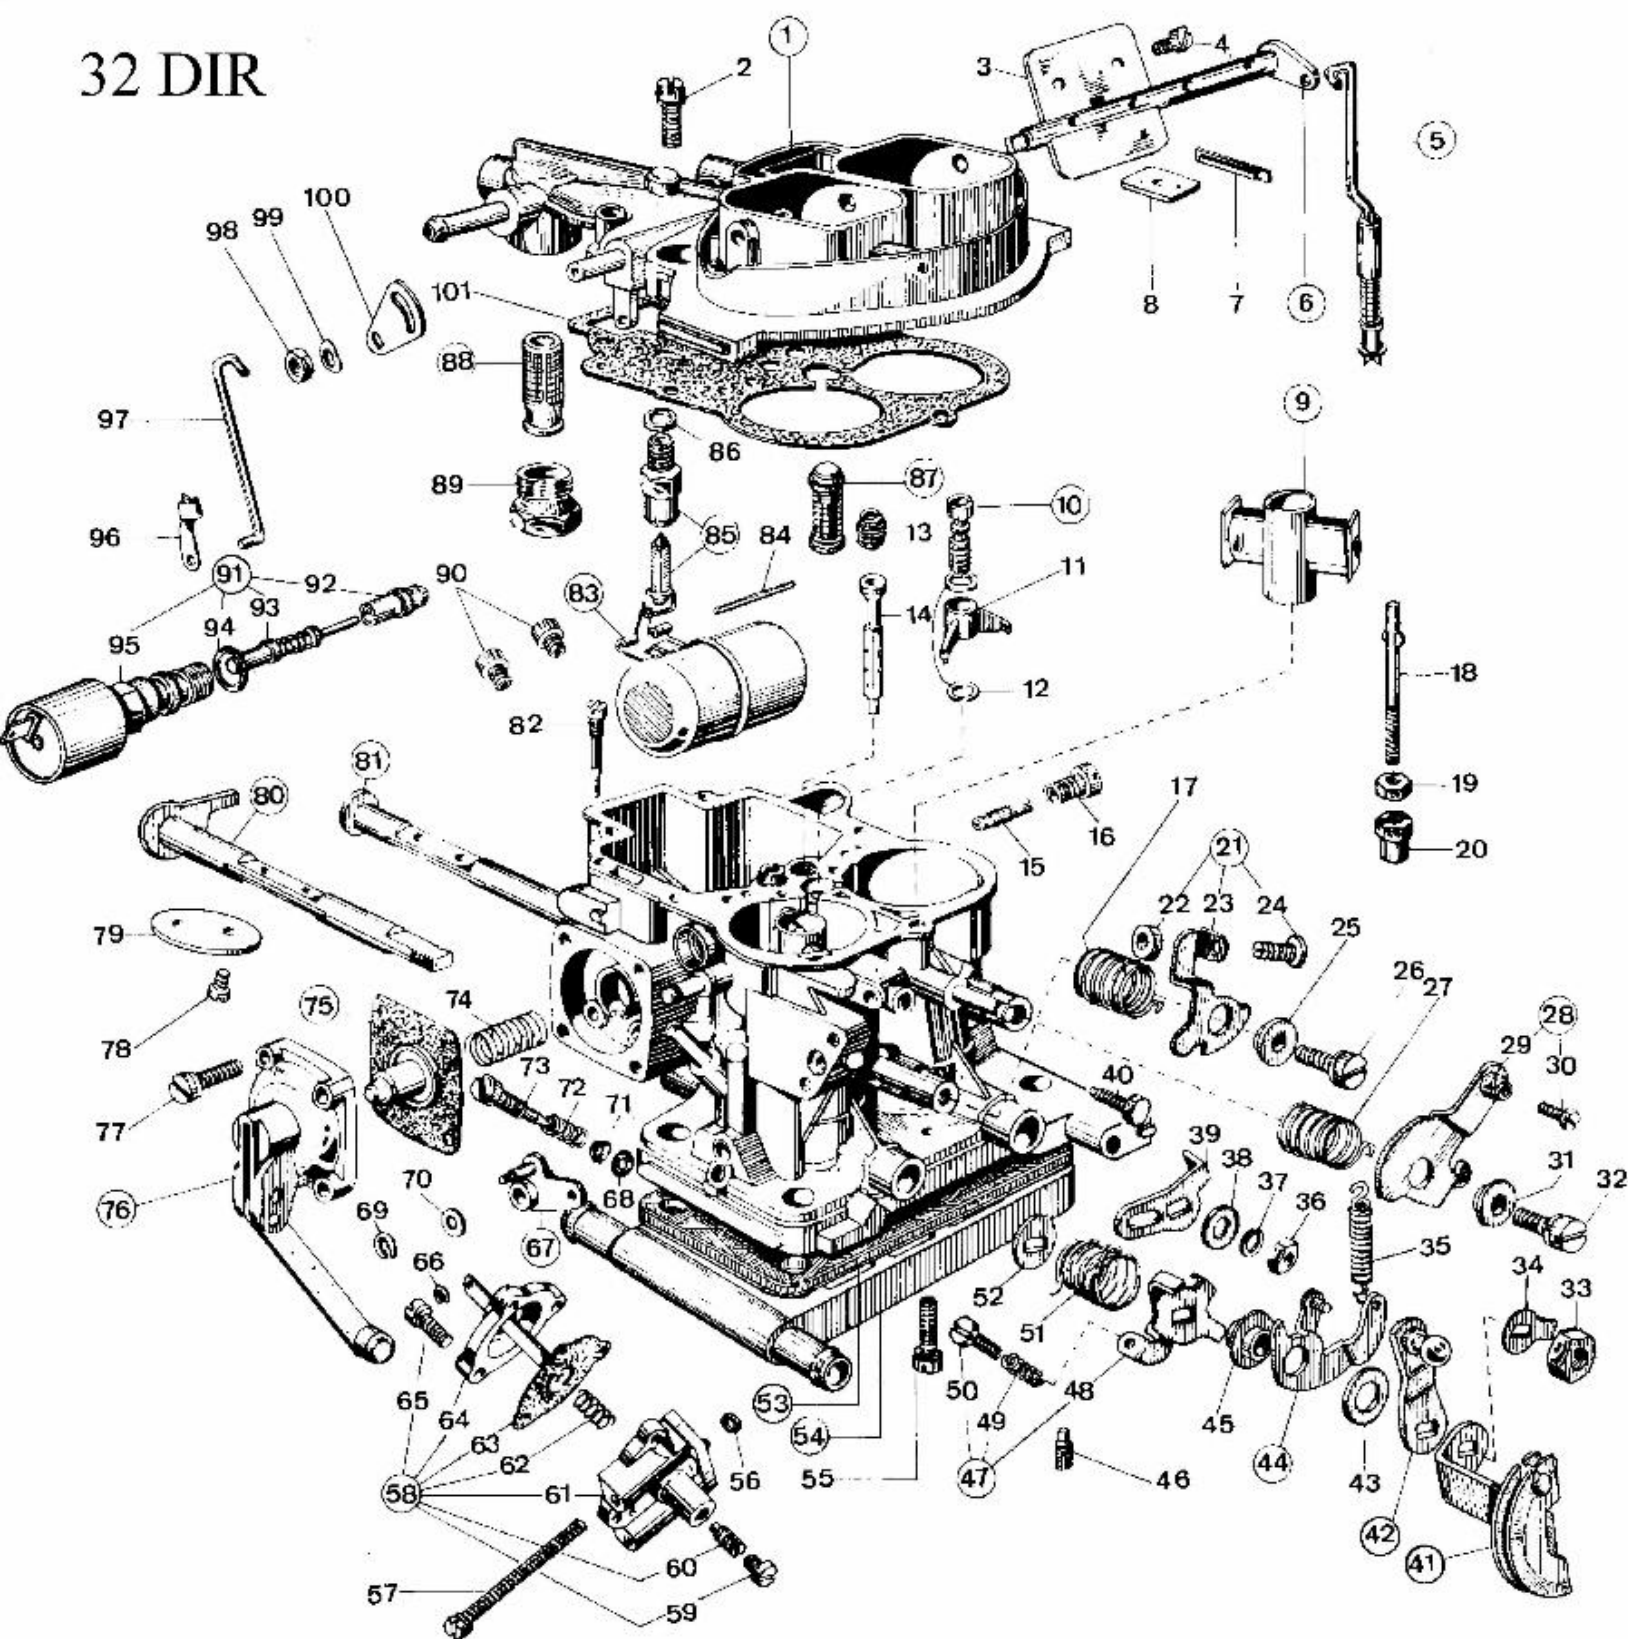

PARTS LIST


TYPE 32 DIR

Dia No.	Qty. Req'd	Description	Part Number		Dia No.	Qty. Req'd	Description	Part Number
1	1	Top Cover	31716.185		51	1	Spring	47610.012
2	5	Top Cover Fixing Screw	64700.005		52	1	Shaft Spacer	55555.001
3	2	Choke Plate	64010.006		53	1	Base Spacer Gasket	39152.014
4	4	Choke Plate Fixing Screw	64525.003		54	1	Heated Base	39166.001
5	1	Choke Rod	61287.012		55	1	Screw	64695.021
6	1	Choke Shaft	10020.215		56	1	O-Ring	41565.008
7	2	Dust Seal Plug	61070.002		57	2	Screw	64700.020
8	2	Dust Seal Plate	52135.010		58	1	Cold Start Unit - <i>Including</i>	57804.065
9	2	Auxiliary Venturi	71120.350		59	1	- <i>Plug</i>	61015.003
10	1	Valve	64290.015		60	1	- <i>Screw</i>	64595.005
11	1	Pump Jet	76227*		61	1	- <i>Starting Device</i>	57804.023
12	2	Pump Jet Gasket	41540.014		62	1	- <i>Spring</i>	47600.003
13	2	Air Corrector Jet	77201.*		63	1	- <i>Diaphragm</i>	47407.065
14	2	Emulsion Tube	61440.*		64	1	- <i>Cold Start Cover</i>	32382.011
15	1	Idle Jet	74403.*		65	3	- <i>Fixing Screw</i>	64700.004
16	1	Idle Jet Holder	52570.005		66	1	Spring Ring	10140.501
17	1	Spring	47610.056		67	1	Lever	45027.114
18	1	Rod	61285.025		68	1	O-Ring	41565.002
19	1	Nut	34705.002		69	1	Clip	10140.502
20	1	Screw	64905.001		70	1	Washer	55510.034
21	1	Lever Assembly - <i>Including</i>	45138.012		71	1	Cup Washer	58000.006
22	1	- <i>Nut</i>	34715.006		72	1	Spring	47600.007
23	1	- <i>Lever</i>	45136.056		73	1	Mixture Screw	64750.042
24	1	- <i>Screw</i>	64595.009		74	1	Accelerator Pump Spring	47600.107
25	1	Bushing	12775.058		75	1	Pump Diaphragm	47407.261
26	1	Lever Fixing Screw	64700.012		76	1	Accelerator Pump Cover	32486.019
27	1	Spring	47610.056		77	4	Fixing Screw	64700.004
28	1	Lever Assembly - <i>Including</i>	45202.085		78	4	Fixing Screw	64520.023
29	1	- <i>Lever</i>	45202.084		79	2	Throttle Valve	64005.090
30	1	- <i>Screw</i>	64615.004		80	1	Primary Throttle Shaft	10015.505
31	1	Bushing	12775.057		81	1	Secondary Throttle Shaft	10015.479
32	1	Lever Fixing Screw	64700.012		82	1	Pump Discharge Blanking Needle	64900.001
33	1	Throttle Shaft Fixing Nut	34715.014		83	1	Brass Float	41015.004
34	1	Shaft Lock Tab	55520.002		84	1	Float Pin	52000.015
35	1	Spring	47605.034		85	1	Needle & Seat	79510.*
36	1	Fixing Nut	34705.001		86	1	Needle Valve Gasket	83102.070
37	1	Spring Washer	55525.001		87	1	Valve	Not Available
38	1	Washer For Loose Lever	55510.046		88	1	Fuel Filter	37022.010
39	1	Lever	45032.013		89	1	Strainer Inspection Plug	61002.018
40	1	Choke Cable Clamp	64605.017		90	2	Main Jet	73801.*
41	1	Carb Lever	45041.089		91	1	Idle Cut Off Solenoid Unit - <i>Including</i>	43840.001
42	1	Lever	45027.112		92	1	- <i>Idle Jet</i>	74407.*
43	1	Washer For Loose Lever	55510.061		93	1	- <i>Needle</i>	52352.001
44	1	Lever	45069.021		94	1	- <i>Gasket</i>	41565.013
45	1	Spacer Bushing	12765.002		95	1	- <i>Idle Cut Off</i>	43846.001
46	1	Screw For Secondary Throttle	64595.005		96	1	Spring	47670.008
47	1	Lever Assembly - <i>Including</i>	45138.011		97	1	Rod	61280.094
48	1	- <i>Lever</i>	45136.055		98	1	Nut	34715.006
49	1	- <i>Spring</i>	47600.007		99	1	Washer	55530.007
50	1	- <i>Screw</i>	64625.006		100	1	Lever	45129.012
		*Calibrated Parts Require 3 Digits To			101	1	Top Cover Gasket	41705.028
		Complete Part Number						
		See Calibrated Parts Section For Sizes						

34 DMTR 21/200

PART NUMBER:

18890.062

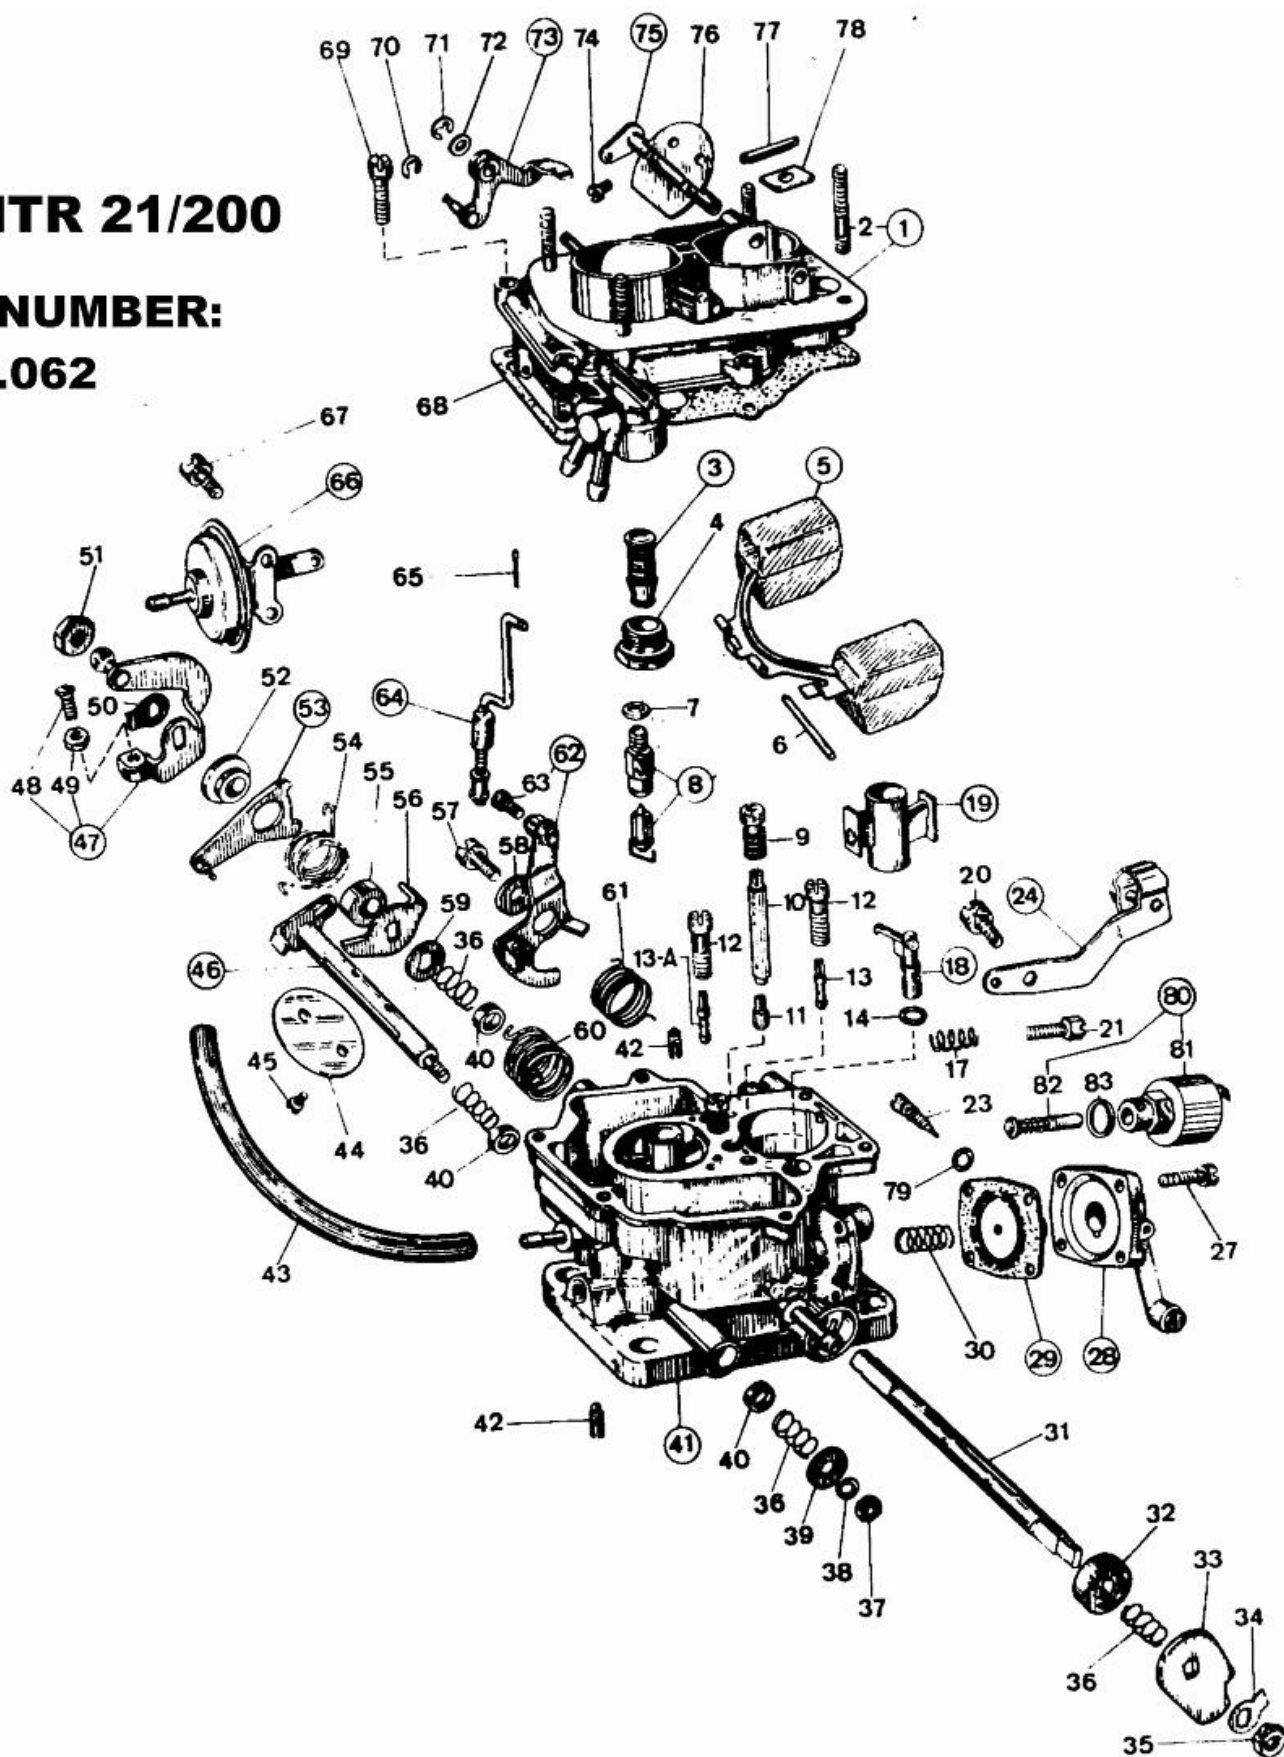


PARTS LIST

TYPE 34 DMTR 21/200

Dia No.	Qty. Req'd	Description	Part Number		Dia No.	Qty. Req'd	Description	Part Number
1	1	Carburetor Top –Including	Not available		44	2	Throttle Plate	64005.018
2	4	-5 Mm Stud 38 Mm Long	64955.004		45	4	Throttle Plate Screw	64520.027
3	1	Fuel Filter	37022.010		46	1	Secondary Throttle Shaft	10015.255
4	1	Fuel Filter Inspection Plug	61002.018		46	1	Secondary Throttle Shaft Oversized	10016.207
5	1	Float – Plastic	41030.012		47	1	Throttle Lever	45041.071
6	1	Float Pin	52000.036		48	1	Screw	64595.009
7	1	Needle Valve Gasket	83102.070		49	1	Nut	34715.006
8	1	Needle & Seat	79507.*		50	1	Shaft Nut Lock Tab	55520.002
9	2	Air Corrector Jet	77501.*		51	1	Shaft Nut	34715.014
10	2	Emulsion Tube	61450.*		52	1	Bushing	12775.053
11	2	Main Jet	73405.*		53	1	Loose Lever	45069.015
12	2	Idle Jet Holder	52570.004		54	1	Spring	47610.092
13	2	Idle Jet	74403.*		55	1	Bushing	12750.087
14	1	Pump Jet O-Ring	41565.001		56	1	Primary Throttle Stop Lever	Not available
17	1	Idle Speed Screw Spring	47600.007		57	1	Lever Fixing Screw	64700.012
18	1	Pump Jet	76407.*		58	1	Washer	55510.002
19	2	Auxiliary Venturi	71115.*		59	1	Shaft Spacer	55555.019
20	1	Lever Fixing Screw	64700.012		60	1	Spring	47610.091
21	1	Throttle Stop Screw	64625.012		61	1	Choke Lever Spring	47610.058
23	1	Mixture Screw	64750.044		62	1	Choke Lever –Including	45202.091
24	1	Choke Cable Bracket	Not available		63	1	-Choke Cable Fixing Screw	64615.004
27	4	Pump Cover Fixing Screw	64700.006		64	1	Choke Rod	61287.009
28	1	Pump Cover	Not available		65	1	Split Pin	32610.005
29	1	Accelerator Pump Diaphragm	47407.249		66	1	Carb Capsule	57804.107
30	1	Accelerator Pump Spring	47600.107		67	2	Lever Fixing Screw	64700.012
31	1	Primary Throttle Shaft	10000.241		68	1	Top Cover Gasket	41705.041
31	1	Primary Throttle Shaft – Oversized	10001.209		69	6	Top Cover Fixing Screw	64700.005
32	1	Shaft Bushing	50002.008		70	1	Spring Ring	10140.501
33	1	Pump Cam	Not available		71	1	Clip	10140.502
34	1	Shaft Nut Lock Tab	55520.004		72	1	Carb Washer	55510.034
35	1	Shaft Nut	34710.003		73	1	Lever	45069.017
36	4	Bushing Retaining Spring	47600.027		74	2	Choke Plate Fixing Screw	64525.003
37	1	Fixing Nut	34705.001		75	1	Choke Rod	10015.256
38	1	Spring Washer	55525.001		76	1	Choke Plate	64010.029
39	1	Washer	Not available		77	1	Dust Seal Plug	61070.002
40	3	Shaft Retaining Bushing	12750.085		78	1	Dust Seal Plate	52135.010
41	1	Carburetor Body	Not available		79	1	O-Ring	41565.010
42	2	Set Screw	Not available		80	1	Idle Cut Off Unit Complete –Includes	43840.014
43	1	Vacuum Line	Not available		81	1	Idle Cut Off Unit	Not available
		*Calibrated Parts Require 3 Digits To			82	1	Idle Cut Off Needle	58352.010
		Complete Part Number			83	1	Idle Cut Off Gasket	41535.003
		See Calibrated Parts Section For Sizes						
	3/2/01							


34 ICH
Part Number
15290.027

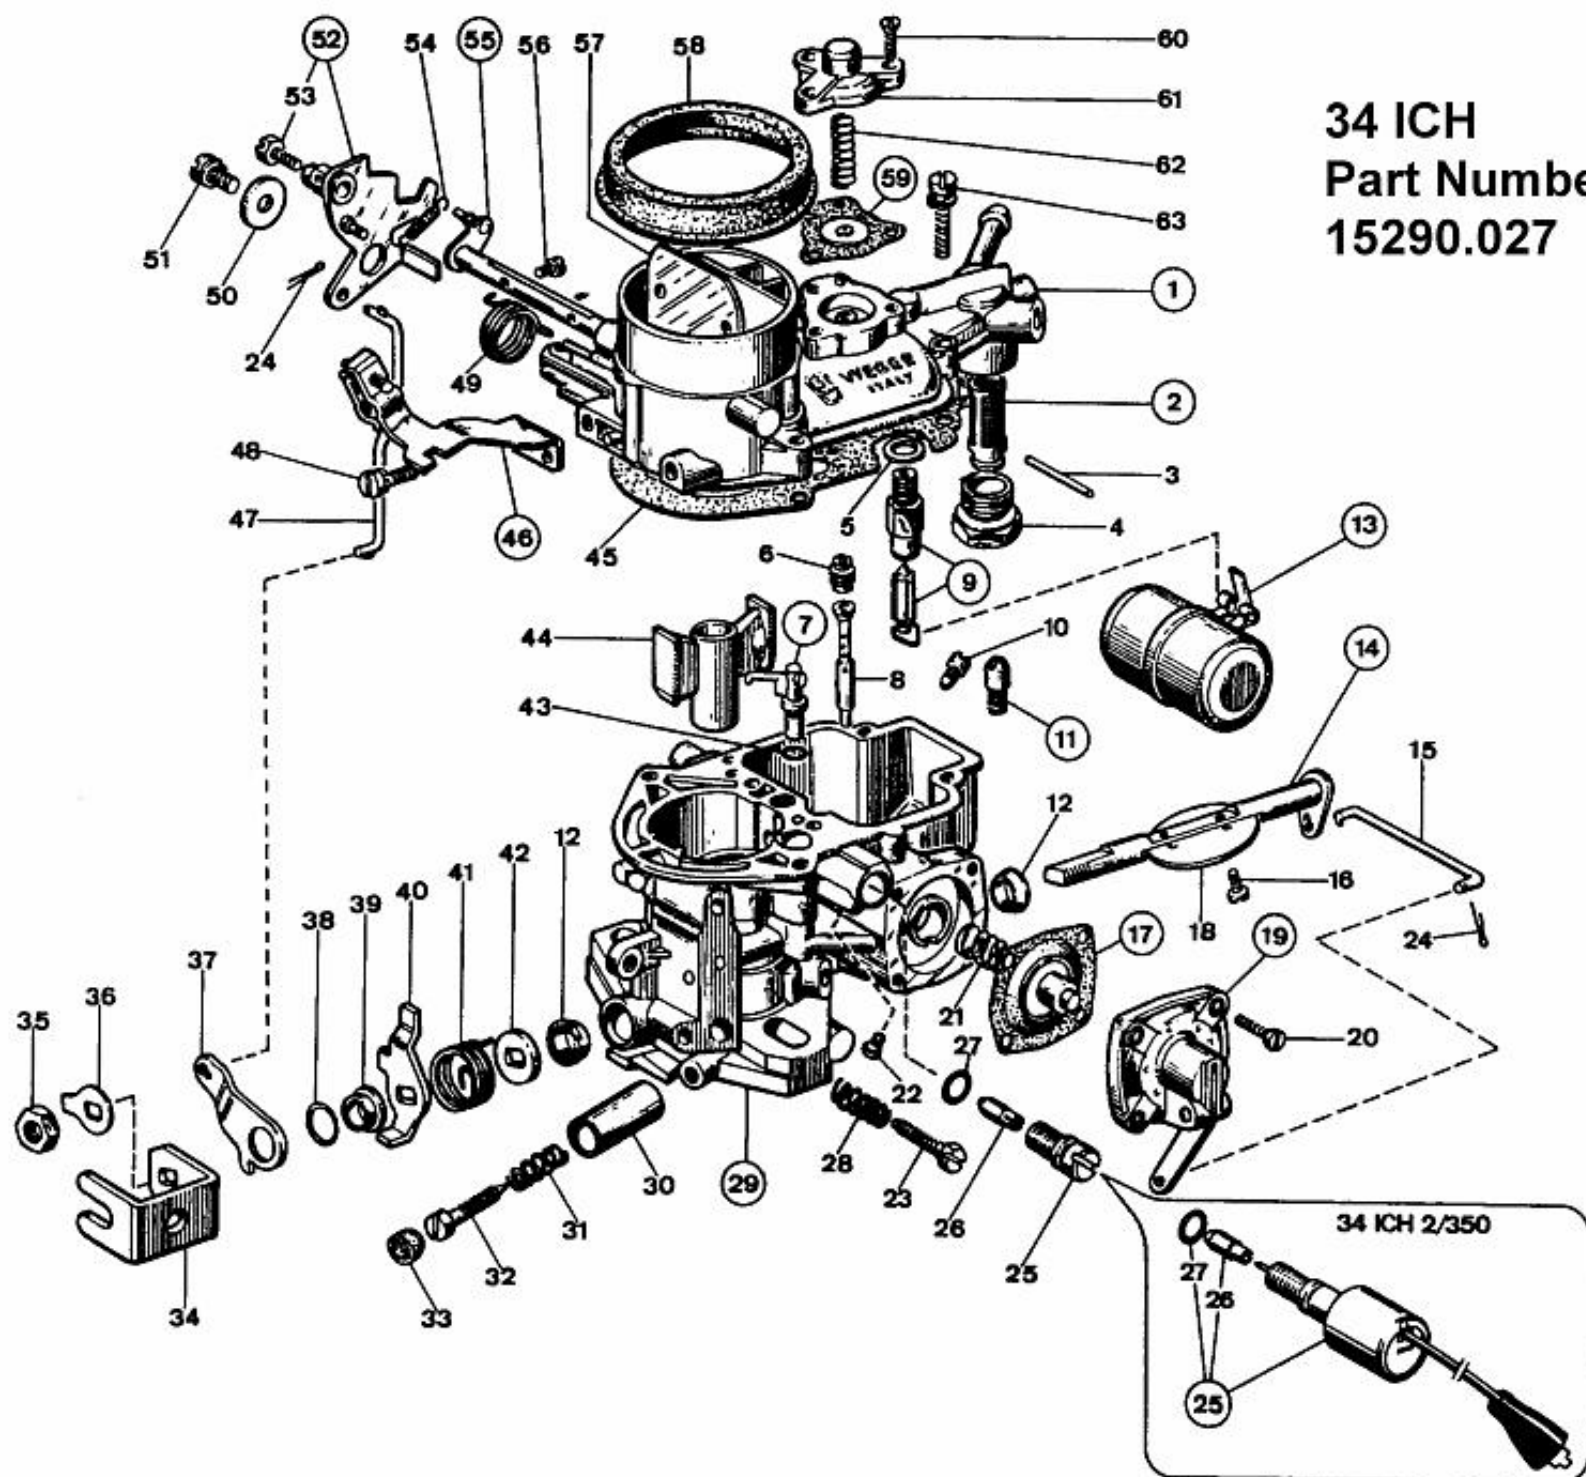

PARTS LIST

TYPE 34 ICH – PART NO. 15290.027

[illegible]

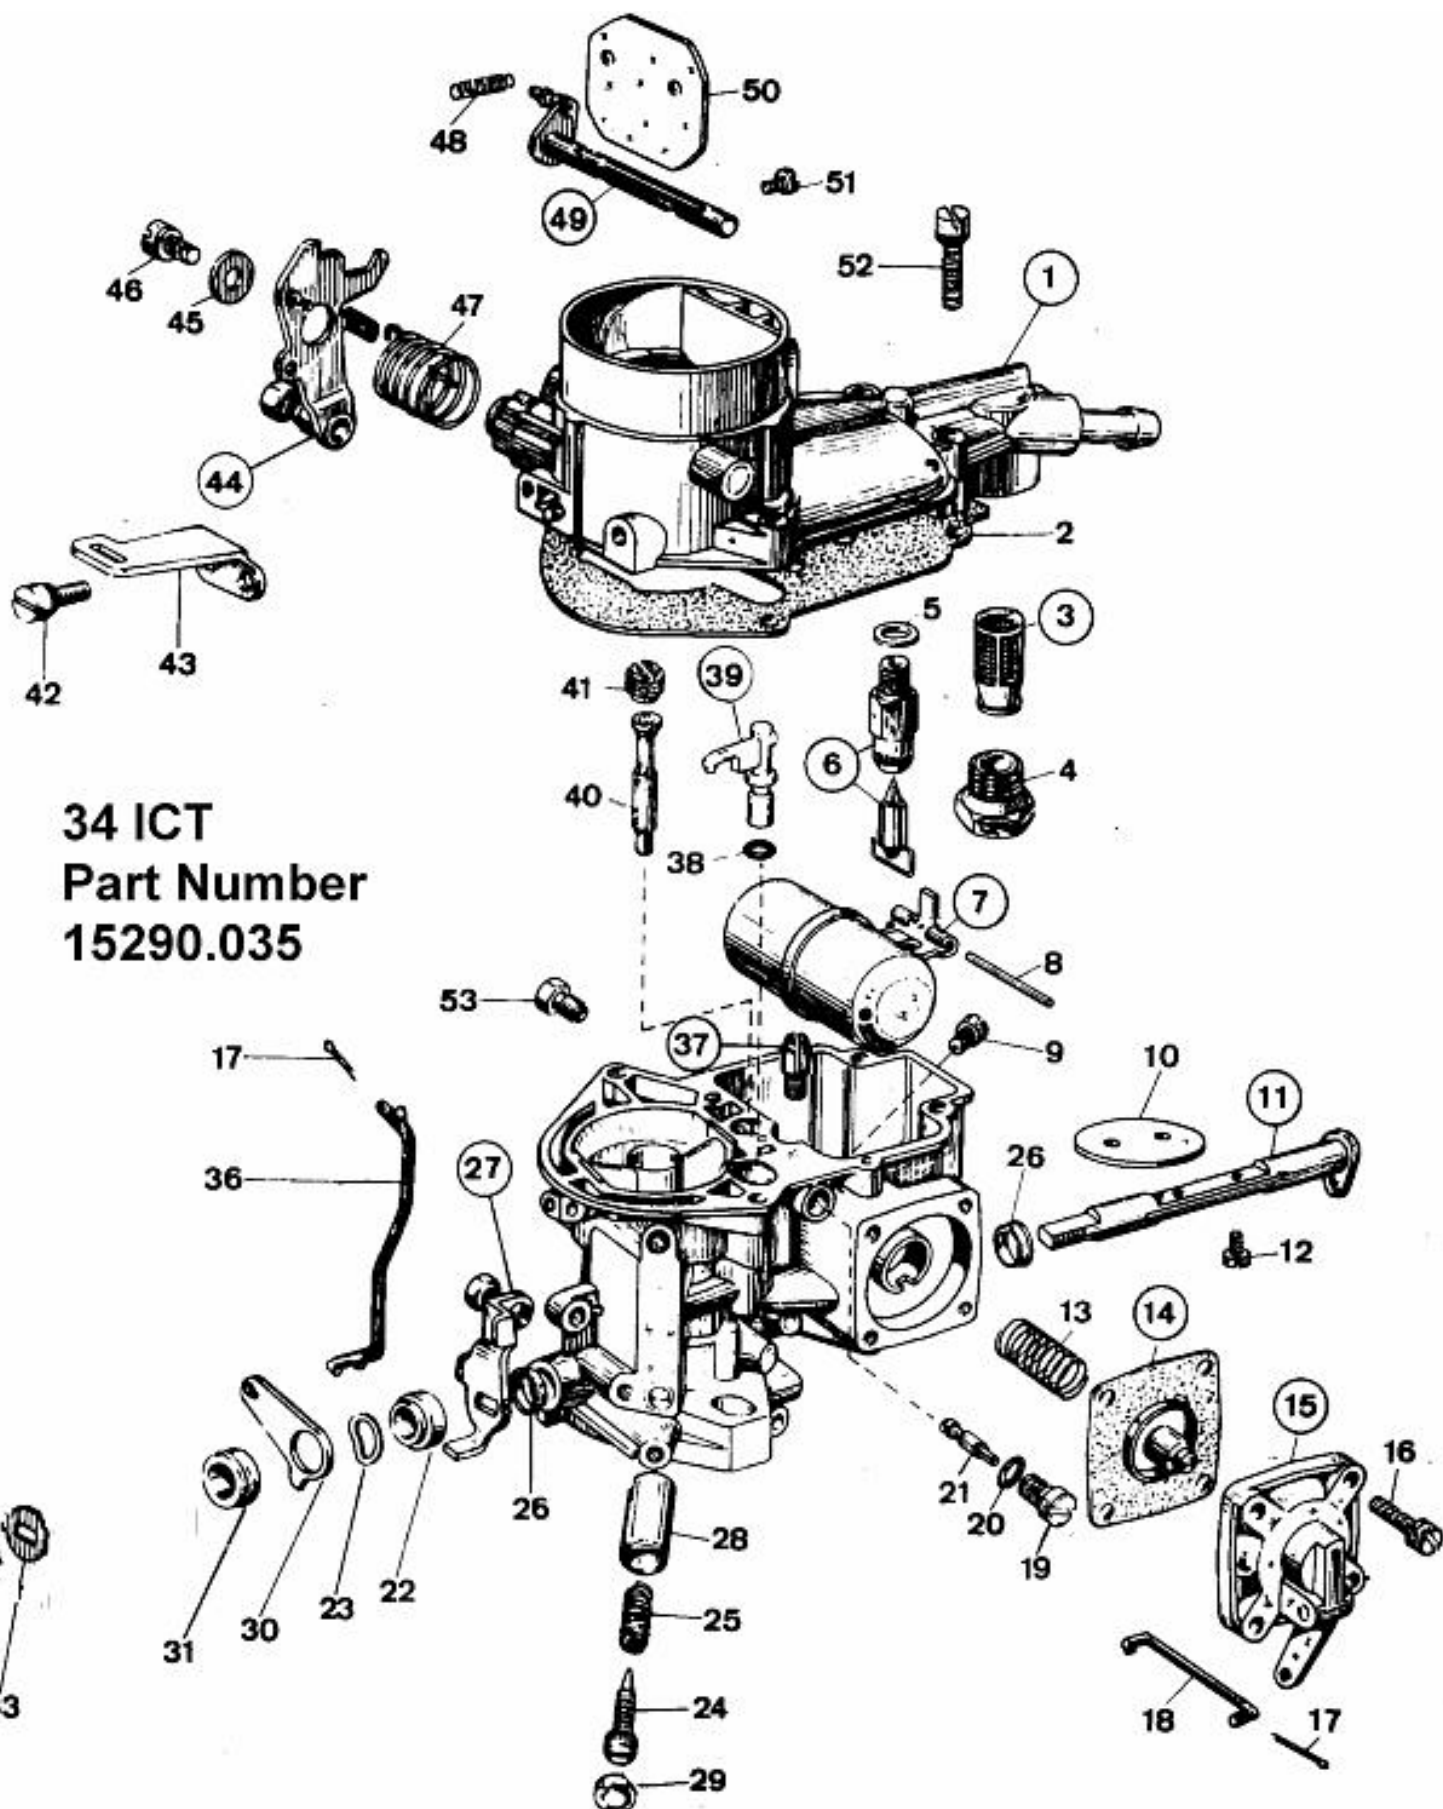


34 ICT
Part Number
15290.035

PARTS LIST


TYPE 34 ICT – PART NO. 15290.035

[illegible]

36 DCD
PART NO:
18910.007

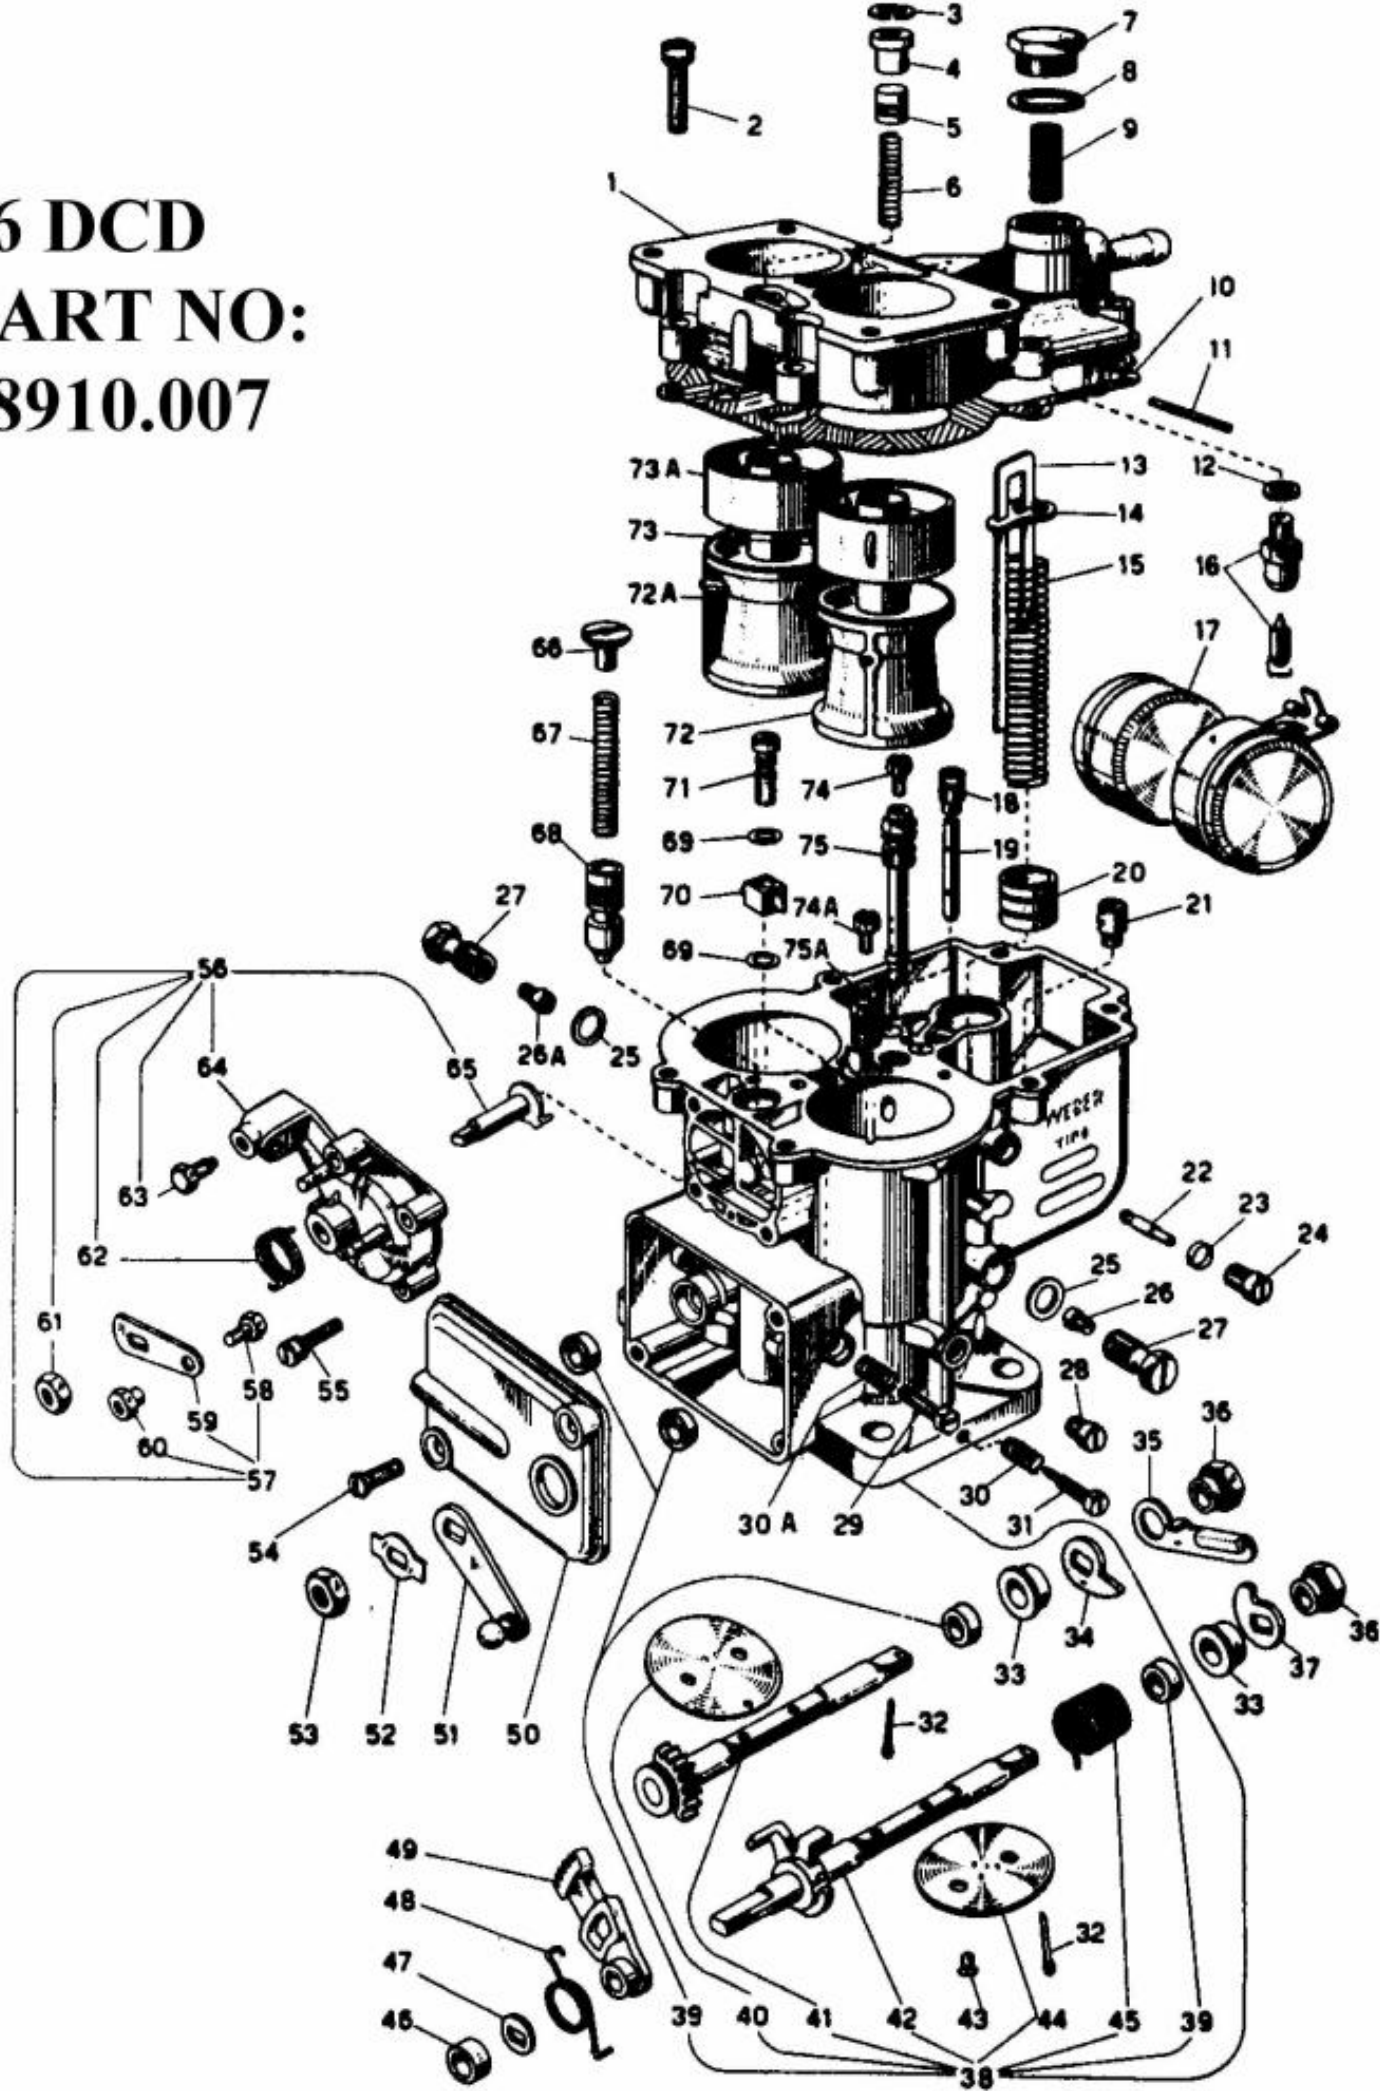


36 DCNVH
Part Number
18910.158

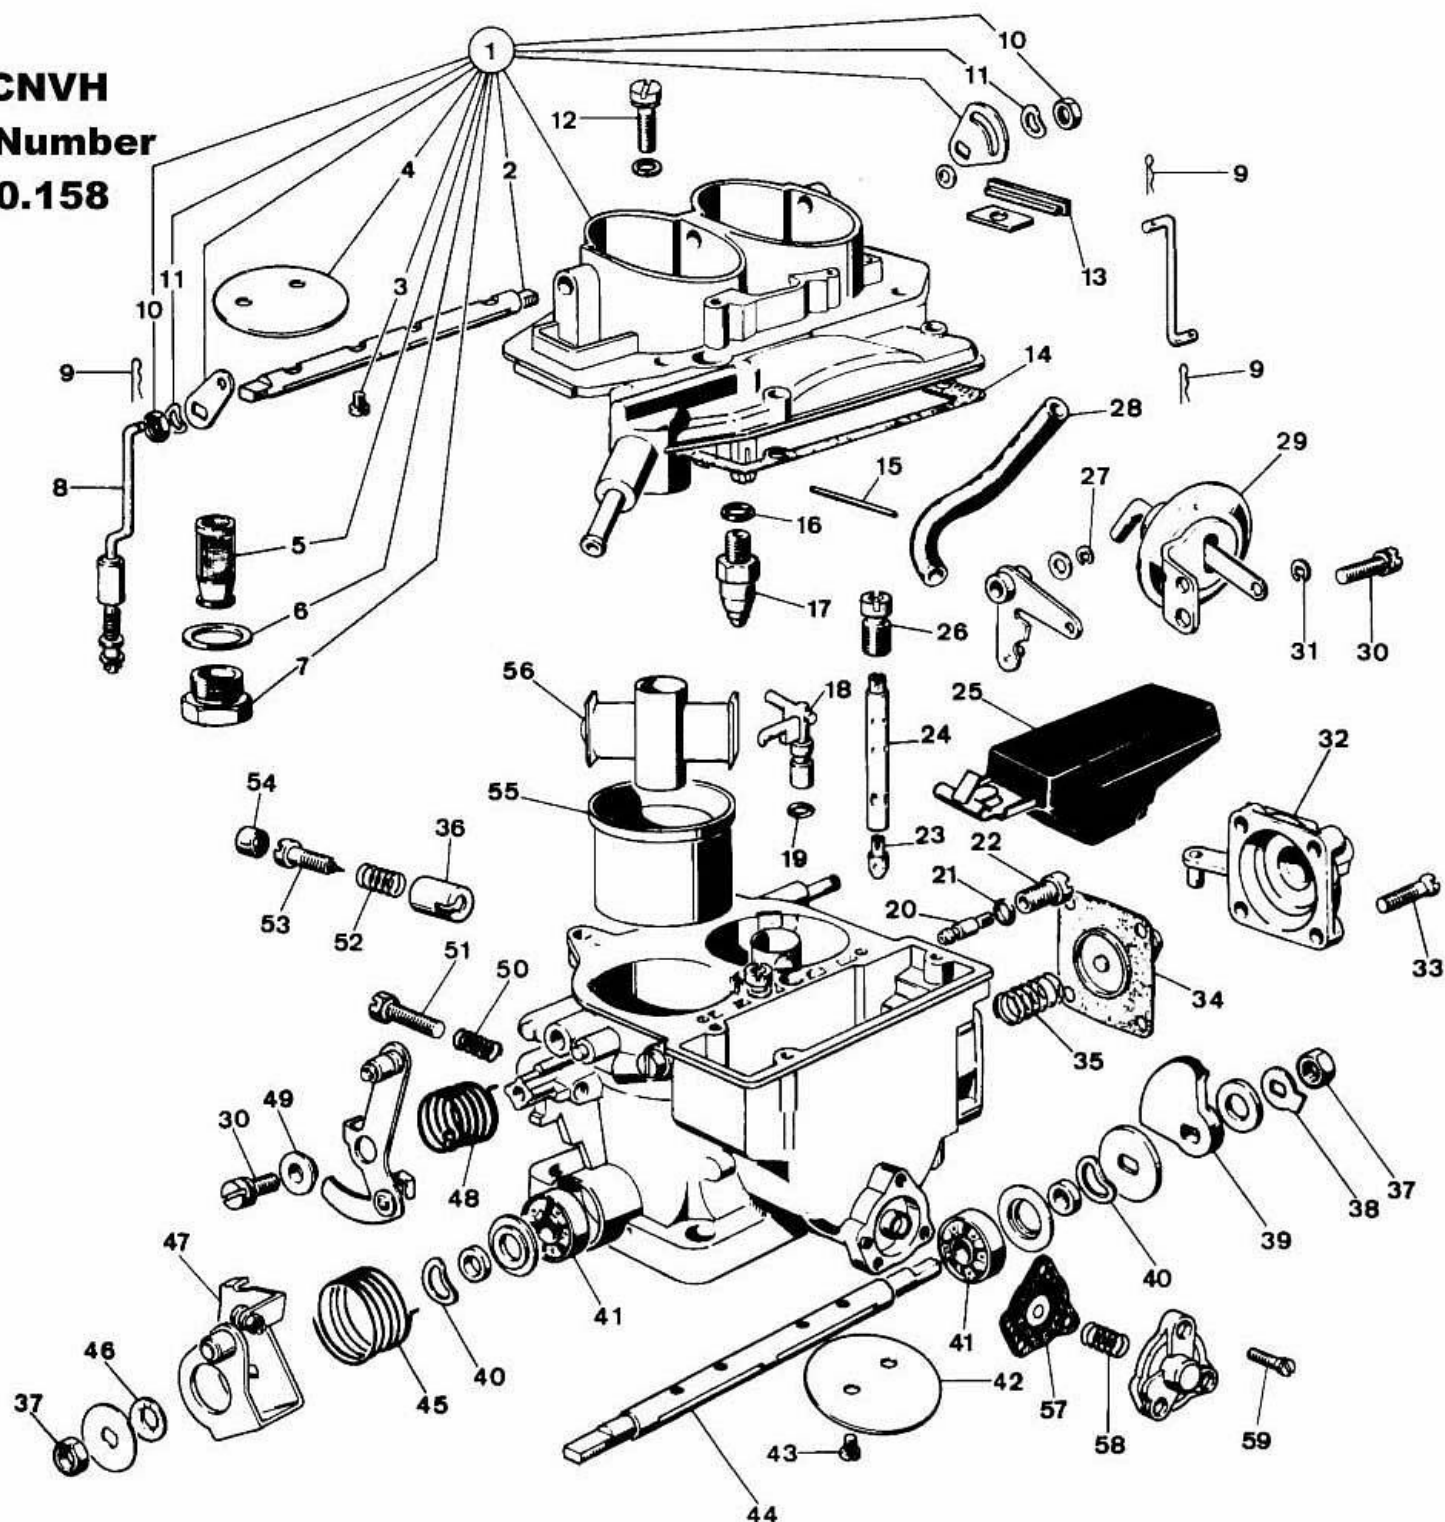

Part Number 18910.158

[illegible]

38 DCN **38 DCN 1**

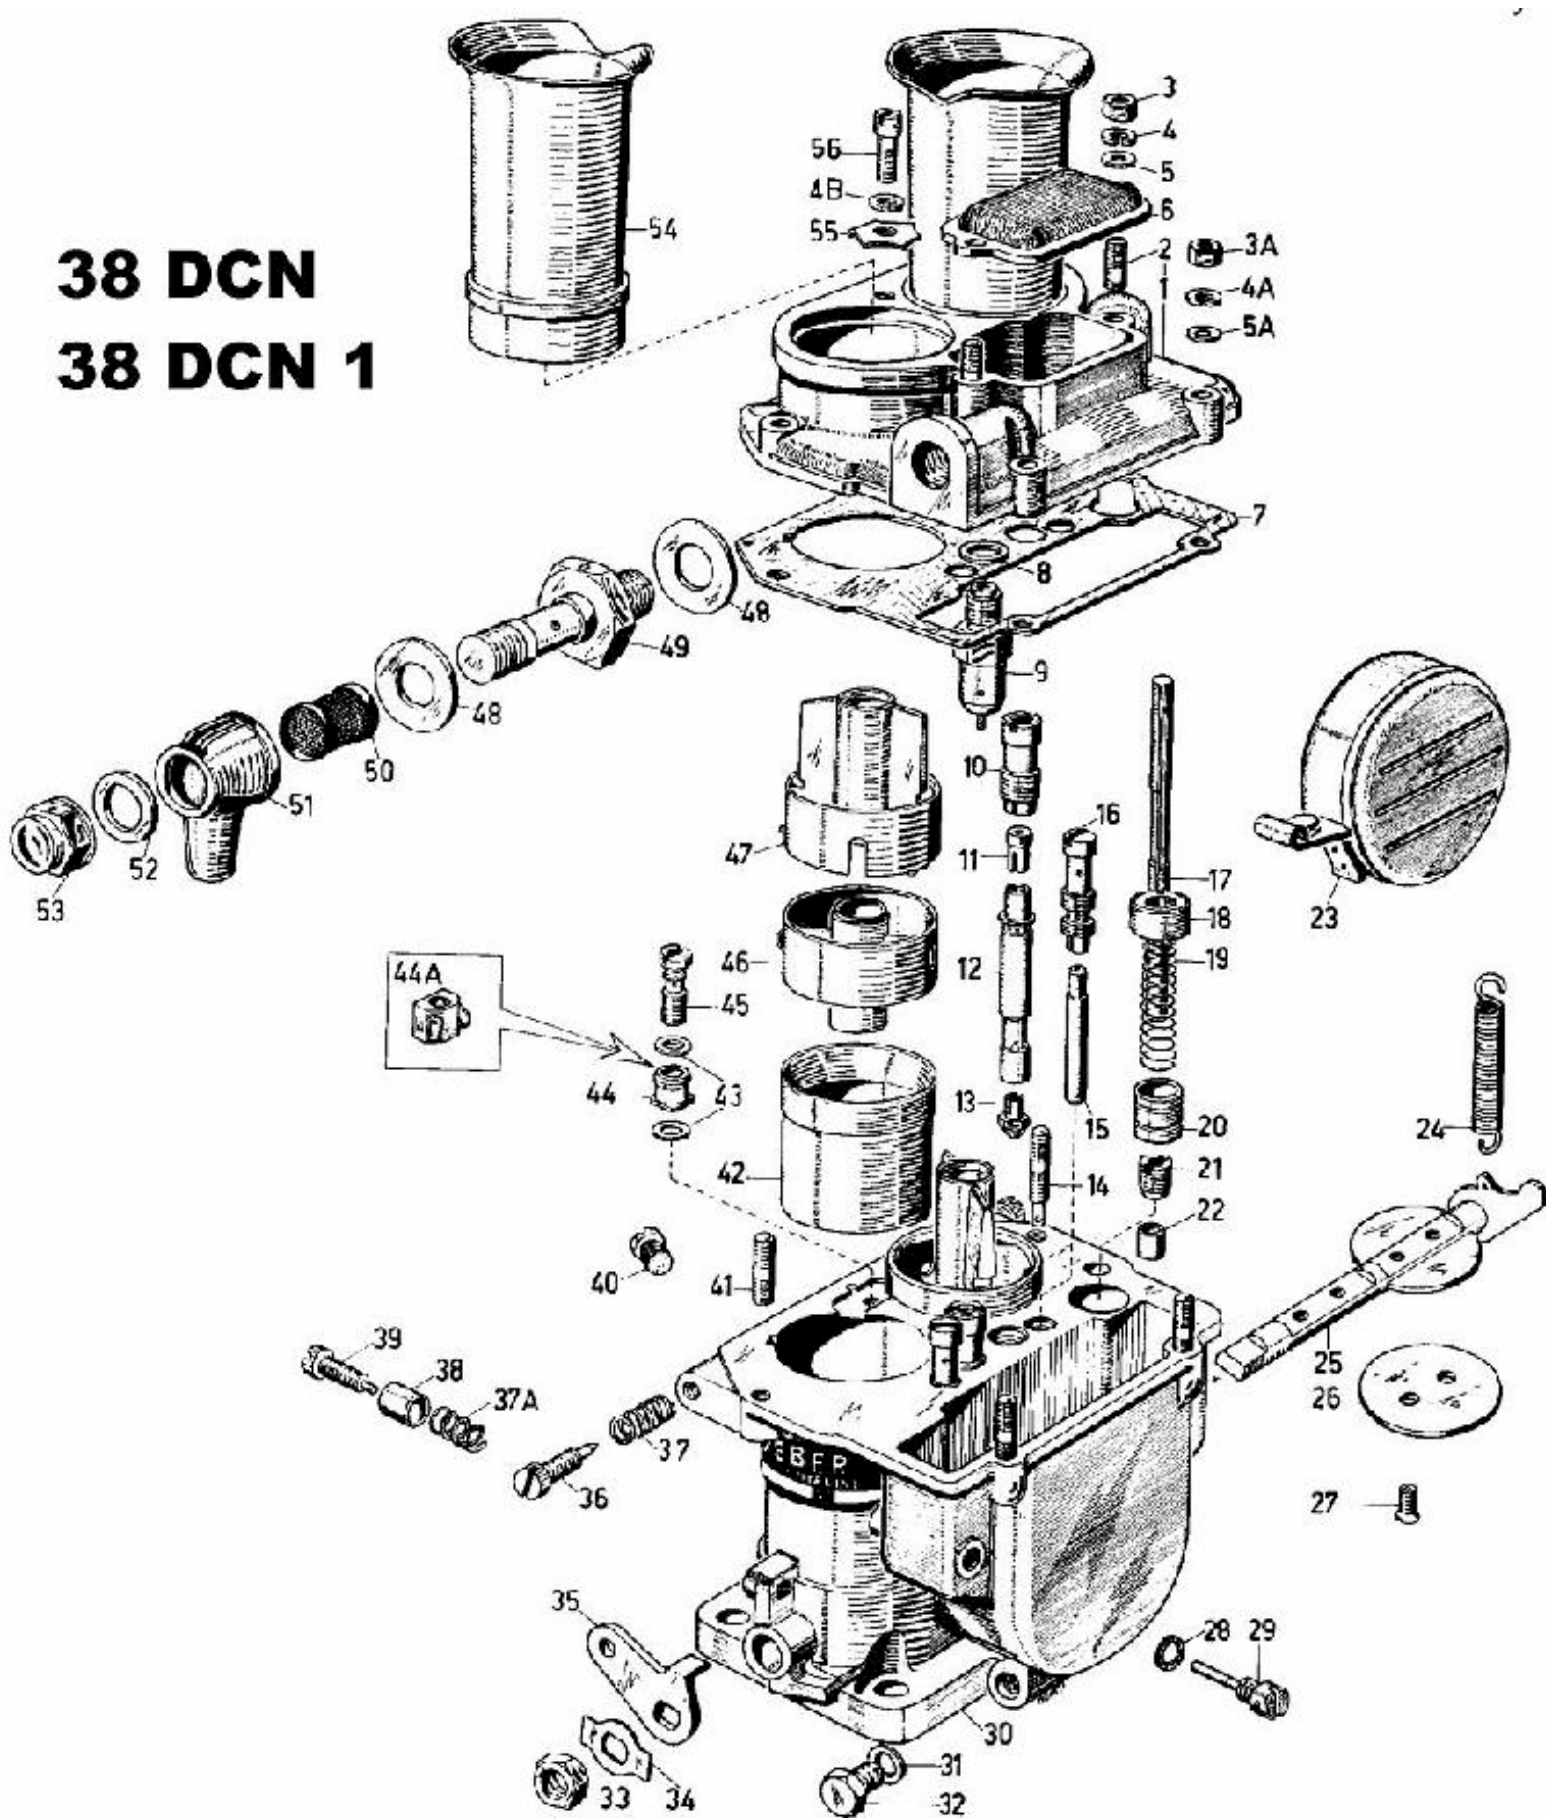


PARTS LIST

TYPE 38 DCN – DCN 1

[illegible]

38 DGAS
Part Number
18930.032

38 DGES
Part Number
18930.020

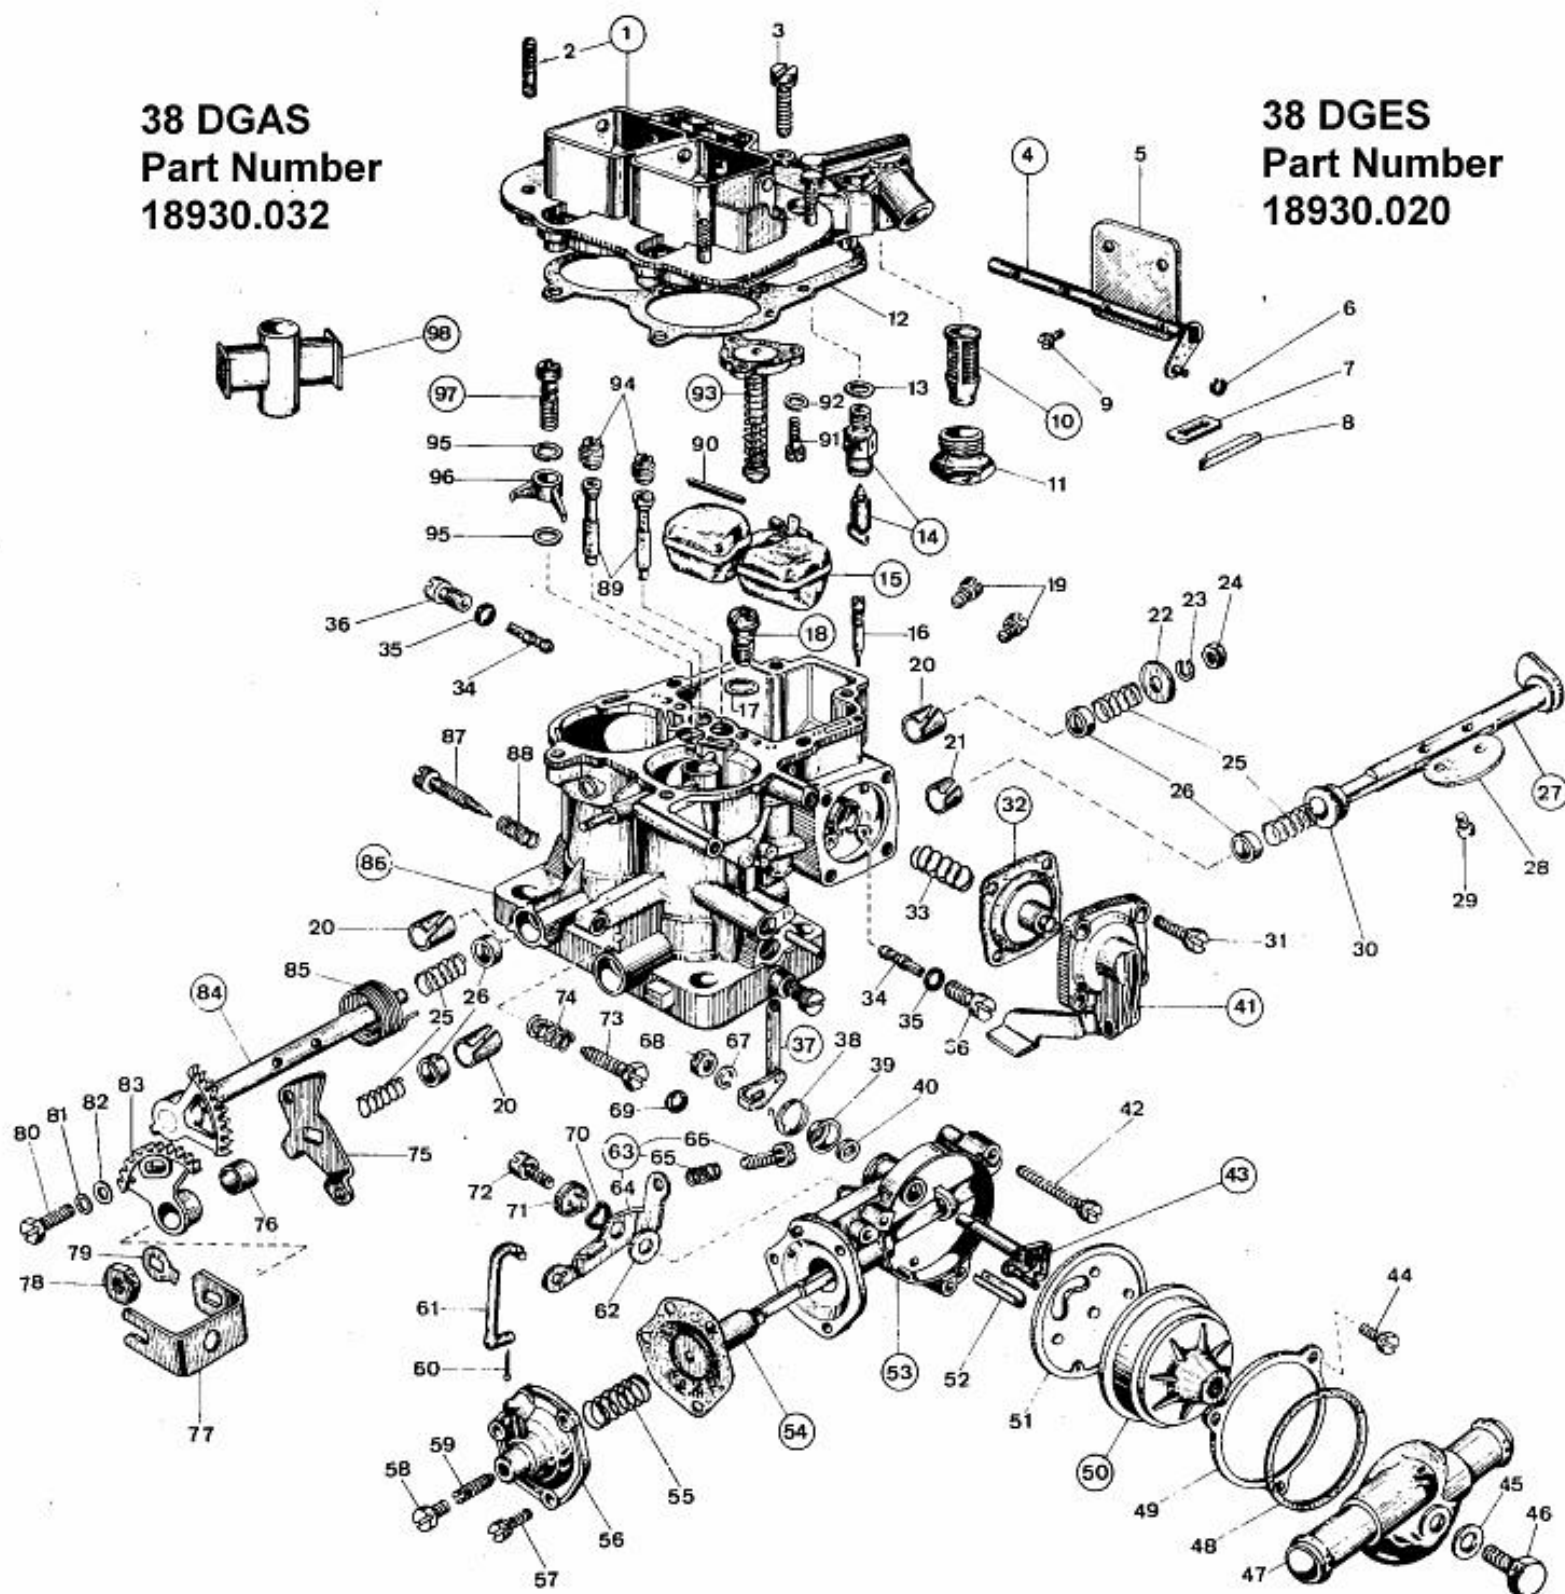


PARTS LIST

TYPE 38 DGAS – PART NO. 18930.032

TYPE 38 DGES – PART NO. 18930.020

Dia No.	Qty. Req'd	Description	Part Number		Dia No.	Qty. Req'd	Description	Part Number
1	1	Carburetor Cover Assy.	Not Serviced		51	1	Gasket For Auto Choke Body Assy	41640.005
2	4	Stud Bolt	64955.002		52	1	Plate For Auto Choke Shaft	52130.012
3	6	Carb Cover Fixing Screw	64700.001		53	1	Auto Choke Body Assy	57804.074
4	1	Choke Shaft & Lever Assy.	10020.221		54	1	Choke Diaphragm Assy	47407.056
5	2	Starting Throttle Valve	64010.007		55	1	Spring For Diaphragm	47600.141
6	1	Spring Ring	10140.501		56	1	Auto Choke Cover	32384.020
7	1	Dust Seal Plate	52135.018		57	3	Screw Securing Auto Choke Cover	64700.007
8	1	Dust Seal Plug	61070.002		58	1	Plug	61015.003
9	4	Choke Plate Fixing Screw	64525.003		59	1	Diaphragm Adjusting Screw	64595.005
10	1	Strainer Assy.	37022.010		60	1	Pin For Fast Idle Rod	32610.005
11	1	Strainer Inspection Plug	61002.018		61	1	Fast Idling Control Rod	61280.082
12	1	Carb Cover Gasket	41705.040		62	1	Washer For Fast Idle Loose Lever	55510.003
13	1	Needle Valve Gasket	83102.070		63	1	Fast Idling Loose Lever Assy <i>Including</i>	45041.053
14	1	Needle Valve Assy.	79519.*		64	1	- Lever	45039.056
15	1	Float Assy.	41030.019		65	1	-Spring	47600.007
16	1	Pump Discharge Blanking Needle	64900.001		66	1	-Screw	64590.004
17	1	Power Valve Gasket	41530.013		67	1	Spring Washer	Not Serviced
18	1	Power Valve Assembly	64235.016		68	1	Throttle Shaft Fixing Nut	Not Serviced
19	1	Main Jet	73801.*		69	1	Auto Choke 'O' Ring Seal	41565.008
20	3	Plate For Shafts	52130.010		70	1	Washer For Loose Lever	55530.005
21	1	Plate For Shafts	52130.011		71	1	Bushing For Fast Idle Loose Lever	12765.042
22	1	Washer For Secondary Shaft	55510.081		72	1	Fast Idle Loose Lever Screw	64700.014
23	1	Spring Washer	55525.001		73	1	Throttle Adjusting Screw	64625.017
24	1	Secondary Shaft Fixing Nut	34705.001		74	1	Spring For Throttle Adjusting Screw	47600.007
25	4	Bush Retaining Spring	47600.027		75	1	Toothed Sector Control Lever	45046.023
26	4	Bushing For Shafts	12750.085		76	1	Bushing For Toothed Sector	12750.092
27	1	Primary Main Shaft Assembly	10015.270		77	1	Throttle Control Lever	45136.029
28	1	Throttle Valve	64005.015		78	1	Primary Shaft Fixing Nut	34715.014
29	4	Throttle Valve Fixing Screw	64520.027		79	1	Lock Washer	55520.002
30	4	Spacer	12765.047		80	1	Toothed Sector Fixing Screw	Not Serviced
31	1	Pump Cover Screw	64700.006		81	1	Wave Washer	55535.001
32	1	Accelerator Pump Diaphragm Assy.	47407.249		82	1	Flat Washer	Not Serviced
33	1	Pump Loading Spring	47600.107		83	1	Primary Toothed Sector	58202.024
34	2	Idling Jet	74403.		84	1	Secondary Main Shaft Assembly	10015.354
35	2	Gasket For Idling Jet Holder	41565.002		85	1	Shaft Return Spring	47610.089
36	2	Idling Jet Holder	52570.006		86	1	Carburetor Body	Not Serviced
37	1	Choke Control Lever Assembly	45034.090		87	2	Idle Adjusting Screw	64750.001
38	1	Spring For Fast Idle Cam	47610.080		88	2	Spring For Idle Adjusting Screw	47600.007
39	1	Spring Retaining Cover	58000.018		89	2	Emulsion Tube	61440.*
40	1	Washer For Shaft	55555.029		90	1	Float Fixing Pin	52000.015
41	1	Accel. Pump Cover Assy.	32486.076		91	3	Power Valve Retaining Screw	64700.007
42	3	Choke Fixing Screw	64700.008		92	3	Washer For Control Valve Screw	55510.038
43	1	Auto Choke Shaft & Lever Assy	10085.033		93	1	Carb Power Valve Assy	57804.025
44	3	Screw For Plate	64615.005		94	1	Air Corrector Jet	77201.*
45	1	Seal For Water Cover Fixing Screw	41530.002		95	2	Pump Jet Gasket	41540.014
46	1	Water Cover Fixing Screw	64610.014		96	1	Accelerator Pump Jet	76212.*
47	1	Auto Choke Water Chamber	32444.005		97	1	Pump Delivery Valve Assy.	64290.024
48	1	Water Cover Gasket	41555.001		98	2	Auxiliary Venturi	70936.450
49	1	Thermostat Assy Locking Ring	52135.006		99	1	Choke Device 37-43,52-59,67,68	57804.509
50	1	Auto Choke Thermostat Assy	57804.139				*Calibrated Parts Require 3 Digits To	
50a	1	Electric Choke Element	57804.333				Complete Part Number.	
							See Calibrated Parts Section For Sizes	

40 DCN

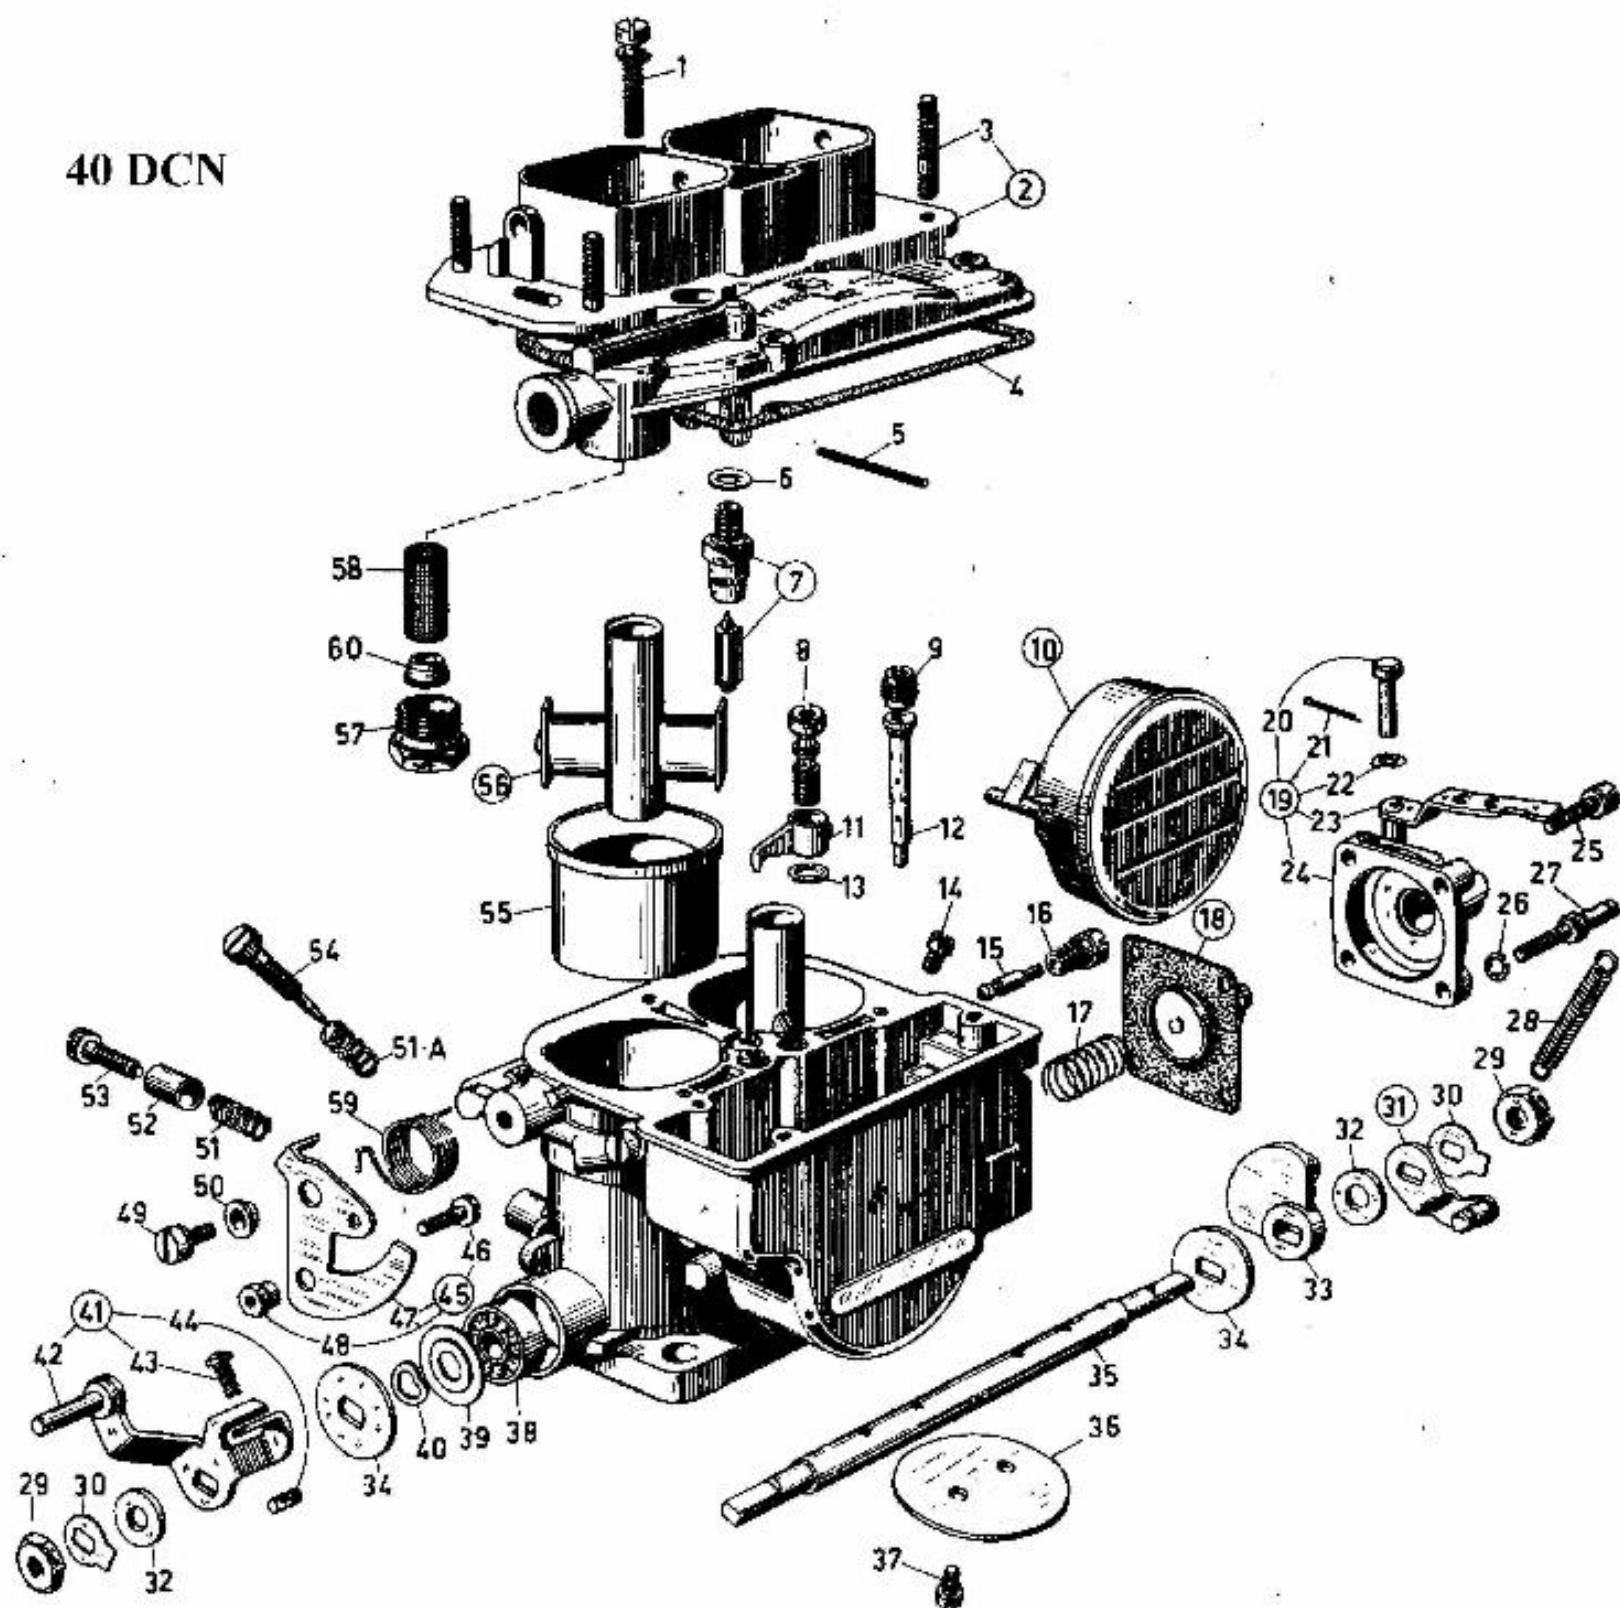


PARTS LIST

TYPE 40 DCN

[illegible]

40 DCNF 12
Part Number:
18950.060

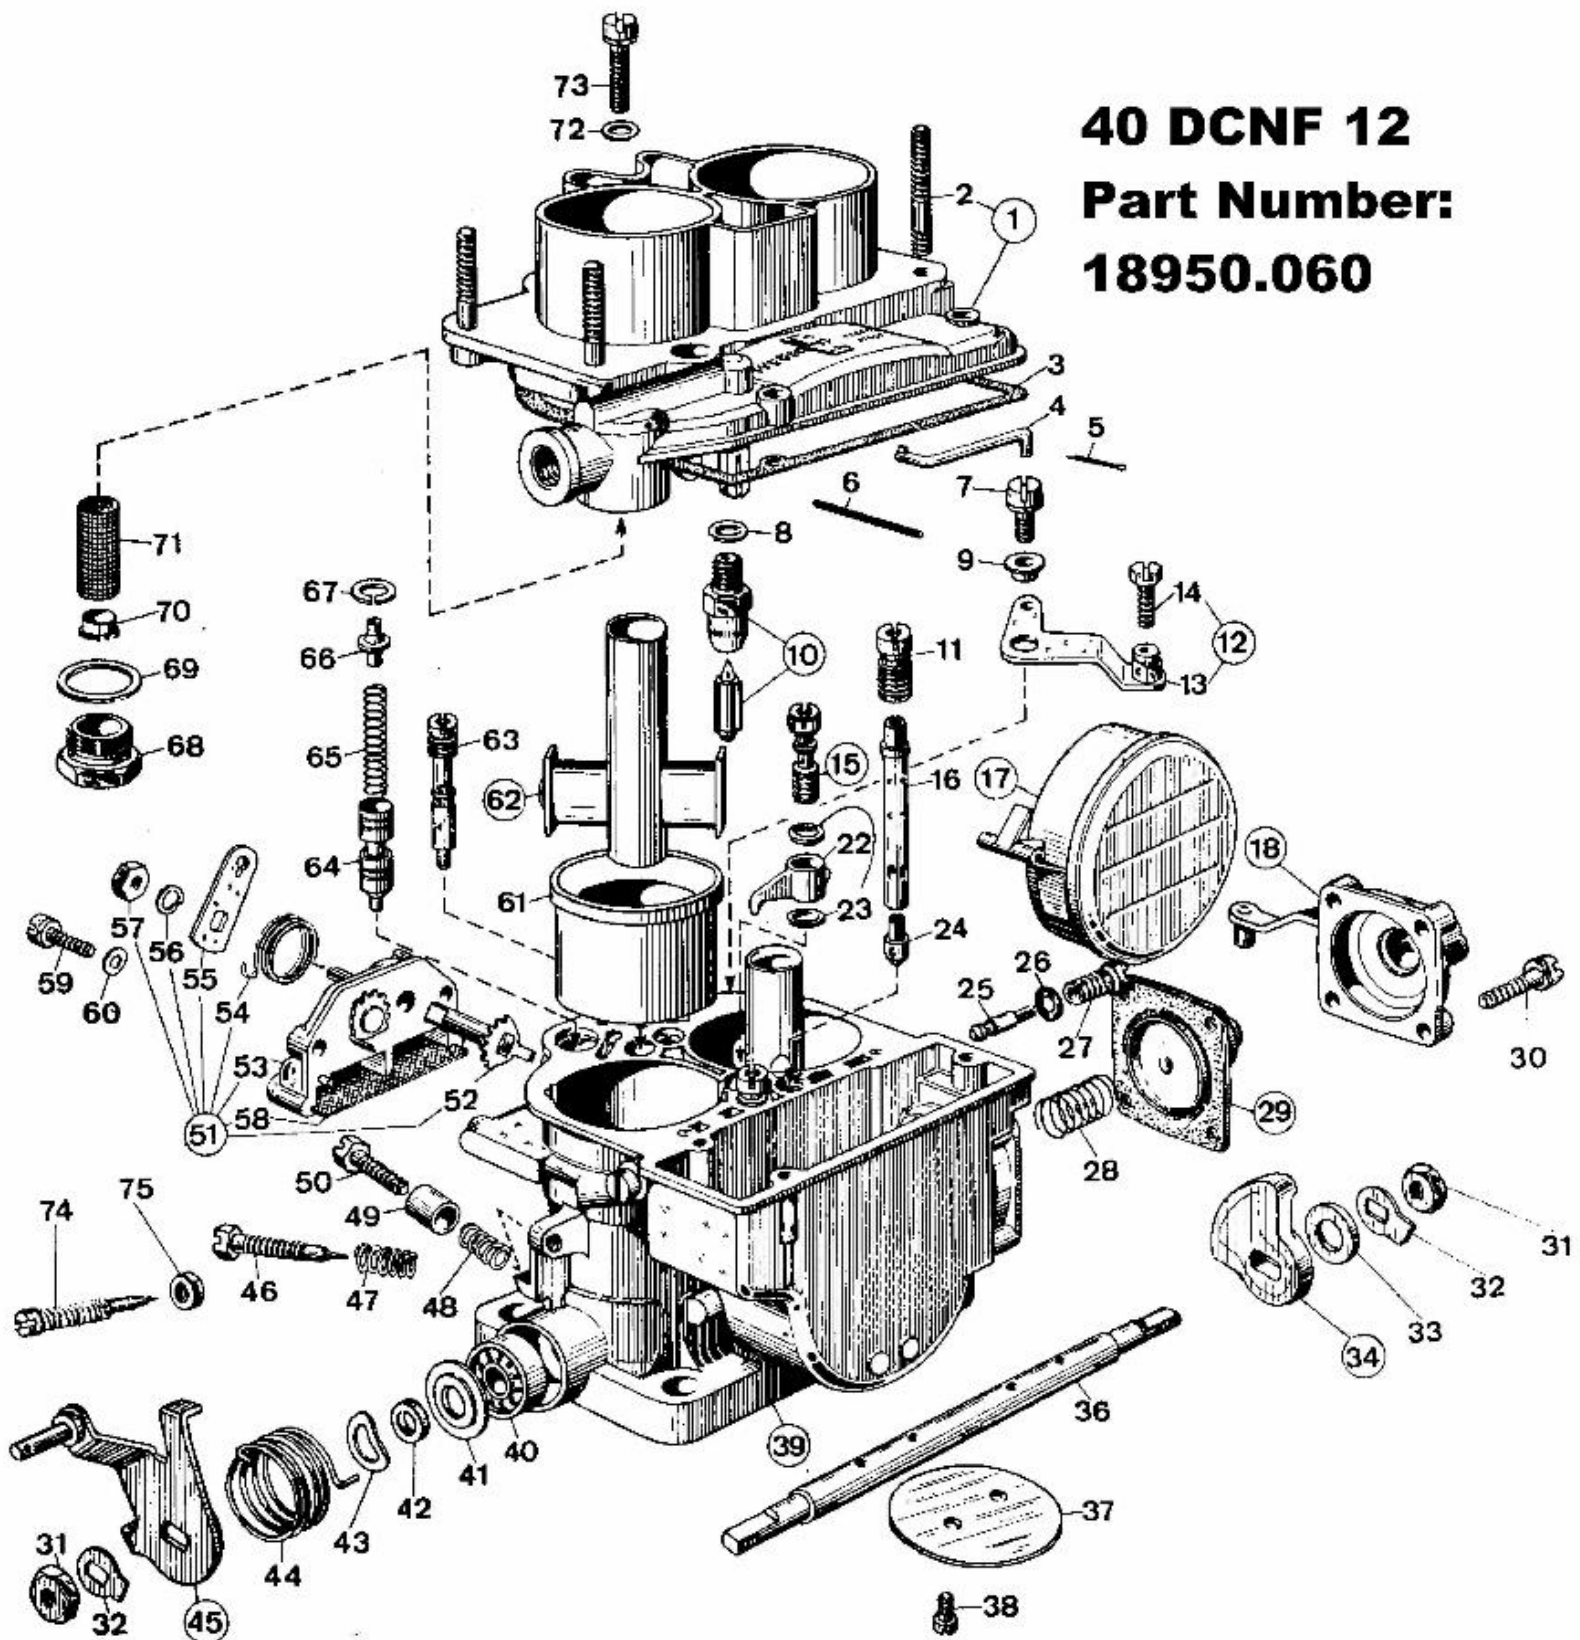


PARTS LIST

40 DCNF 12 – PART NO. 18950.060

[illegible]

40 DCNL

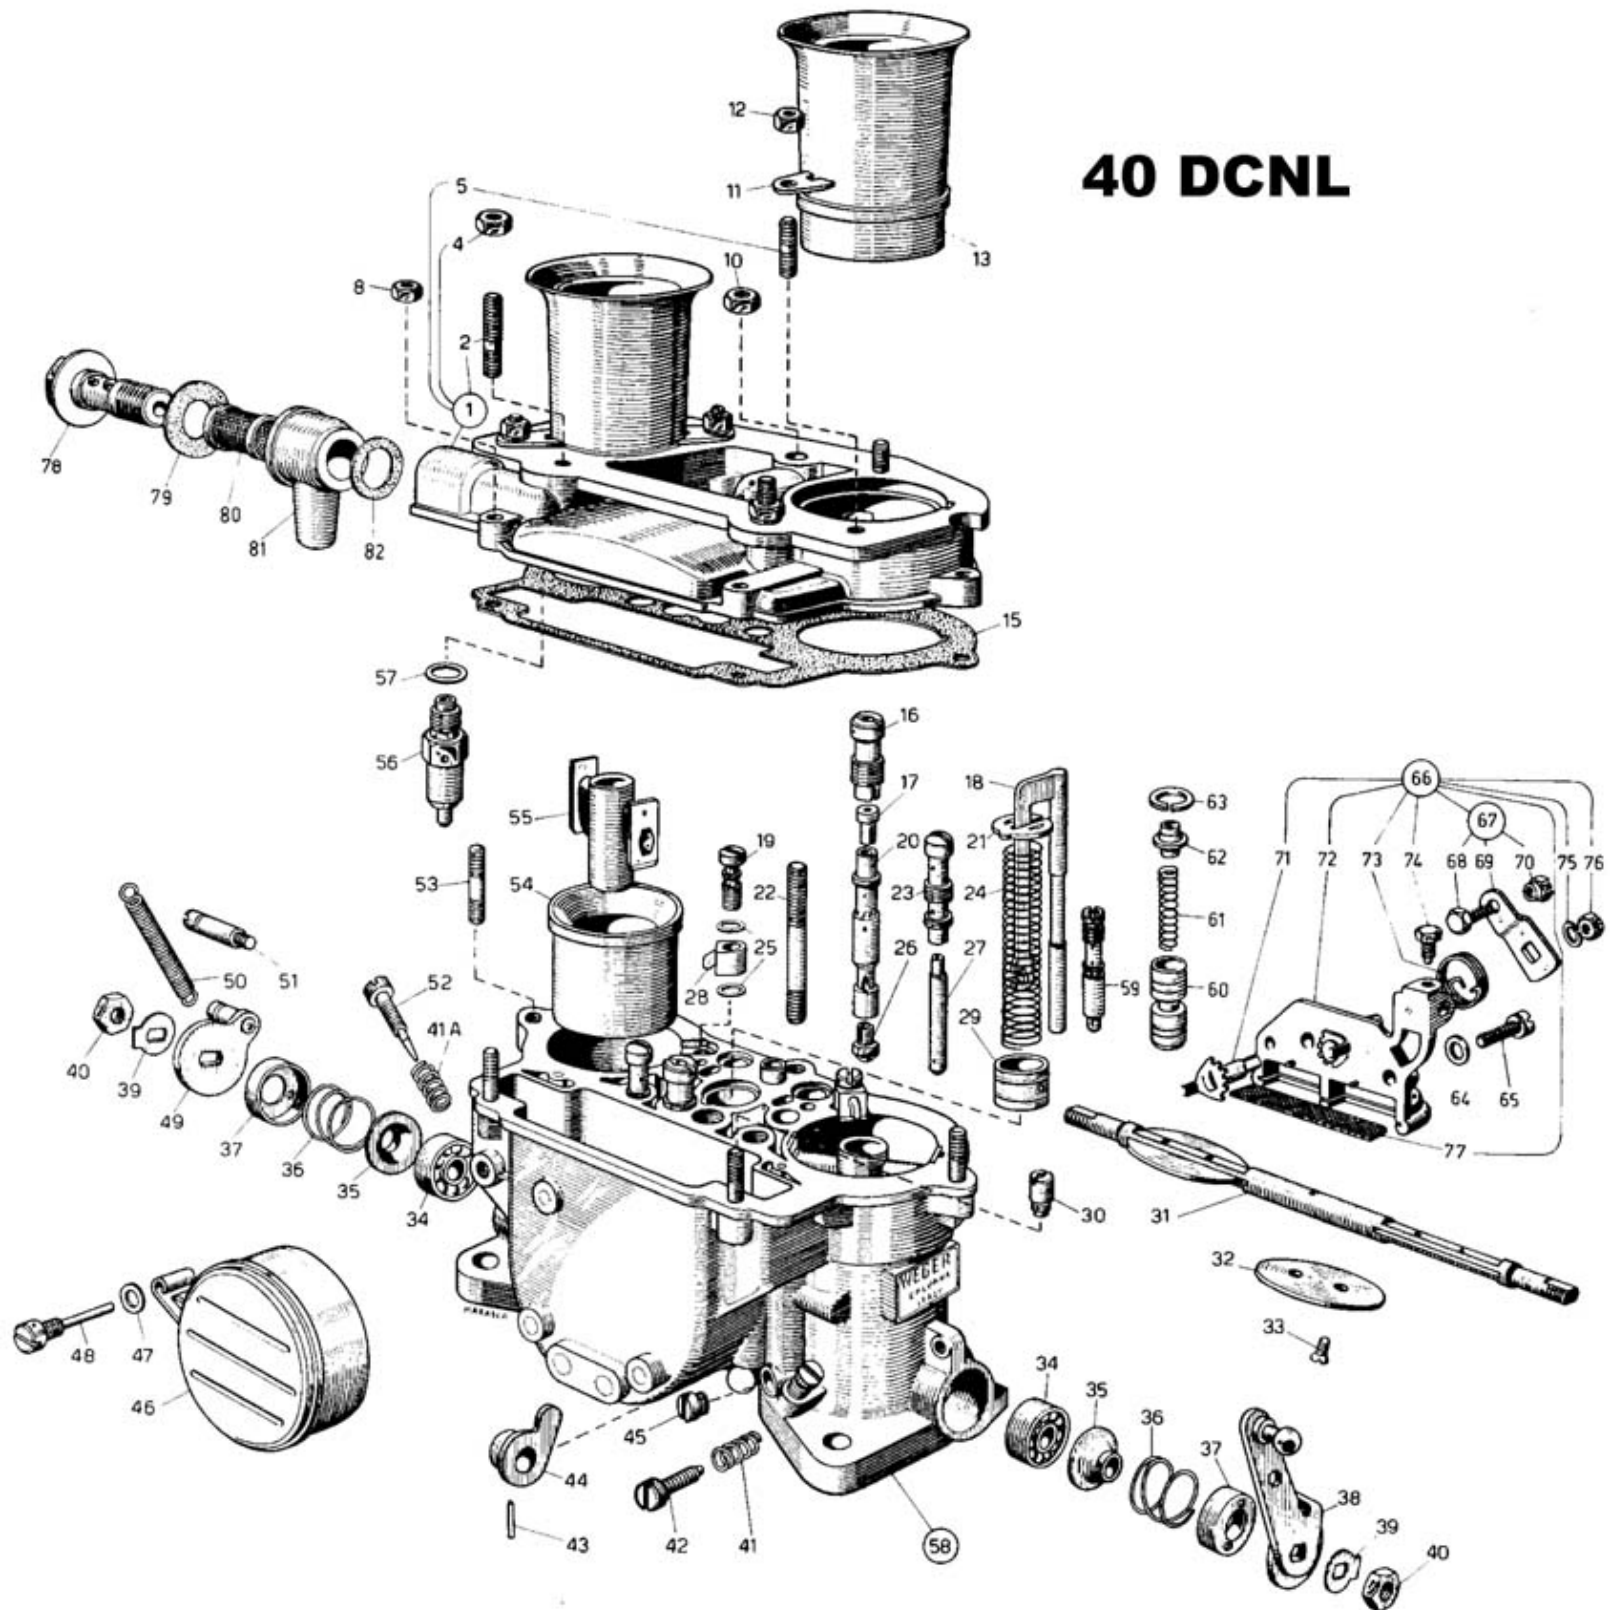


PARTS LIST

TYPE 40 DCNL

Dia No.	Qty. Req'd	Description	Part Number		Dia No.	Qty. Req'd	Description	Part Number
1	1	Carburetor Top	Not Serviced		42	1	Throttle Stop Screw	64625.012
2	2	Stud	64955.104		43	1	Fixing Pin	58445.001
4	2	Nut	***		44	1		Not Serviced
5	4	Stud	***		45	2	Plug	61015.001
8	4	Nut	34725.003		46	1	Brass Float	41015.008
10	1	Nut	***		47	1	Gasket	41530.017
11	4	Air Horn Tab	***		48	1	Float Pin Screw	Not Serviced
12	4	Nut	34725.003		49	1	Lever	Not Serviced
13	2	Air Horn	***		50	1	Spring	47605.018
15	1	Top Cover Gasket	41705.018		51	1		Not Serviced
16	2	Emulsion Tube Holder	52580.001		52	2	Idle Mixture Screw	64750.001
17	2	Air Corrector Jet	77401.*		53	4	Stud	64955.029
18	1	Pump Rod	***		54	2	Main Venturi (Choke)	***
19	2	Pump Demand Valve	64290.005		55	2	Auxiliary Venturi	***
20	2	Emulsion Tube	61450.*		56	1	Needle & Seat	79504.*
21	1	Pump Spring Retainer	52140.007		57	1	Gasket	41530.049
22	1	Stud	64955.109		58	1	Carburetor Body	Not Serviced
23	2	Jet Holder	77903.*		59	2	Starter Jet	75605.*
24	1	Spring	47600.103		60	2	Starter Valve	64330.003
25	4	Pump Jet Gasket	41540.014		61	2	Spring	47600.005
26	2	Main Jet	73401.*		62	2	Bushing	12775.004
27	2	Idle Jet	***		63	2	Clip	10140.010
28	2	Pump Jet	***		64	2	Washer	55510.038
29	1	Plunger	58602.004		65	2	Choke Cover Fixing Screw	64700.004
30	1	Exhaust Valve	79701.*		66	1	Pump Cover Assembly- Including	32556.005
31	1	Throttle Shaft	10005.438		67	1	-Cold Start Lever Assembly	Not Serviced
32	2	Throttle Plate	64005.059		68	1	-Cold Start Bolt	64800.002
33	4	Throttle Plate Screw	64520.027		69	1	-Cold Start Lever	Not Serviced
34	2	Sealed Bearing	32650.003		70	1	-Cold Start Nut	34720.002
35	2	Leather Seal	41570.001		71	1	-	Not Serviced
36	2	Spring	47600.063		72	1	-Cold Start Plate	Not Serviced
37	2	Retaining Cover	58000.007		73	1	-Spring	47610.042
38	1	Lever	Not Serviced		74	1	-Choke Cable Clamp	64605.017
39	2	Shaft Lock Tab	55520.004		75	1	-Spring Washer	55525.010
40	2	Throttle Spindle Nut	34710.003		76	1	-Fixing Nut	34715.010
41	1	Spring	47600.007		77	1	-Filter	37000.016
41a	2	Spring	47600.007		78	1	Banjo Bolt	Not Serviced
		*Calibrated Parts Require 3 Digits To			79	1	Gasket	41530.004
		Complete Part Number			80	1	Fuel Filter	37022.001
		See Calibrated Parts Section For Sizes			81	1	Fuel Union	10354.006
					82	1	Gasket	41530.001
		***This Part Can Be Fabricated.						
		Please Call For More Details.***						
	12/29/00							

40 DCO 3

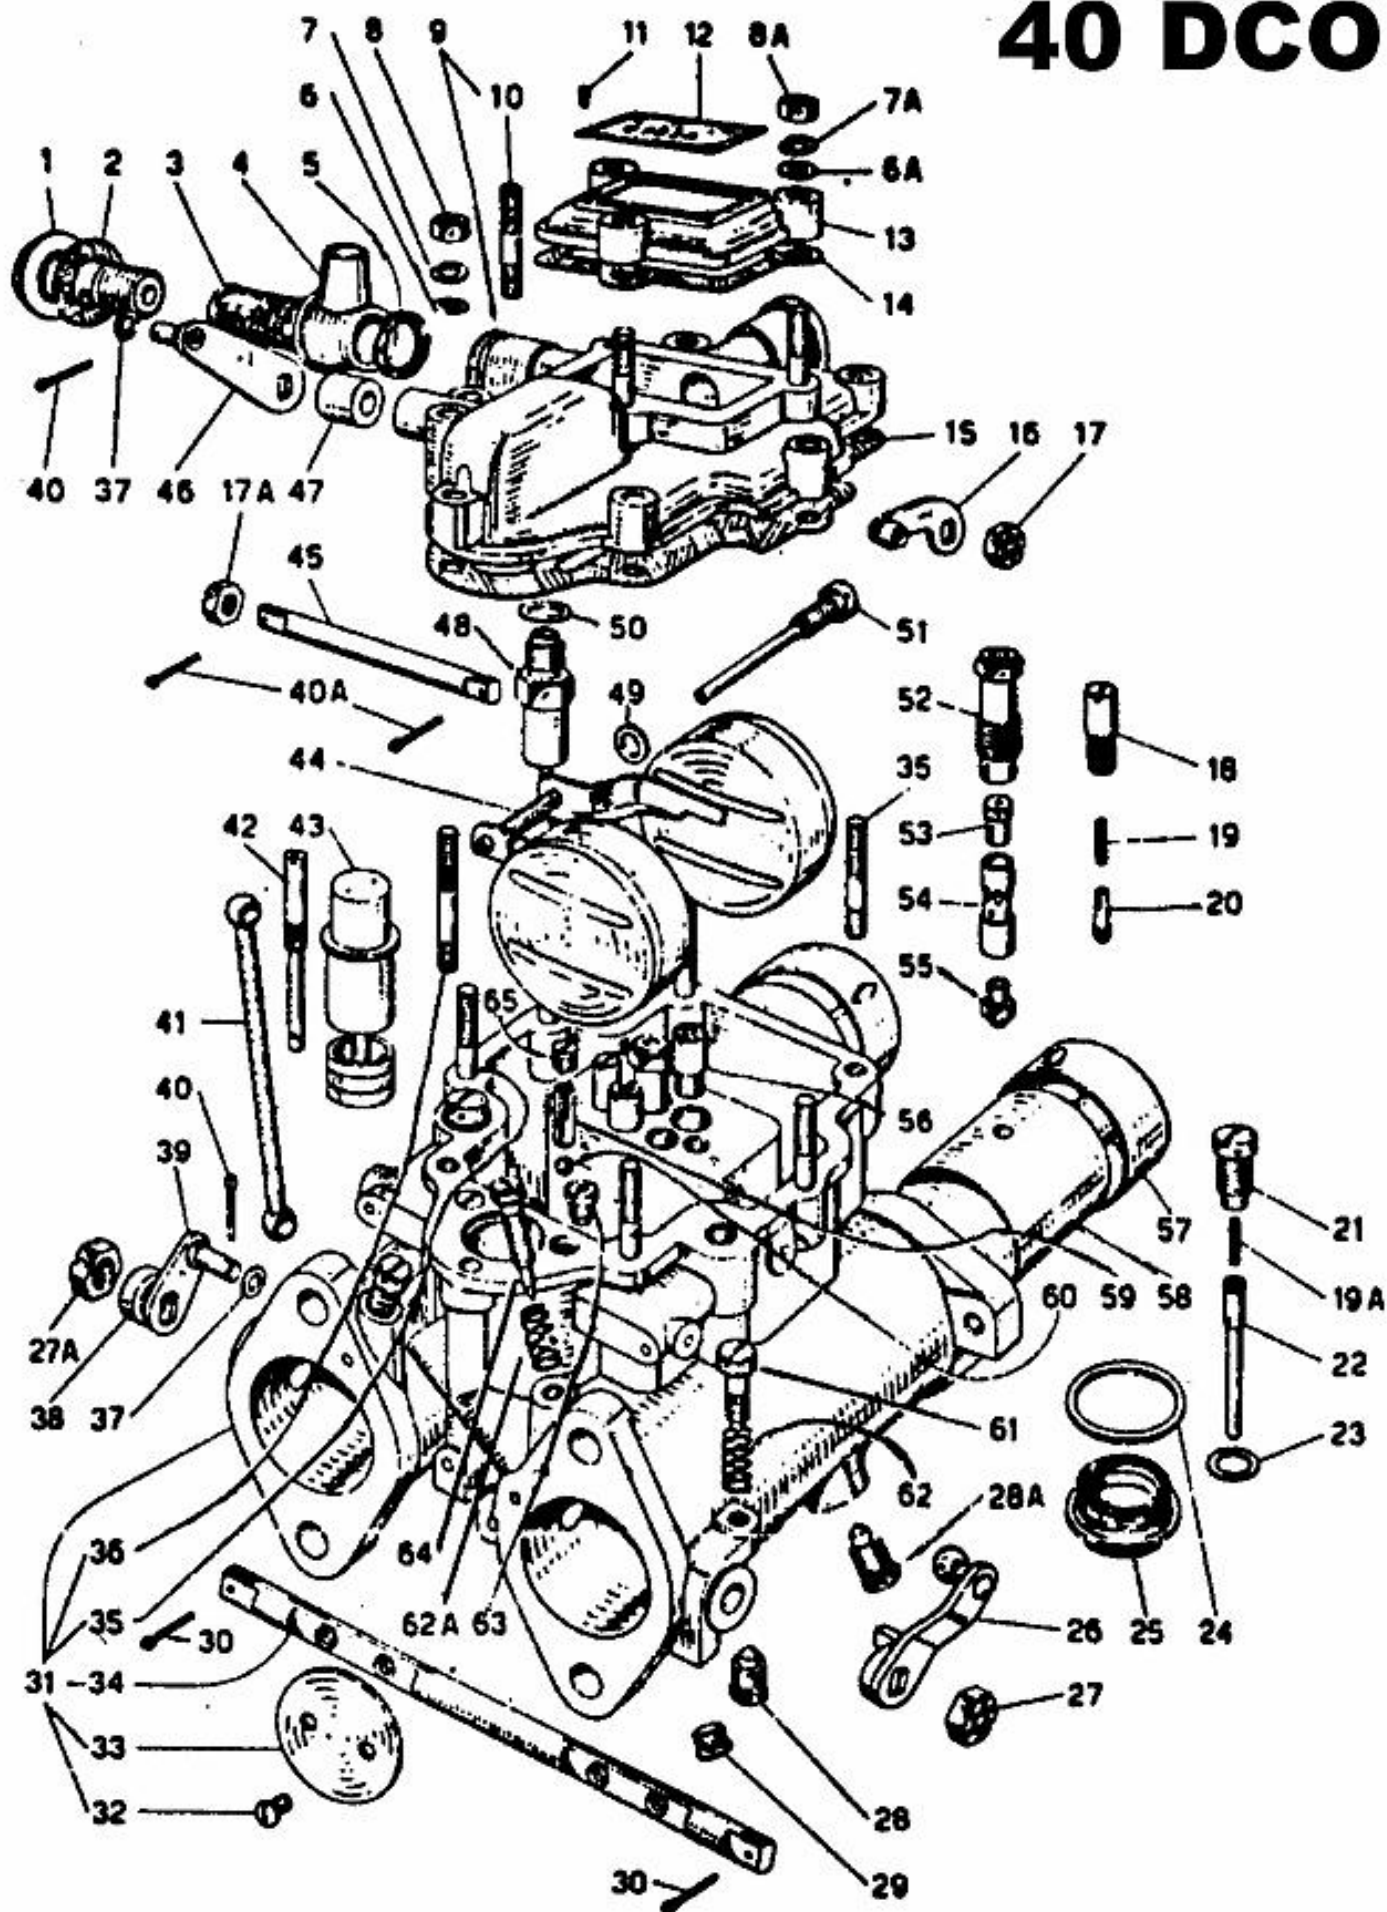


PARTS LIST

TYPE 40 DCO 3

[illegible]

40 DCOE 151
Part Number 19550.174

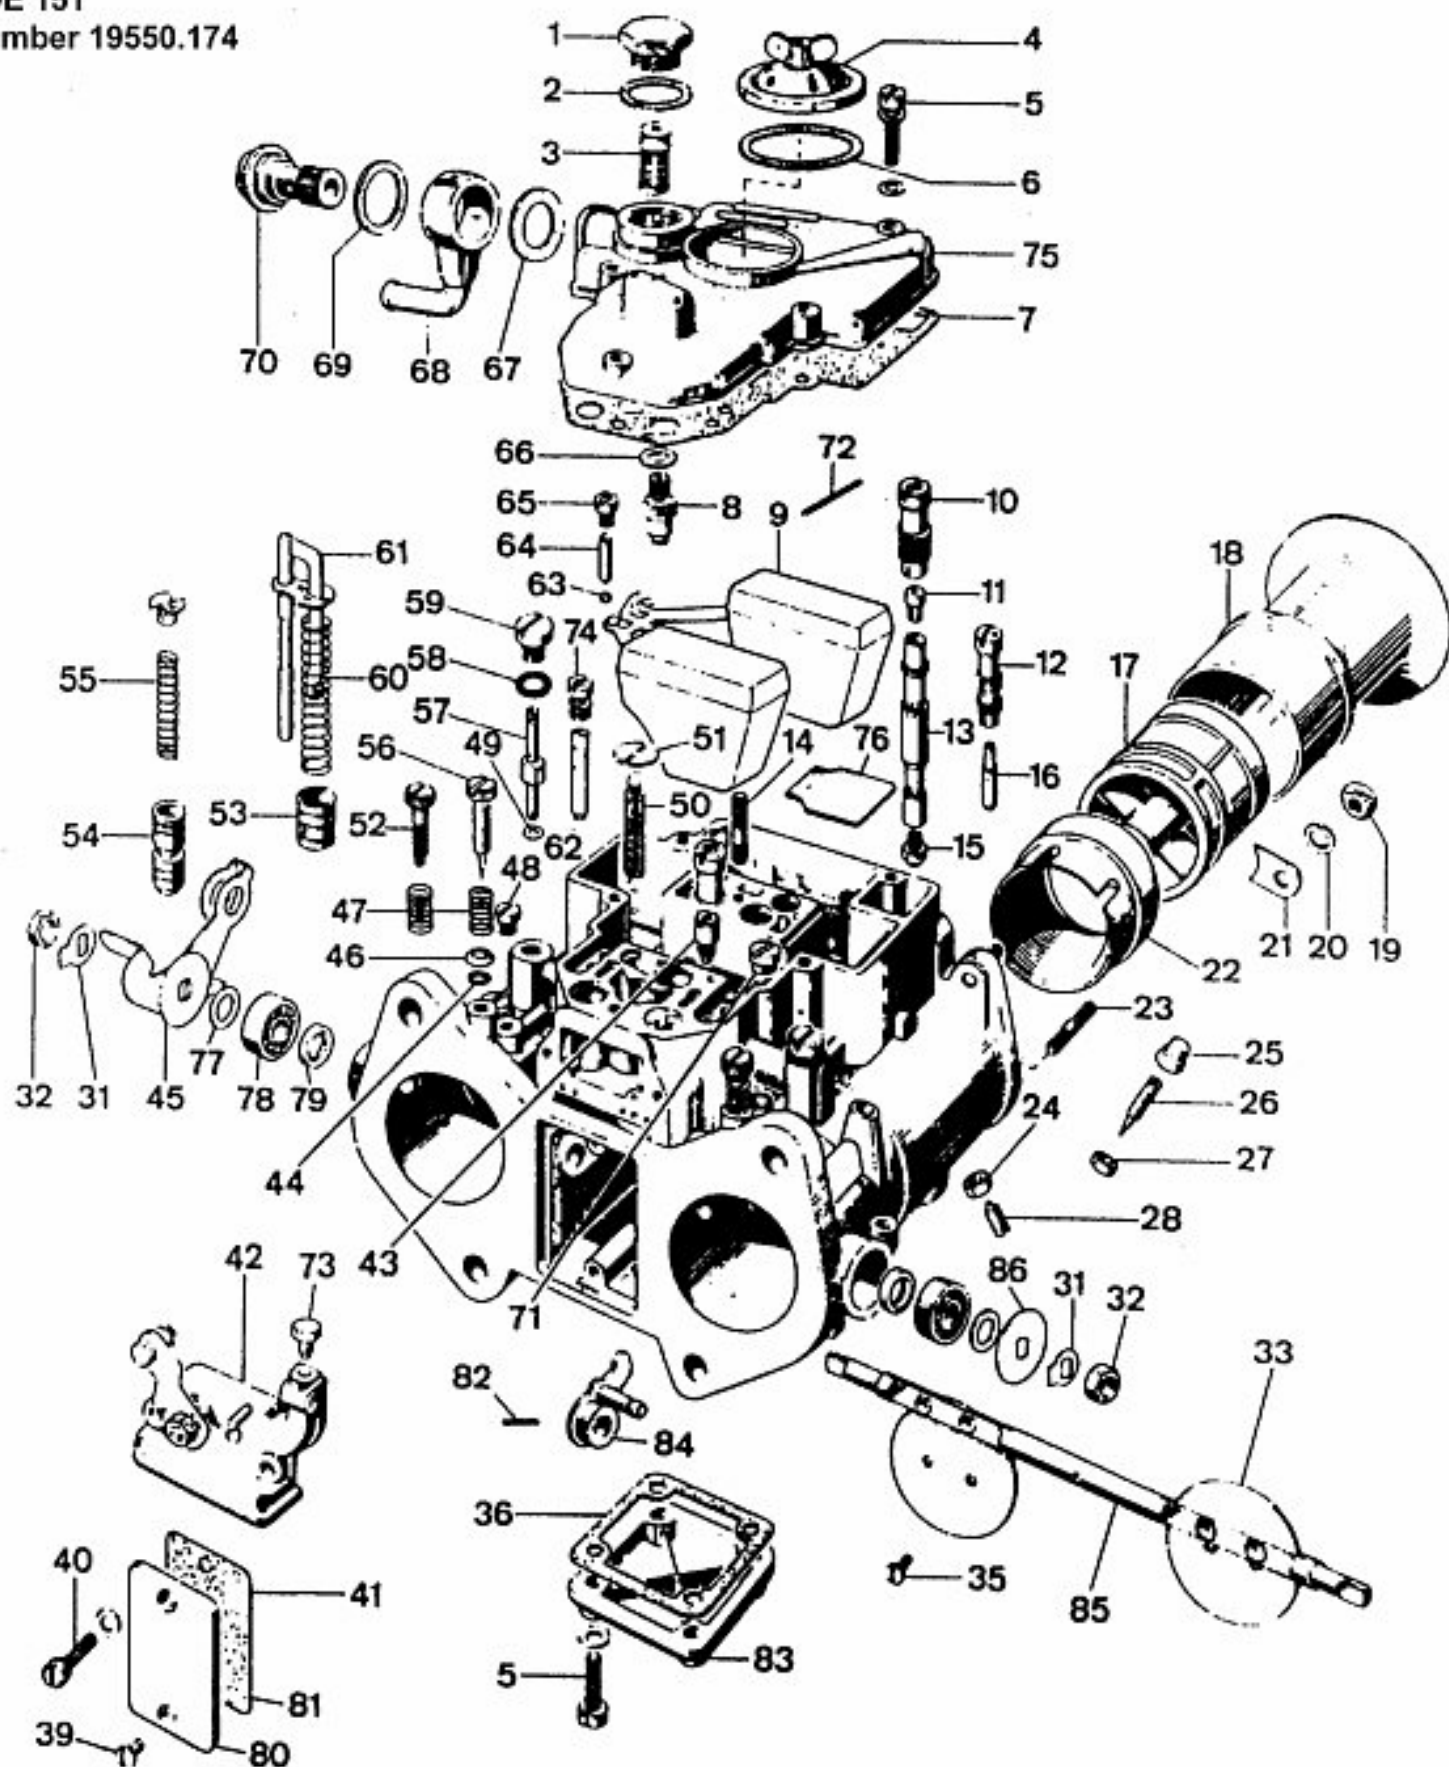


PARTS LIST

TYPE 40 DCOE 151 – PART NO. 19550.174

Dia No.	Qty. Req'd	Description	Part Number		Dia No.	Qty. Req'd	Description	Part Number
1	1	Filter Cover	61002.010		46	2	Idle Mixture Screw Cup Washer	58000.006
2	1	Filter Cover Gasket	41530.024		47	3	Spring	47600.007
3	1	Filter Element	37022.010		48	2	Vacuum Take Off Gasket	64590.008
4	1	Jet Inspection Cover	32376.003		49	2	Pump Jet Gasket	41535.021
5	9	Screw	64700.001		50	1	Throttle Spring	47605.027
6	1	Jet Inspection Cover Gasket	41550.002		51	1	Spring Anchor Plate	52210.006
7a	1	Rubber Top Cover Gasket	41715.011		52	1	Throttle Stop Screw	64625.012
7b	1	Paper Top Cover Gasket	41715.001		53	1	Pump Plunger	58602.003
8	1	Needle Valve	79503.*		54	2	Starter Valve	64330.003
9	1	Plastic Float	41030.034		55	2	Starter Valve Spring	47600.105
10	2	Emulsion Tube Holder	52580.001		56	2	Idle Mixture Screw	64750.003
11	2	Air Corrector Jet	77401.*		57	2	Pump Jet	76801.*
12	2	Idle Jet Holder	52585.006		58	2	Pump Jet 'O' Ring	41565.009
13	2	Emulsion Tube	61450.*		59	2	Pump Jet Cover	61015.008
14	1	Stud	64955.007		60	1	Pump Rod Spring	47600.064
15	2	Main Jet	73401.*		61	1	Pump Rod	10410.015
16	2	Idle Jet	748xx.*		62	2	Starter Jet	75507.085
17	2	Auxiliary Venturi	69912.*		63	2	Pump Demand Valve Ball	58300.003
18	2	Air Horn	52840.012		64	2	Pump Demand Weight	52730.001
19	4	Air Horn Fixing Nut	34715.010		65	2	Pump Demand Valve Cover	61015.006
20	4	Spring Washer	55525.010		66	1	Needle Valve Gasket	83102.120
21	4	Air Horn Tab	52150.012		67	1	Fuel Union Gasket	41530.031
22	2	Main Venturi (Choke)	72302.*		68	1	Fuel Union	10536.035
23	4	Stud	64955.101		69	1	Fuel Union Gasket	41530.024
24	2	Lock Washer	34710.003		70	1	Fuel Union Bolt	12715.008
25	2	Air By-Pass Screw Cap	14945.003		71	2	Progression Hole Inspection Cover	61015.009
26	2	Air By-Pass Screw	64750.002		72	1	Float Pin	52000.001
27	2	By-Pass Screw Lock Nut	34705.001		73	1	Choke Cable Clamp	64605.017
28	2	Locking Screw	64840.006		74	2	Starter Air Jet	77505.150
31	2	Lock Washer	55520.004		75	1	Carburetor Top Cover	31734.198
32	2	Throttle Spindle Nut	34710.003		76	1	Plate	52130.003
33	2	Throttle Plate	64005.044		77	2	Washer	55510.128
35	4	Throttle Plate Screw	64520.027		78	2	Sealed Bearing	32650.003
36	1	Bottom Cover Gasket	41640.001		79	2	'O' Ring	41575.019
39	2	Inspection Cover Fixing Screw	64570.009		80	1	Inspection Cover	52135.024
40	2	Choke Cover Fixing Screw	64700.004		81	1	Gasket	41640.021
41	1	Pump Cover Gasket	41640.021		82	1	Pin	58445.001
42	1	Cold Start Unit L/H	32556.002		83	1	Bottom Bowl Cover	32374.008
43	1	Exhaust Bleed	79701.*		84	1	Pump Cam Lever	45082.005
44	2	Idle Mixture Screw O Ring	41565.002		85	1	Throttle Shaft	10005.446
45	1	Throttle Lever	45048.007		86	1	Washer	99024.258
		*Calibrated Parts Require 3						
		Digits To Complete Part Number						
		See Calibrated Parts Section						
		For Sizes						

40 DCZ

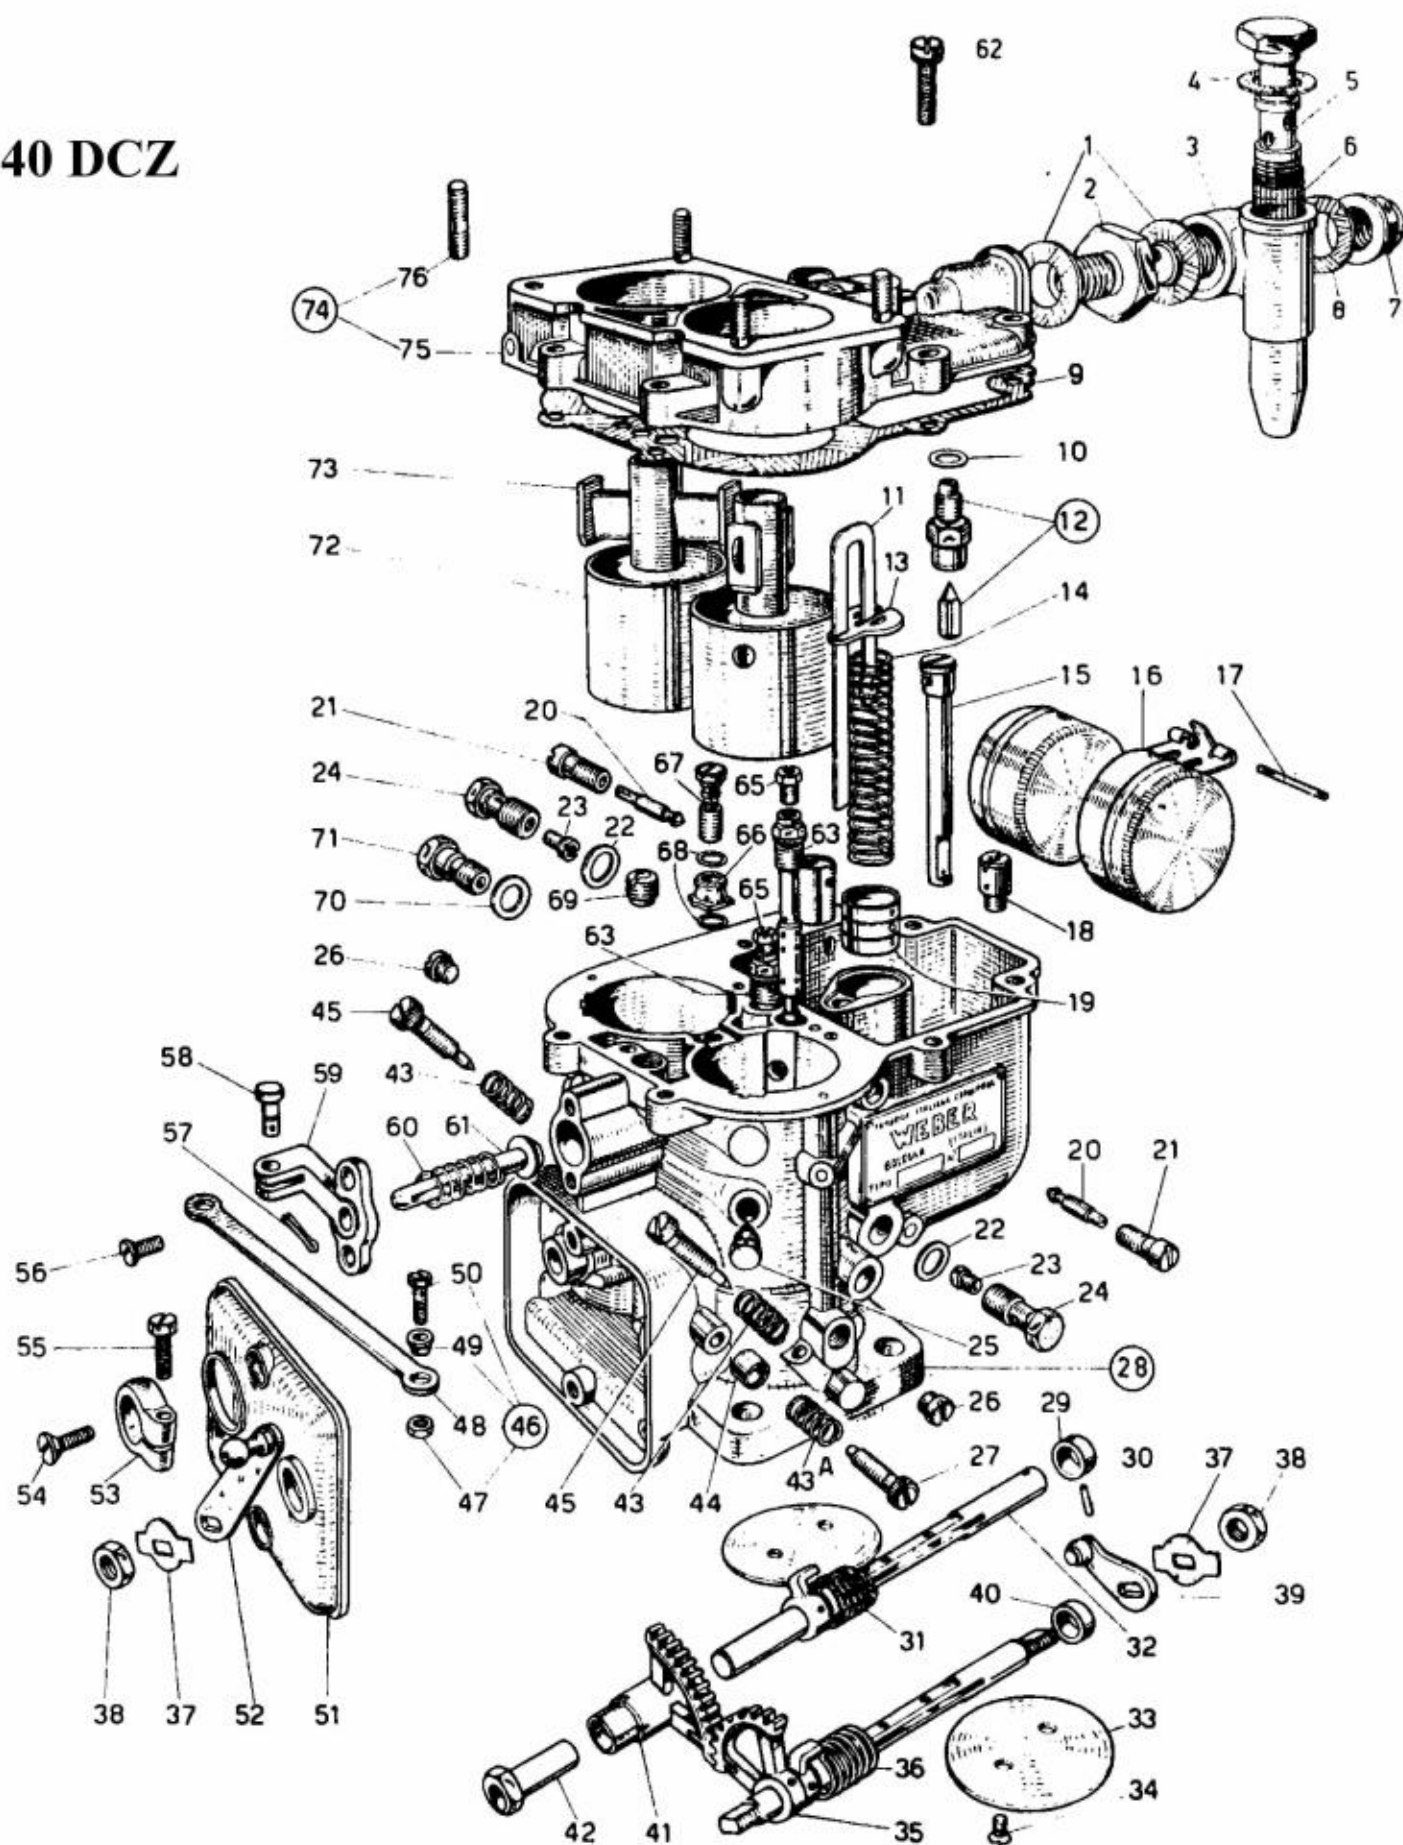


PARTS LIST

TYPE 40 DCZ

[illegible]

40 DFAV
Part Number
18950.051

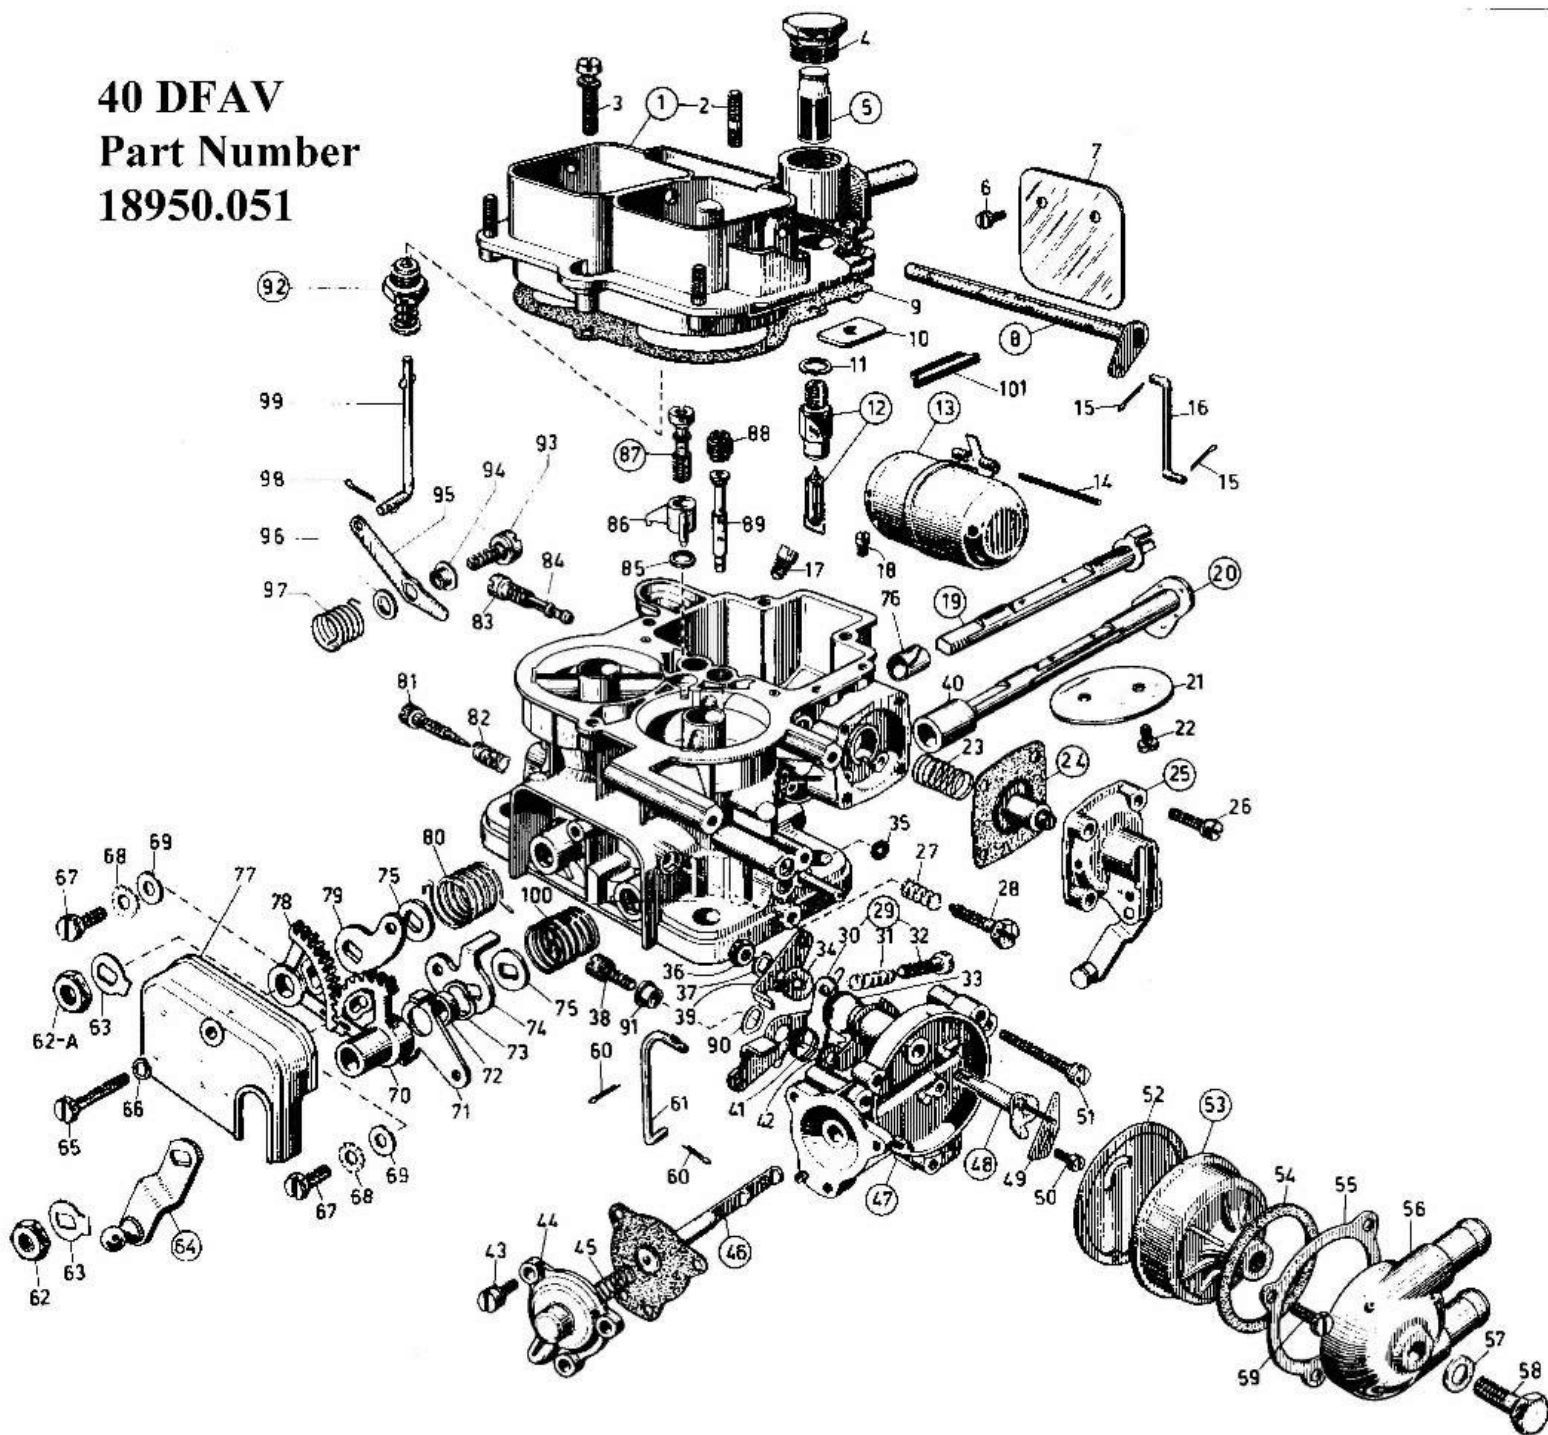


PARTS LIST

TYPE 40 DFAV – PART NO. 18950.051

Dia No.	Qty. Req'd	Description	Part Number		Dia No.	Qty. Req'd	Description	Part Number
1	1	Carb Top Cover	31716.092		51	3	Screw	64700.008
2	3	Stud Bolt	64955.002		52	1	Gasket	41640.005
3	5	Top Cover Screw	64700.005		53	1	Thermostat Assy	57804.005
4	1	Strainer Inspection Plug	61002.018		54	1	Gasket	41555.001
5	1	Stainer	37022.010		55	1	Ring	52135.006
6	4	Screw	64525.003		56	1	Water Chamber	32444.002
7	2	Plate	64010.007		57	1	Washer	41530.002
8	1	Shaft & Lever Assembly	10020.204		58	1	Bolt	64615.001
9	1	Top Cover Gasket	41705.031		59	3	Screw	64615.005
10	1	Dust Seal	52135.010		60	2	Split Pin	32610.005
11	1	Gasket	83102.070		61	1	Rod	61280.041
12	1	Needle & Seat	79519.*		62	2	Nut	34715.014
13	1	Float	41015.004		63	2	Lock Washer	55520.002
14	1	Float Pin	52000.015		64	1	Lever	45027.089
15	2	Split Pin	32610.005		65	1	Screw	Not serviced
16	1	Rod	61280.004		66	1	Washer	55525.007
17	2	Main Jet	73801.*		67	2	Screw	Not serviced
18	1	Plug	61015.005		68	2	Washer-External Tooth	55535.001
19	1	Shaft	10015.482		69	2	Washer	Not serviced
20	1	Shaft Assembly	10015.430		70	1	Primary Gear Lever (Right Hand)	58202.011
21	2	Plate	Not Serviced		71	1	Lever	Not serviced
22	4	Screw	64520.027		72	1	Bushing	Not serviced
23	1	Accelerator Pump Spring	47600.107		73	1	Washer	55530.002
24	1	Diaphragm Assembly	47407.027		74	1	Lever	Not serviced
25	1	Cover Assy	32486.015		75	2	Washer	55555.016
26	4	Screw	64700.004		76	4	Shaft Bushing	52130.010
27	1	Spring	47600.007		77	1	Cover	Not serviced
28	1	Screw	Not Serviced		78	1	Geared Carb Sector (Left Hand)	58202.003
29	1	Lever Assembly –Including	Not Serviced		79	1	Lever	Not serviced
30	1	-Lever	Not Serviced		80	1	Left Shaft Return Spring	47610.012
31	1	--Spring	47600.007		81	2	Needle Screw	64750.001
32	1	-Screw	64590.001		82	2	Spring	47600.007
33	1	Spring	Not Serviced		83	2	Idle Jet Holder	52570.005
34	1	Spacer	55555.006		84	2	Idle Jet	74403.*
35	1	O-Ring Seal	41565.008		85	1	Gasket	41540.014
36	1	Nut	34705.001		86	1	Accelerator Pump Jet	76212.*
37	1	Washer-Spring	Not Serviced		87	1	Accelerator Pump Valve Assembly	64290.005
38	1	Screw	64700.014		88	2	Air Corrector Jet	77201.*
39	1	Lever	Not Serviced		89	2	Emulsion Tube	61440.*
40	1	Spacer	12750.016		90	1	Washer	55530.005
41	1	Spring	47610.018		91	1	Bushing	12765.005
42	1	Washer	55510.013		92	1	Power Valve	Not serviced
43	3	Screw	64700.007		93	1	Lever Fixing Screw	64700.014
44	1	Cover	Not Serviced		94	1	Bushing For Lever	12775.017
45	1	Spring	Not Serviced		95	1	Valve Control Lever	Not serviced
46	1	Vacuum Diaphragm & Shaft Assy	47407.008		96	1	Washer For Lever	Not serviced
47	1	Body Assembly	Not Serviced		97	1	Spring For Lever	47610.033
48	1	Shaft & Lever Assy	10085.001		98	1	Split Pin For Rod	32610.005
49	1	Plate	52135.015		99	1	Valve Control Rod	Not serviced
50	1	Screw	Not Serviced		100	1	Right Shaft Return Spring	Not serviced
		*Calibrated Parts Require 3 Digits To			101	1	Dust Seal Plug	61070.002
		Complete Part Number						
		See Calibrated Parts Section For Sizes						11/1/00

IDA 3 BARREL

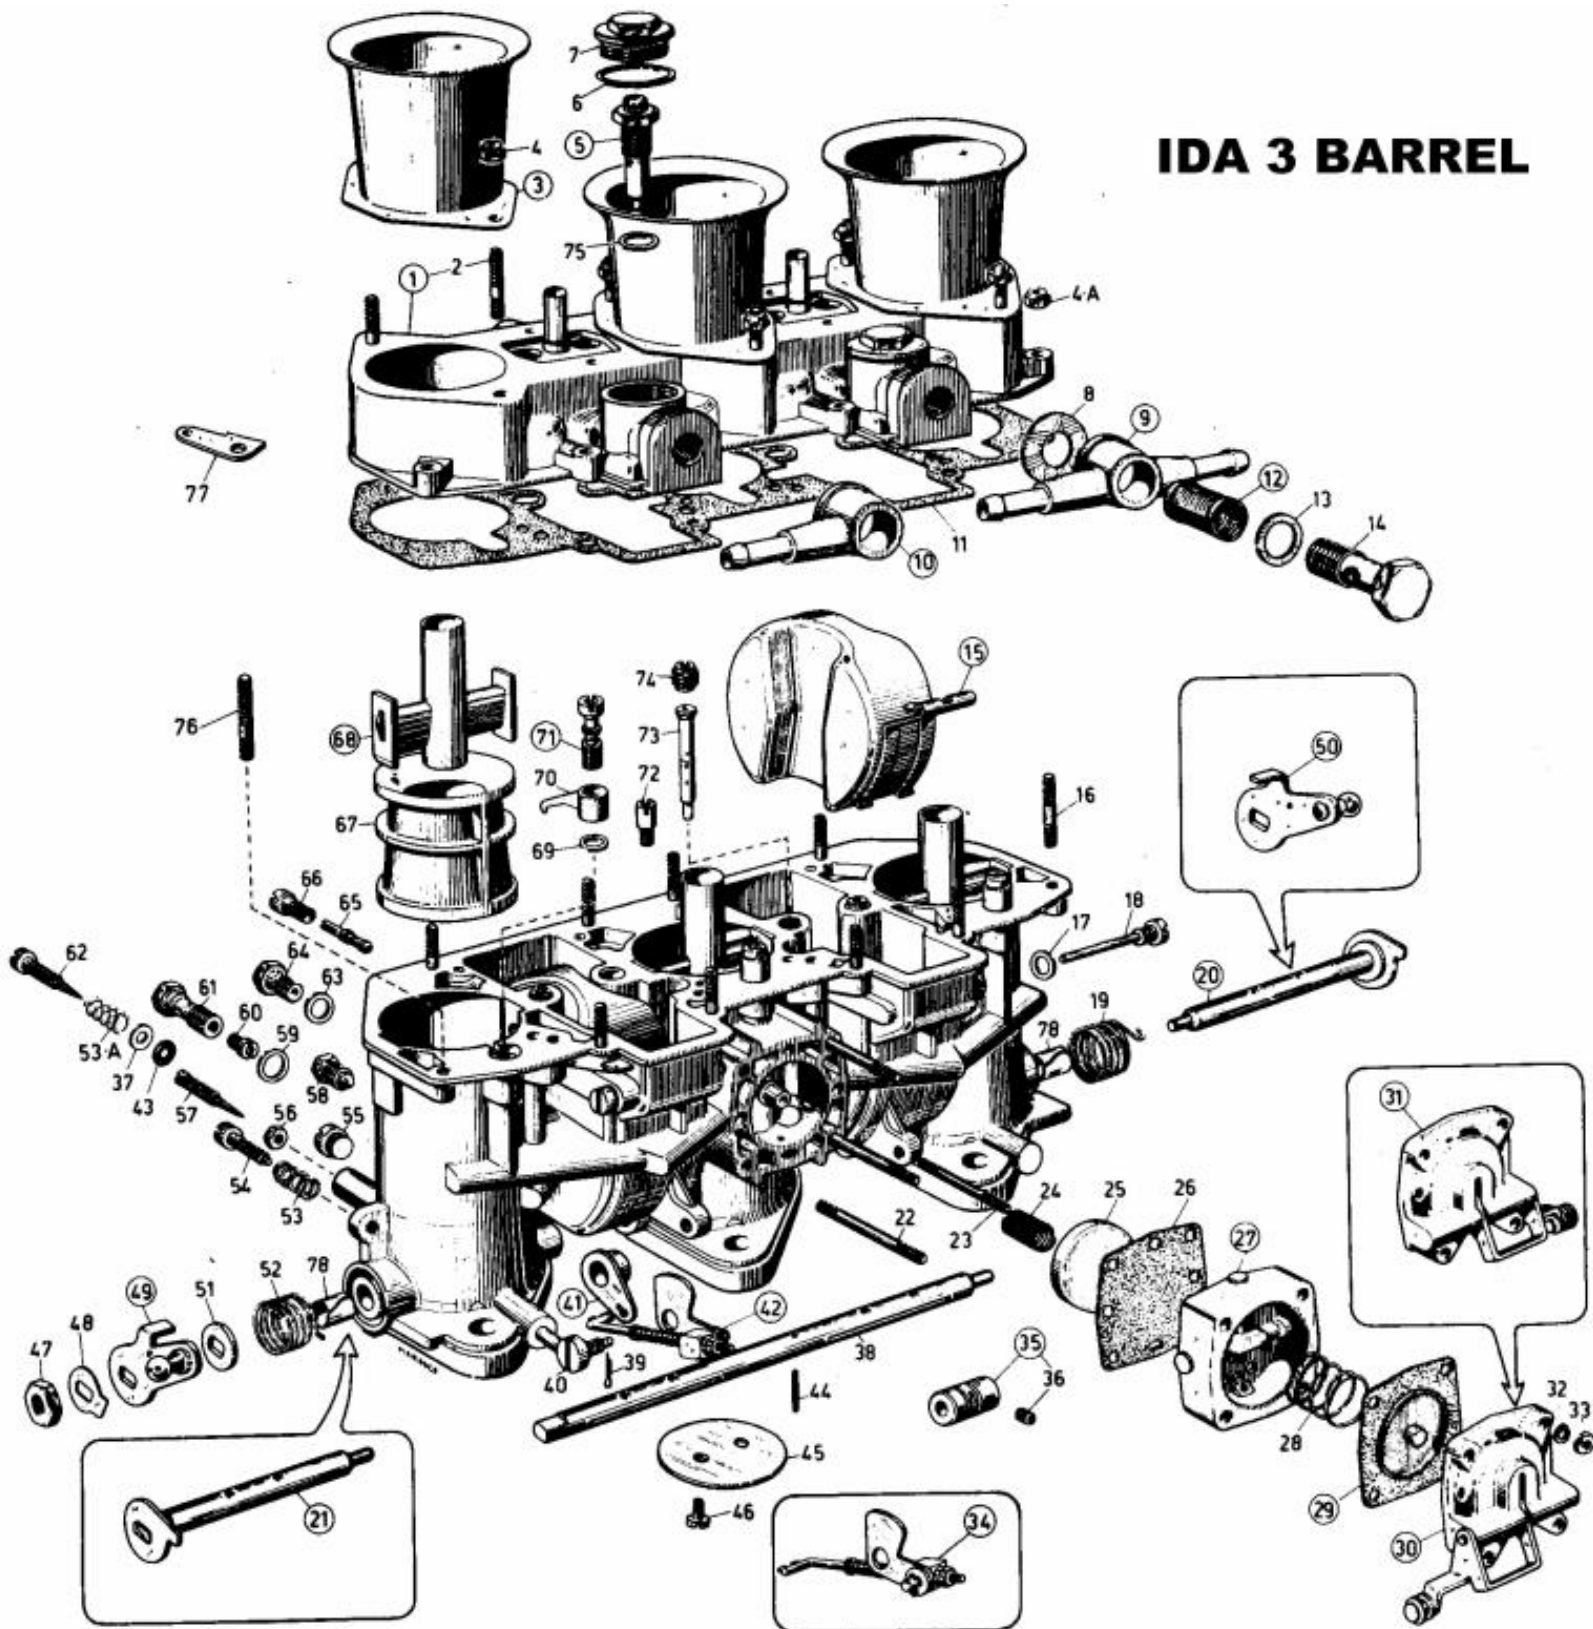


PARTS LIST

TYPE IDA 3 BARREL

Dia No.	Qty. Req'd	Description	Part Number		Dia No.	Qty. Req'd	Description	Part Number
1	1	Carburetor Cover	Not Serviced		41	1	Lever	45027.007
2	6	Stud	64970.002		42	1	Tie Rod 40 IDA 3C1	61287.001
3	3	Air Intake	52845.005		43	3	'O' Ring	41565.002
4	6	Nut	34725.003		44	1	Spring Pin	58445.001
4a	10	Nut	34725.003		45	3	Throttle	64005.126
5	2	Needle Valve	79508.*		46	6	Screw	64520.027
6	2	Gasket	41530.035		47	1	Nut	34715.007
7	2	Plug	61002.005		48	1	Washer	55520.008
8	2	Gasket	41530.004		49	1	Control Lever 40 IDA 3C1	45034.028
9	1	Filter Body	10356.005		50	1	Control Lever 40 IDA 3C	45034.027
10	1	Filter Body	10356.002		51	1	Washer	55555.019
11	1	Gasket	41710.001		52	1	Spring	47610.071
12	2	Filter Gauze	37022.001		53	1	Spring	47600.007
13	2	Gasket	41530.001		53a	3	Spring	47600.007
14	2	Plug	12715.014		54	1	Throttle Adjusting Screw	64590.005
15	2	Float	41015.007		55	3	Progression Hole Inspection Screw	61015.009
16	9	Stud	64955.029		56	3	Nut	34705.006
17	2	Gasket	41530.017		57	3	Air Adjusting Screw	64750.002
18	2	Fulcrum Screw	64900.012		58	3	Choke Fixing Screw	64840.003
19	1	Spring	47610.072		59	3	Gasket	41540.001
20	1	Spindle 40 IDA 3 C1	10015.419		60	3	Main Jet	73801.*
20a	1	Oversize Spindle 40 Ida 3c1	10016.442		61	3	Jet Holder	52590.001
21	1	Spindle 40 IDA 3c	10015.415		62	3	Idling Mixture Adjusting Screw	64750.004
21a	1	Oversize Spindle 40 Ida 3c	10016.443		63	2	Gasket	41530.008
22	2	Stud	64955.011		64	2	Plug	61002.006
23	2	Stud	64955.020		65	3	Idling Jet	74403.*
24	1	Spring	47600.128		66	3	Jet Holder	52570.005
25	1	Pump Valve	64190.004		67	3	Choke	71502.*
26	1	Diaphragm	47405.011		68	3	Secondary Venturi	71103.450
27	1	Pump Body	39174.002		69	3	Gasket	41540.014
28	1	Spring	47600.012		70	3	Pump Jet	76201.*
29	1	Diaphragm	47407.010		71	3	Delivery Valve	64290.005
30	1	Pump Cover 40 IDA 3C1	32486.009		72	1	Intake Valve	79701.*
31	1	Pump Cover 40 IDA 3C	32486.010		73	3	Emulsion Tube	61440.*
32	4	Spring Washer	55525.007		74	3	Air Corrector Jet	77201.*
33	4	Nut	34705.003		75	2	Gasket	41530.005
34	1	Tie Rod 40 IDA 3C	61287.002		76	1	Stud	64955.030
35	1	Elastic Joint Including:	32272.001		77	1	Plate	52150.006
36	4	-Screw	64600.001		78	2	Shaft Bushing	52130.010
37	3	Washer	55510.018					
38	1	Spindle	10005.407				*Calibrated Parts Require 3 Digits To	
39	2	Split Pin	32610.006				Complete The Part Number.	
40	1	Fulcrum Screw	64895.003				See Calibrated Parts Section For Sizes	
	12/28/00							



40 IDF XE
Part Number 18950.138

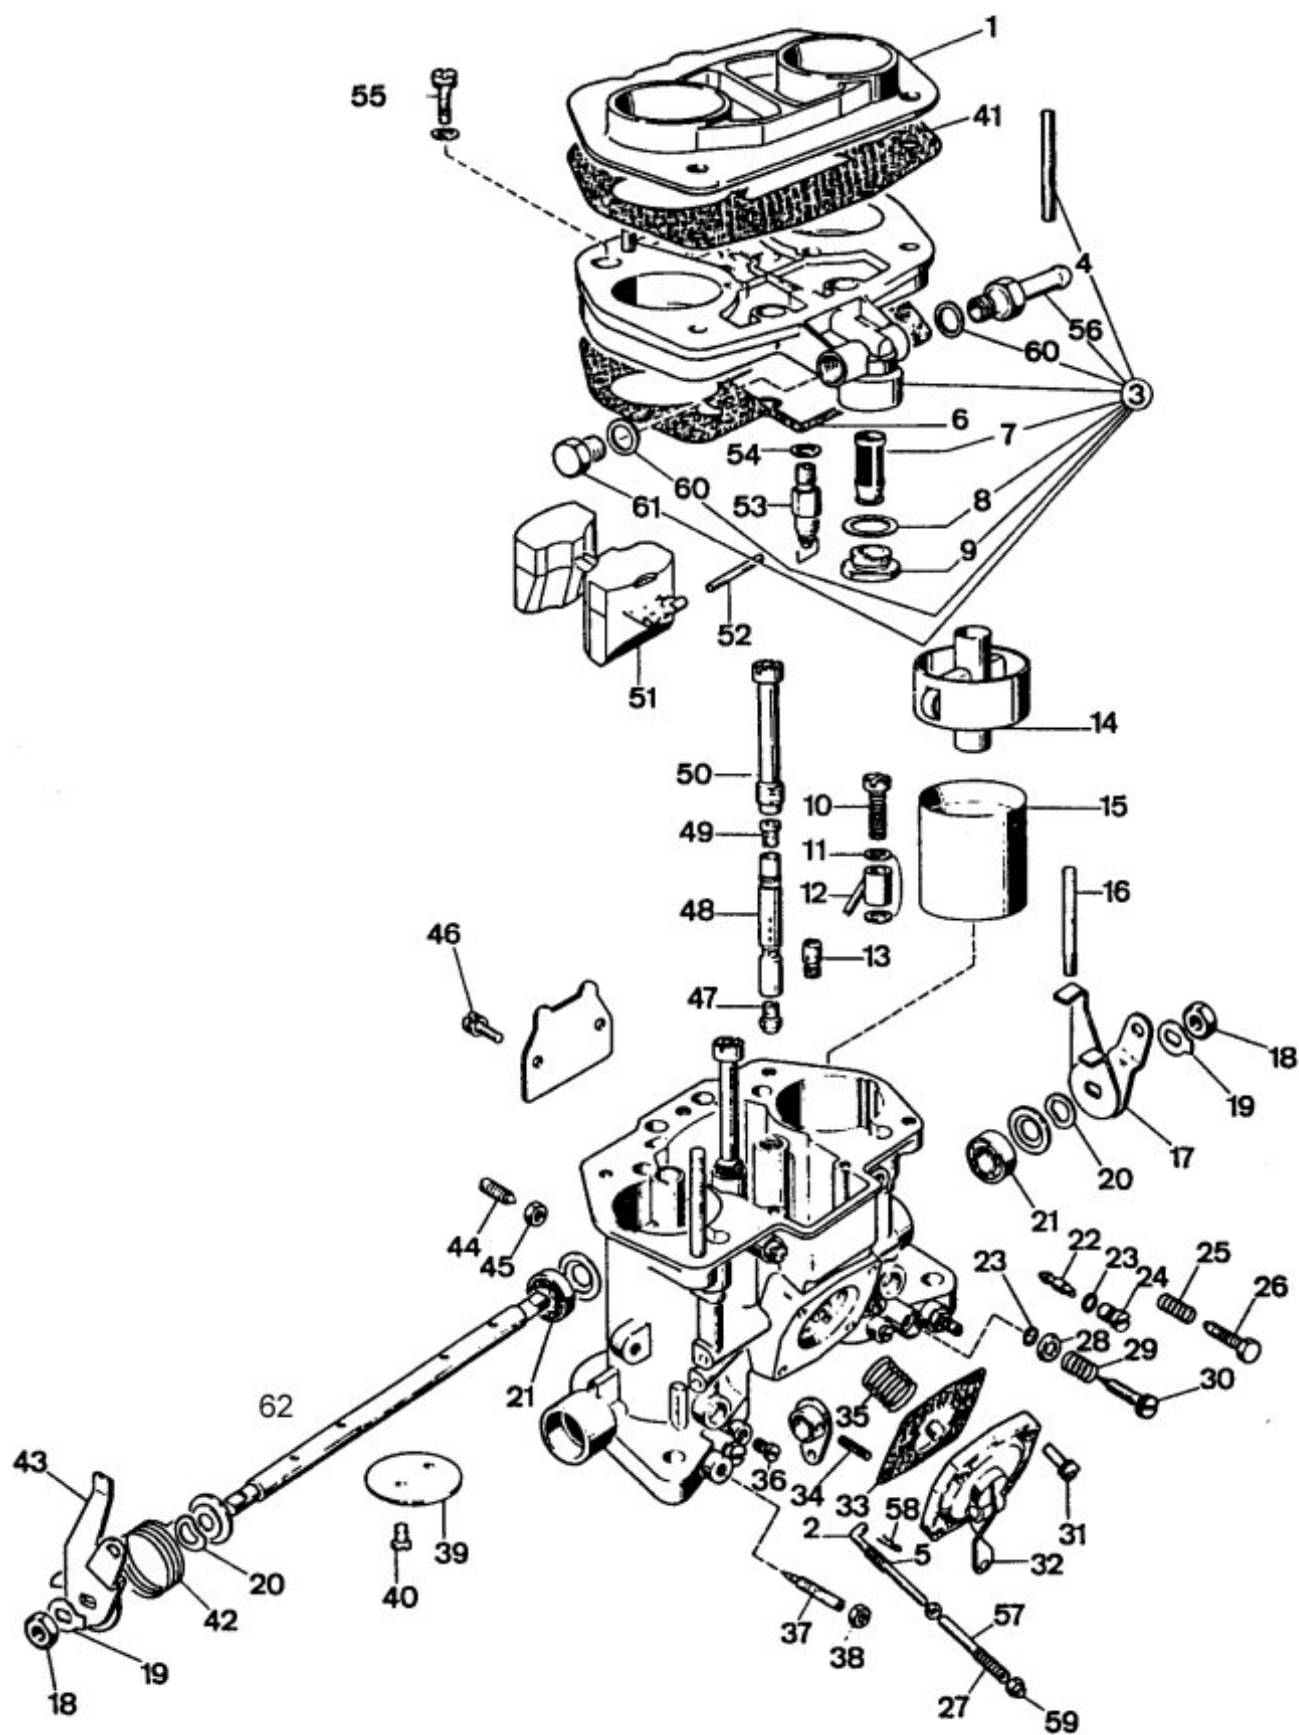


PARTS LIST

TYPE 40 IDF XE – PART NO. 18950.138

[illegible]

44 DCNF (4 Top Screw)

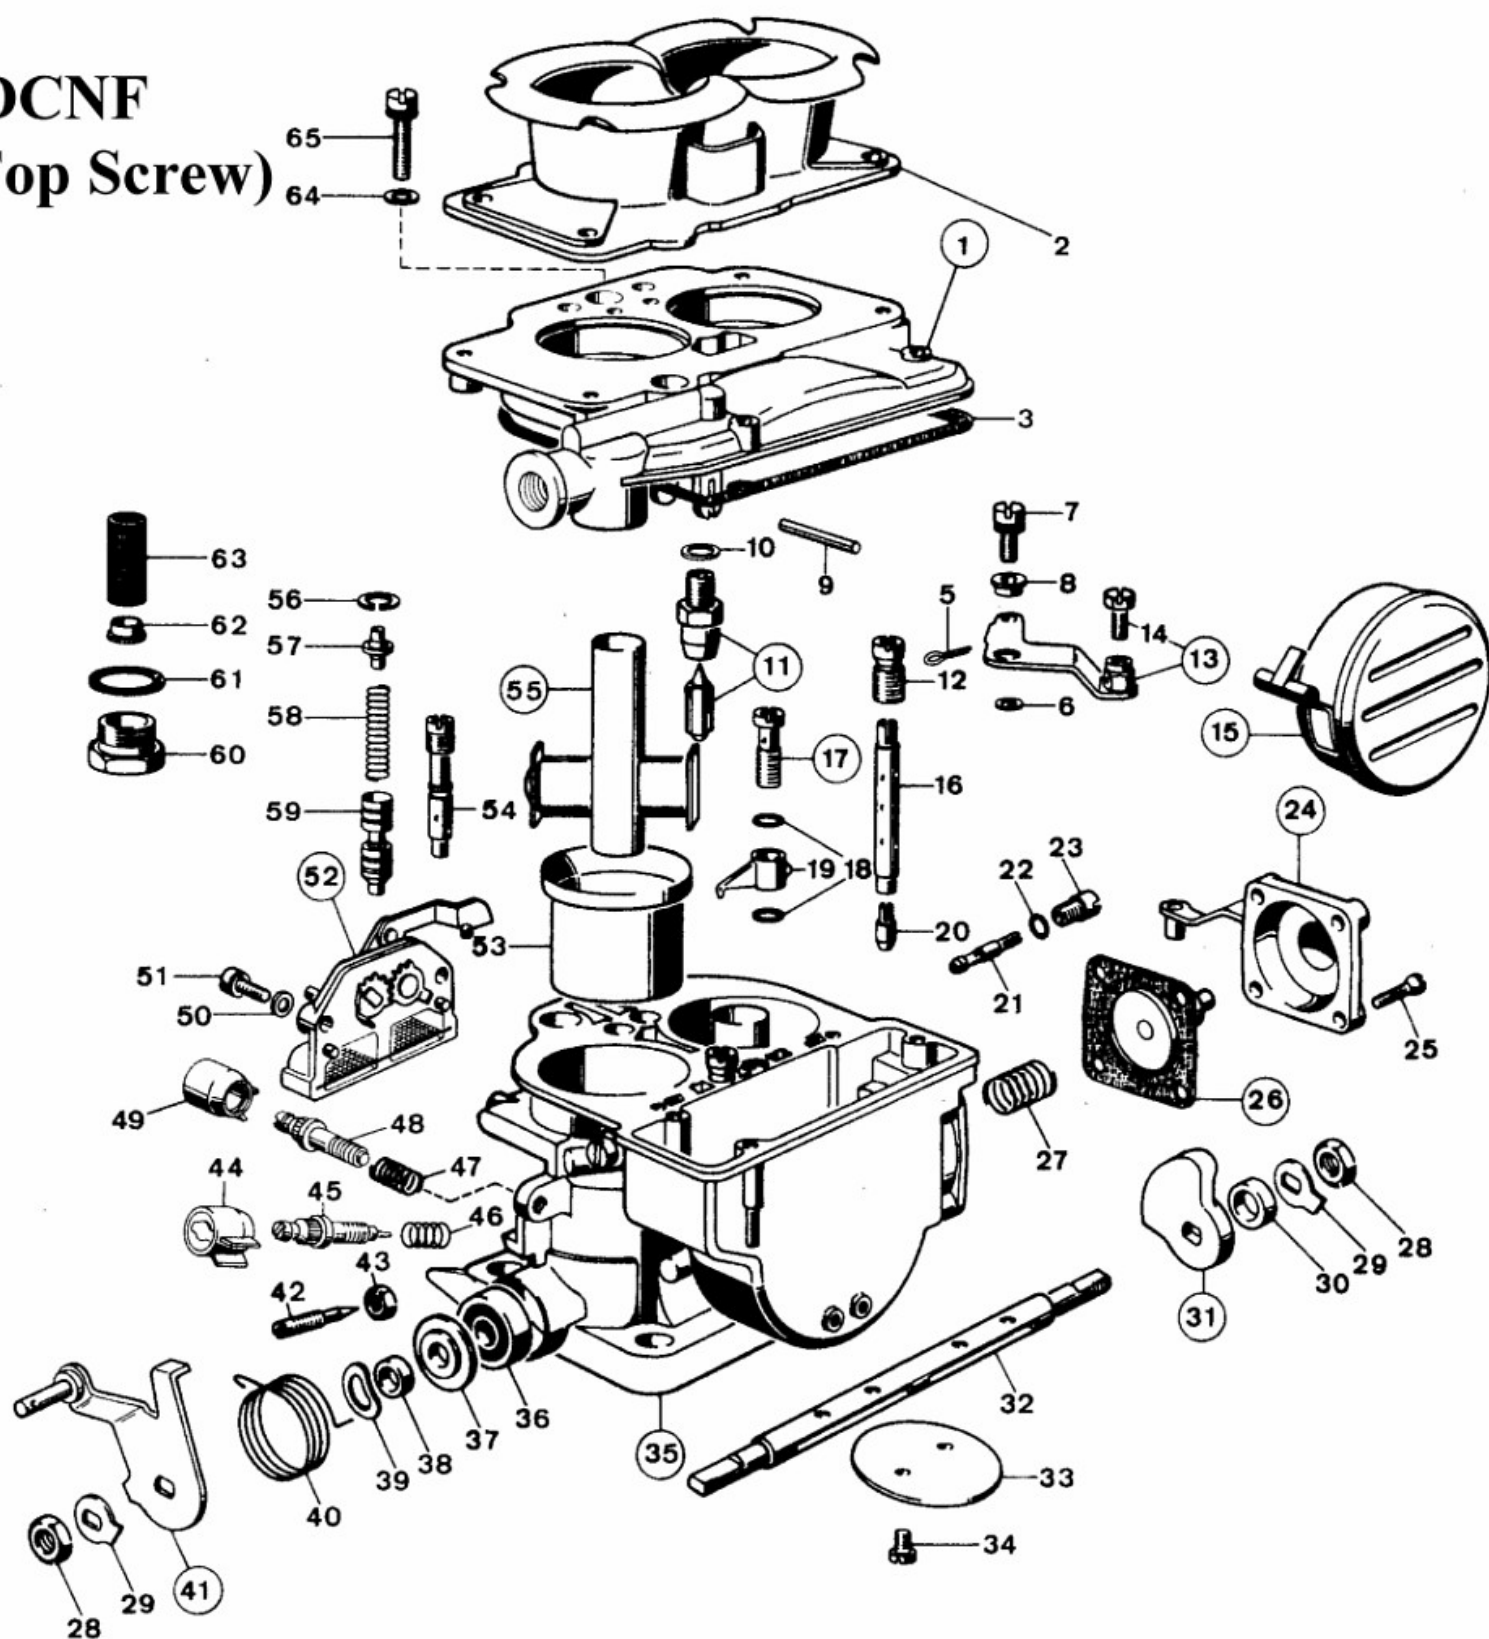


PARTS LIST

TYPE 44 DCNF

(4 Top Cover Screw)

[illegible]

44 IDF
Part Number
18990.030

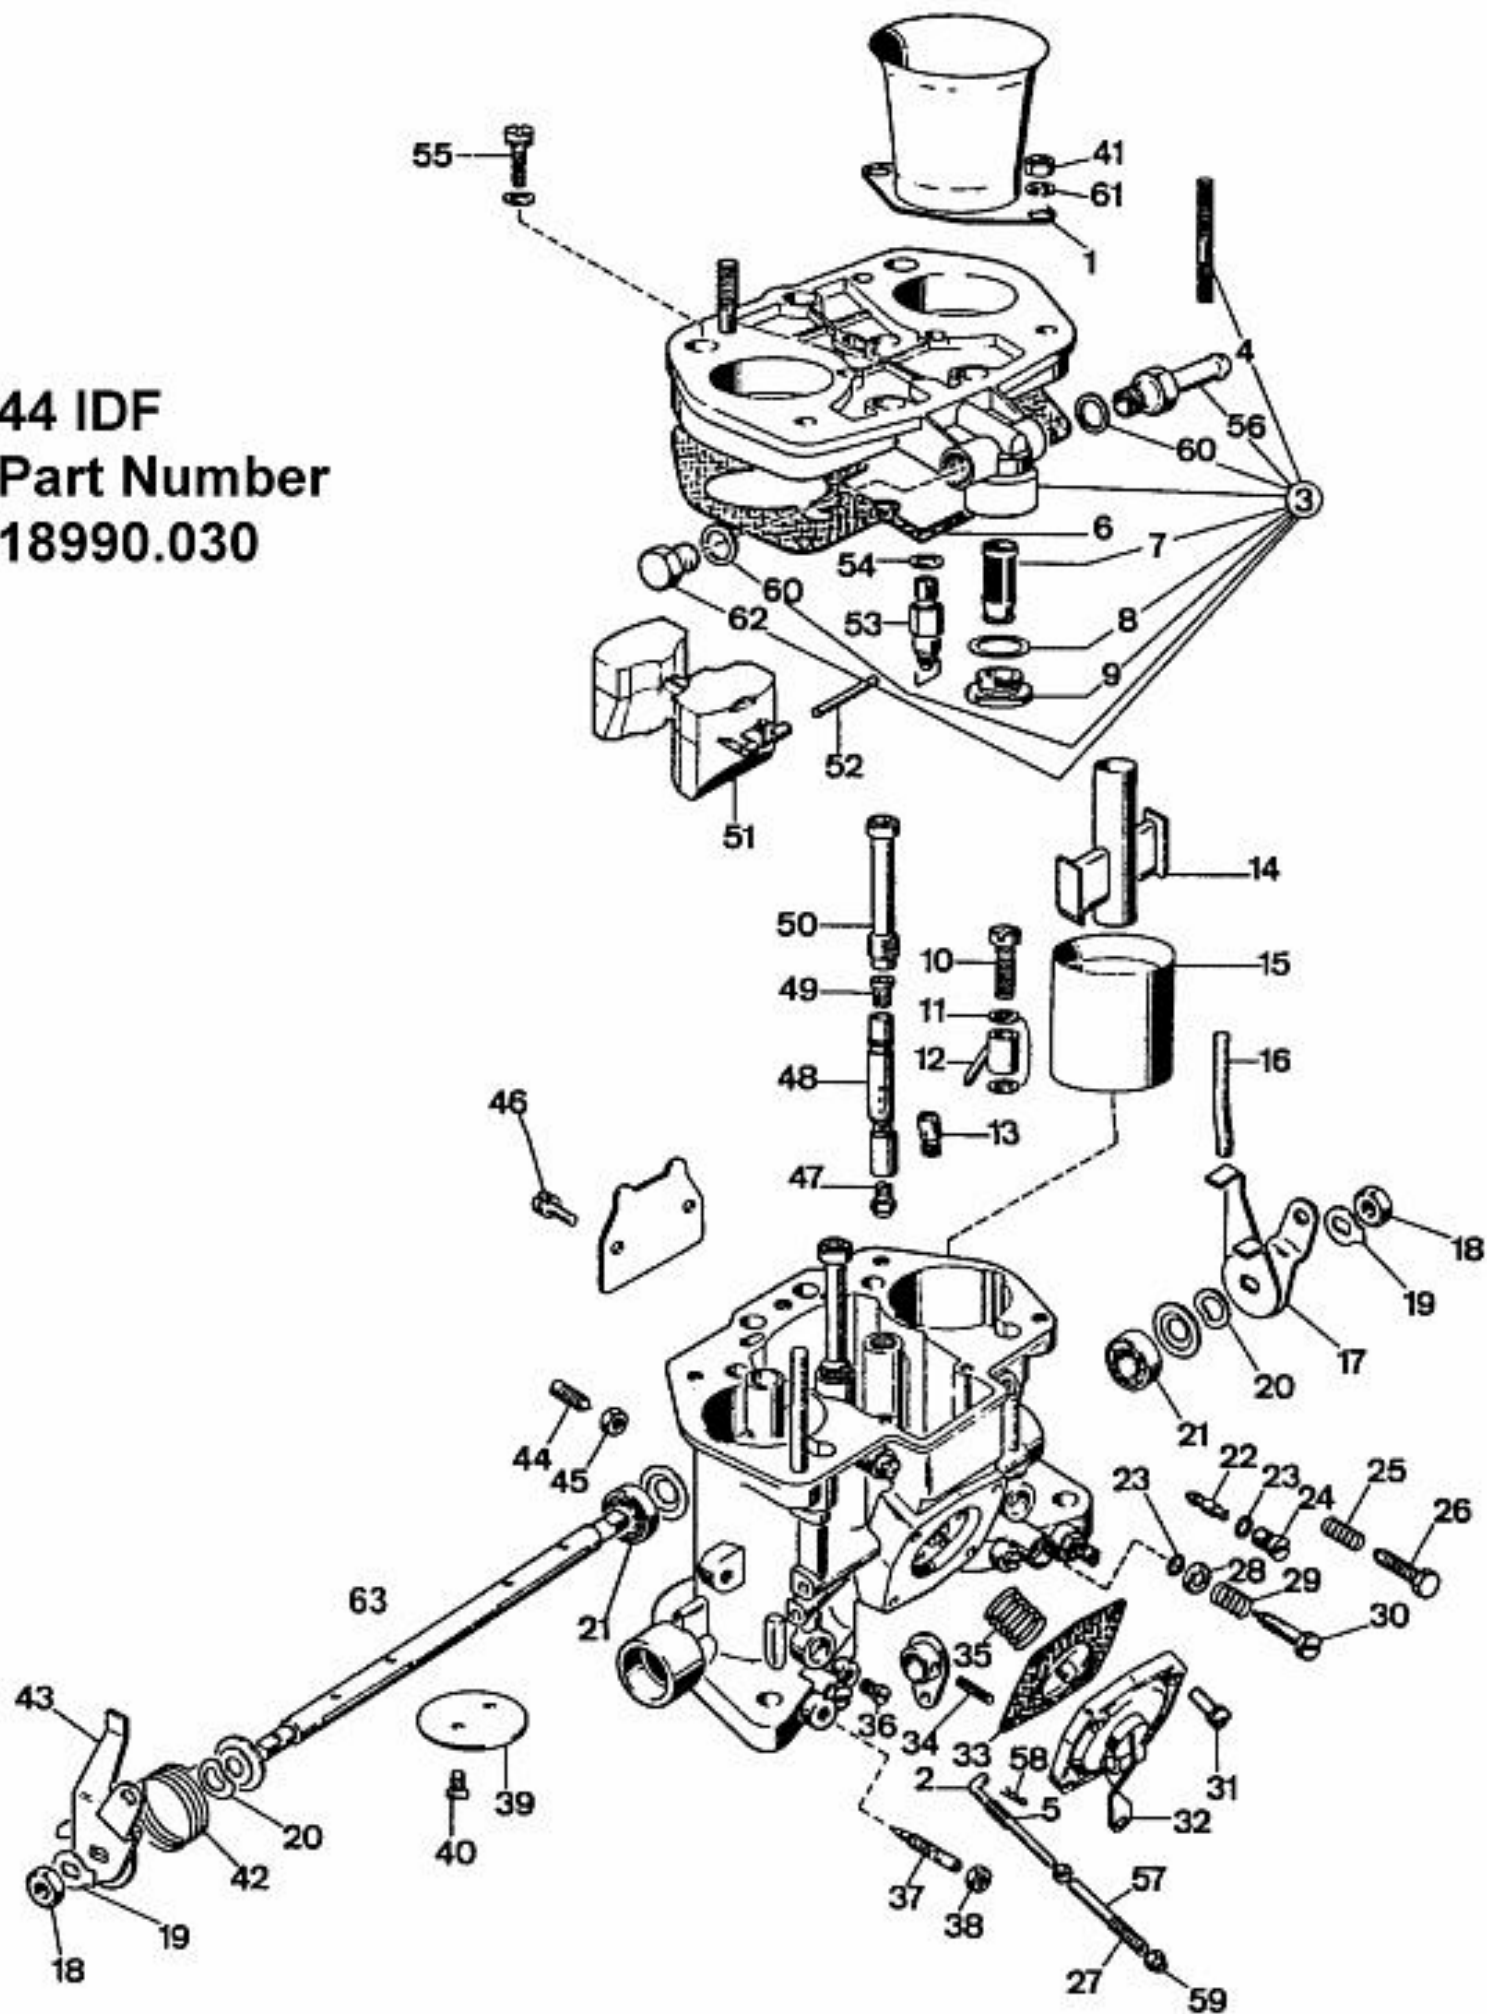


PARTS LIST

TYPE 44 IDF – PART NO. 18990.030

[illegible]

45 DCOE 152

Part Number 19600.060

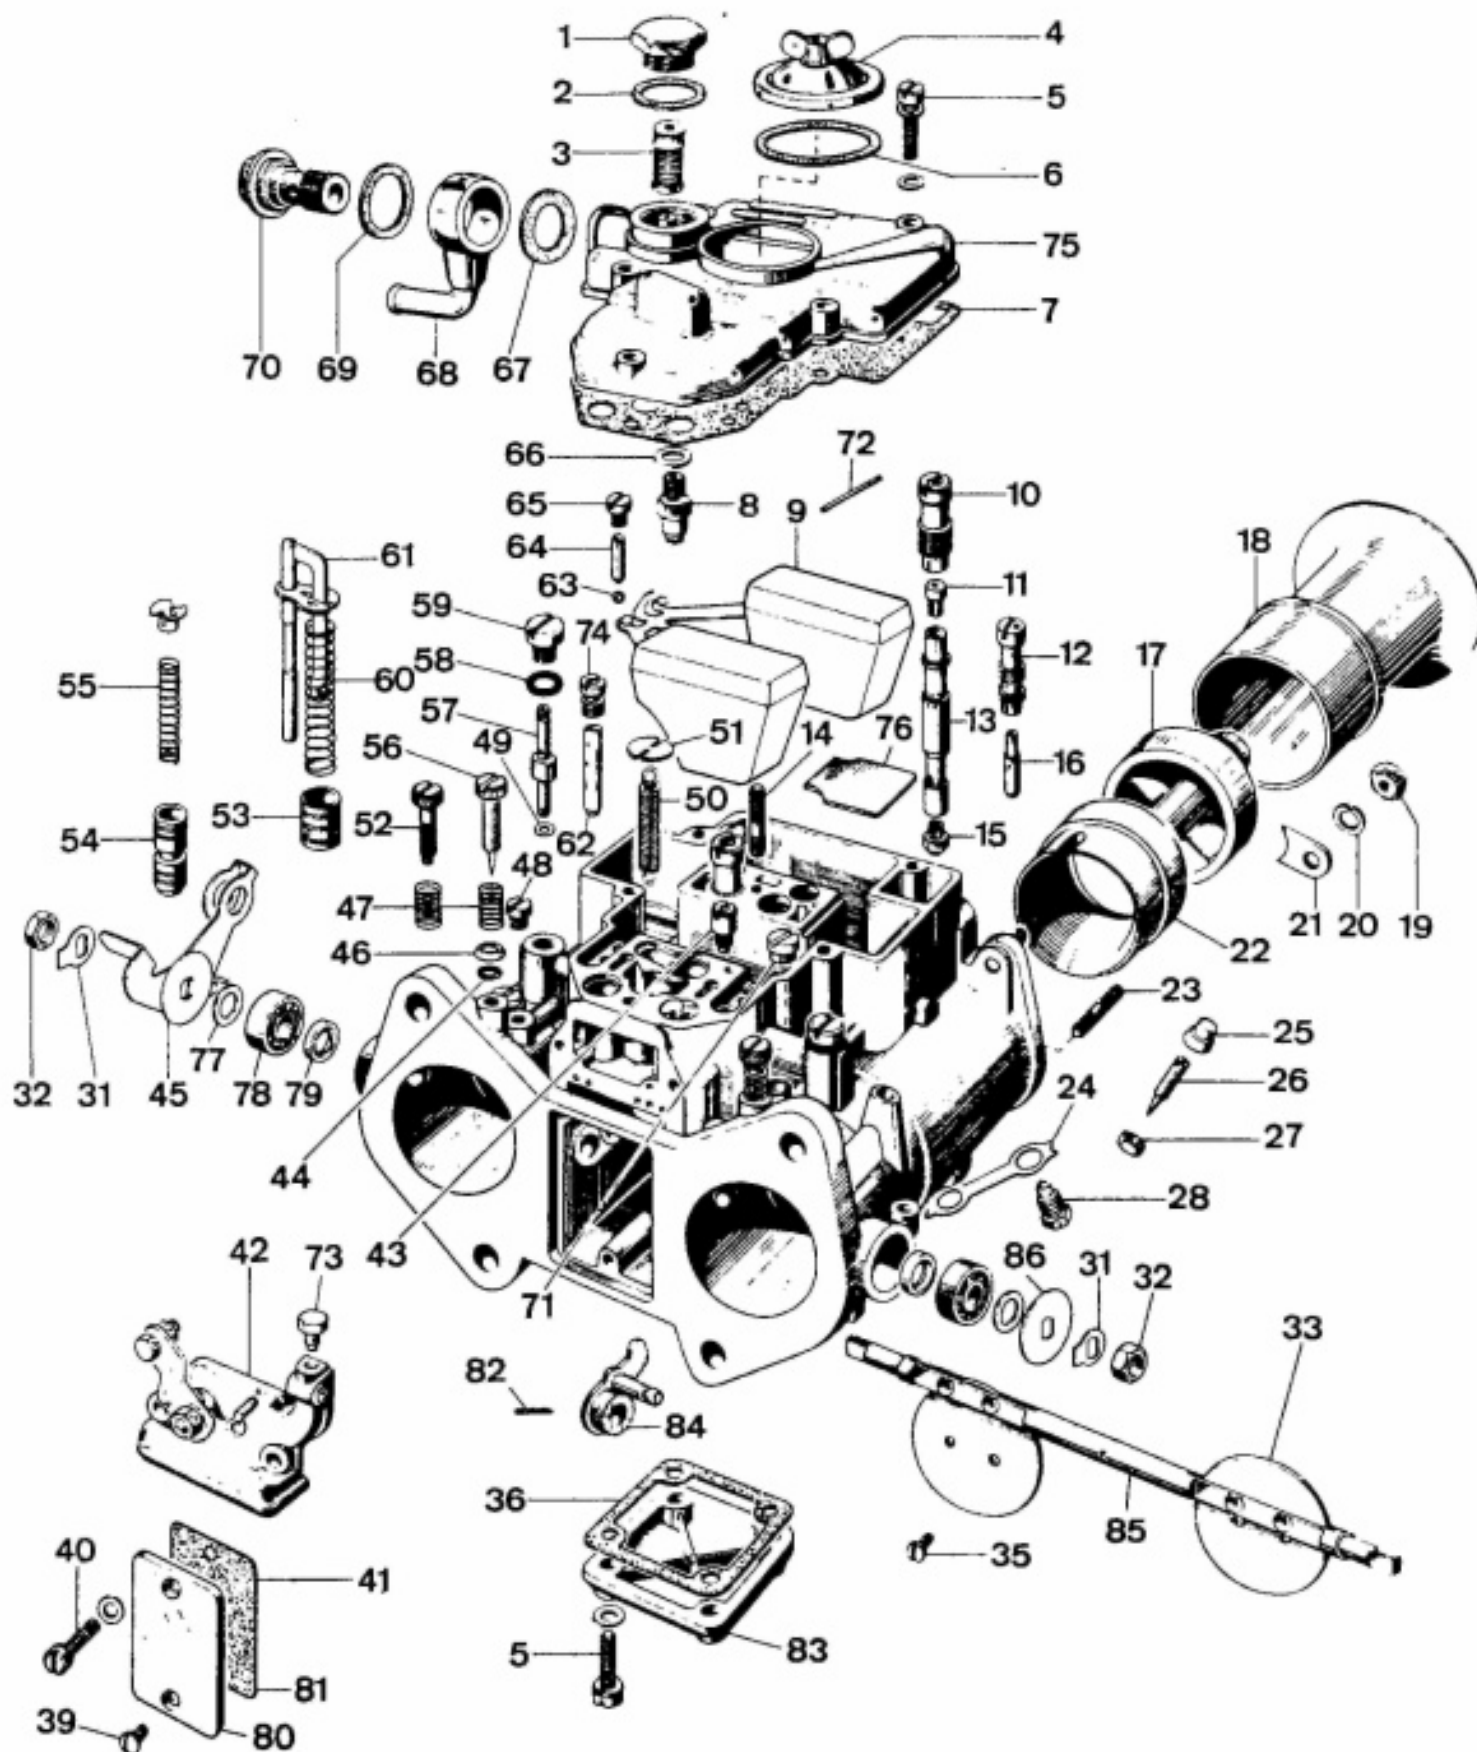


PARTS LIST

TYPE 45 DCOE 152 – PART NO. 19600.060

Dia No.	Qty. Req'd	Description	Part Number		Dia No.	Qty. Req'd	Description	Part Number
1	1	Filter Cover	61002.010		46	2	Idle Mixture Screw Cup Washer	58000.006
2	1	Filter Cover Gasket	41530.024		47	3	Spring	47600.007
3	1	Filter Element	37022.010		48	2	Vacuum Take Off Gasket	64590.008
4	1	Jet Inspection Cover	32376.003		49	2	Pump Jet Gasket	41535.021
5	9	Screw	64700.001		50	1	Throttle Spring	47605.027
6	1	Jet Inspection Cover Gasket	41550.002		51	1	Spring Anchor Plate	52210.006
7a	1	Rubber Top Cover Gasket	41715.011		52	1	Throttle Stop Screw	64625.012
7b	1	Paper Top Cover Gasket	41715.001		53	1	Pump Plunger	58602.003
8	1	Needle Valve	79503.*		54	2	Starter Valve	64330.003
9	1	Plastic Float	41030.034		55	2	Starter Valve Spring	47600.105
10	2	Emulsion Tube Holder	52580.001		56	2	Idle Mixture Screw	64750.003
11	2	Air Corrector Jet	77401.*		57	2	Pump Jet	76801.*
12	2	Idle Jet Holder	52585.006		58	2	Pump Jet 'O' Ring	41565.009
13	2	Emulsion Tube	61450.*		59	2	Pump Jet Cover	61015.008
14	1	Stud	64955.007		60	1	Pump Rod Spring	47600.064
15	2	Main Jet	73401.*		61	1	Pump Rod	10410.015
16	2	Idle Jet	748xx.*		62	2	Starter Jet	75507.085
17	2	Auxiliary Venturi	69602.*		63	2	Pump Demand Valve Ball	58300.003
18	2	Air Horn	52840.001		64	2	Pump Demand Weight	52730.001
19	4	Air Horn Fixing Nut	34715.010		65	2	Pump Demand Valve Cover	58070.008
20	4	Spring Washer	55525.010		66	1	Needle Valve Gasket	83102.120
21	4	Air Horn Tab	52150.004		67	1	Fuel Union Gasket	41530.031
22	2	Main Venturi (Choke)	72116.*		68	1	Fuel Union	10536.035
23	4	Stud	64955.101		69	1	Fuel Union Gasket	41530.024
24	2	Lock Washer	52155.003		70	1	Fuel Union Bolt	12715.008
25	2	Air By-Pass Screw Cap	14945.003		71	2	Progression Hole Inspection Cover	61015.009
26	2	Air By-Pass Screw	64750.002		72	1	Float Pin	52000.001
27	2	By-Pass Screw Lock Nut	34705.001		73	1	Choke Cable Clamp	64605.017
28	2	Locking Screw	64840.003		74	2	Starter Air Jet	77505.150
31	2	Lock Washer	55520.004		75	1	Carburetor Top Cover	31734.198
32	2	Throttle Spindle Nut	34710.003		76	1	Plate	52130.003
33	2	Throttle Plate	64005.084		77	2	Washer	55510.128
35	4	Throttle Plate Screw	64520.027		78	2	Sealed Bearing	32650.003
36	1	Bottom Cover Gasket	41640.001		79	2	'O' Ring	41575.019
39	2	Inspection Cover Fixing Screw	64570.009		80	1	Inspection Cover	52135.024
40	2	Choke Cover Fixing Screw	64700.004		81	1	Gasket	41640.021
41	1	Pump Cover Gasket	41640.021		82	1	Pin	58445.001
42	1	Cold Start Unit L/H	32556.002		83	1	Bottom Bowl Cover	32374.008
43	1	Exhaust Bleed	79701.*		84	1	Pump Cam Lever	45082.005
44	2	Idle Mixture Screw O Ring	41565.002		85	1	Throttle Shaft	10005.447
45	1	Throttle Lever	45048.007		86	1	Washer	99024.258
		*Calibrated Parts Require 3						
		Digits To Complete Part Number						
		See Calibrated Parts Section						
		For Sizes						

48 DCO 2/SP
Part Number:
19630.007

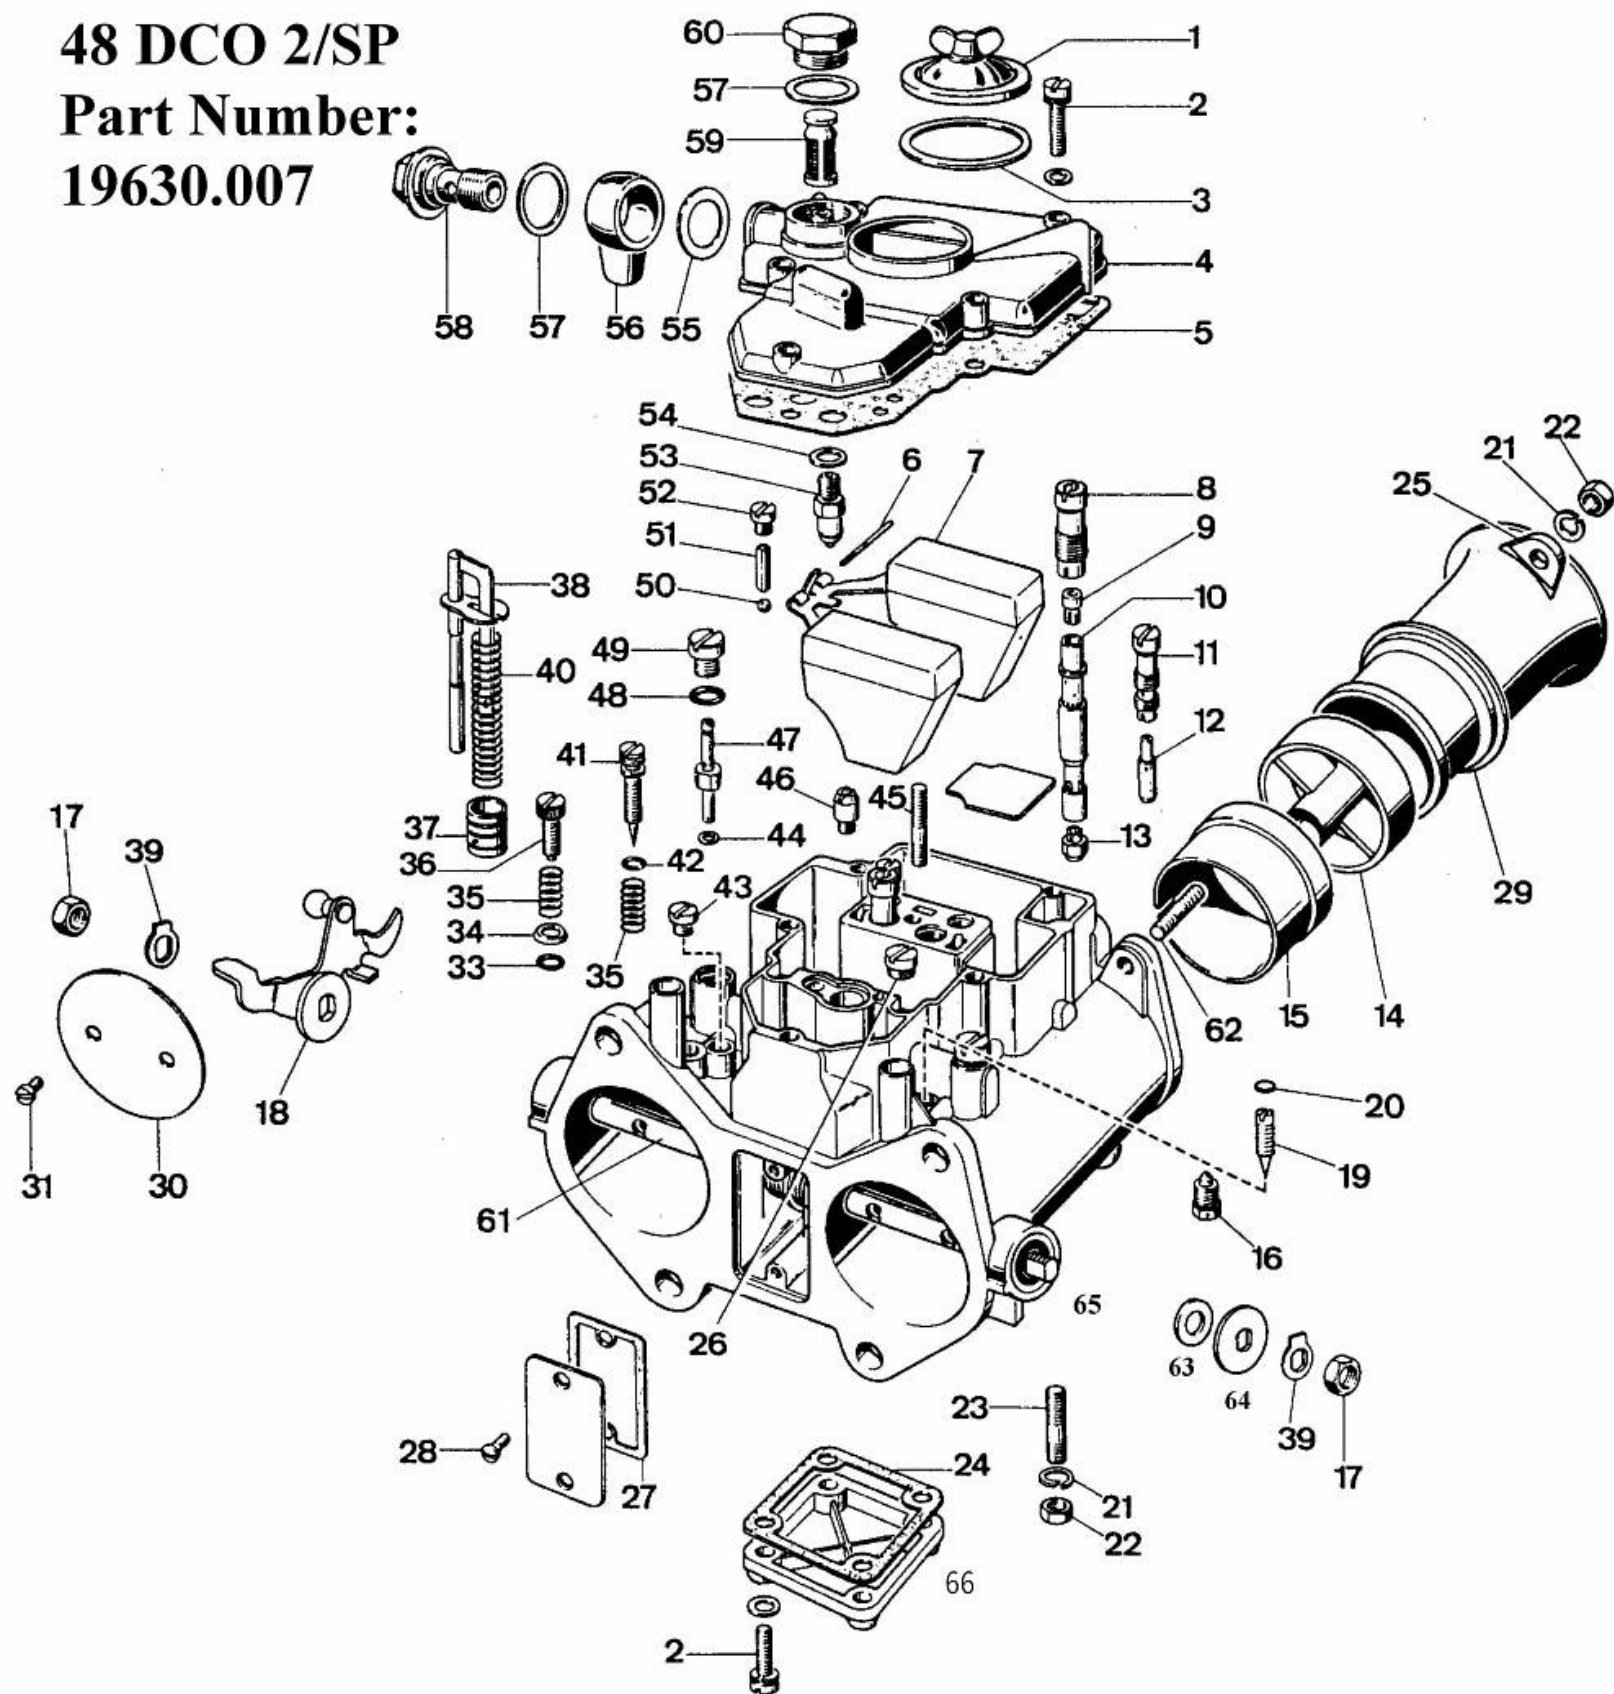


PARTS LIST

TYPE 48 DCO 2/SP – PART NO. 19630.007

[illegible]

48 IDA

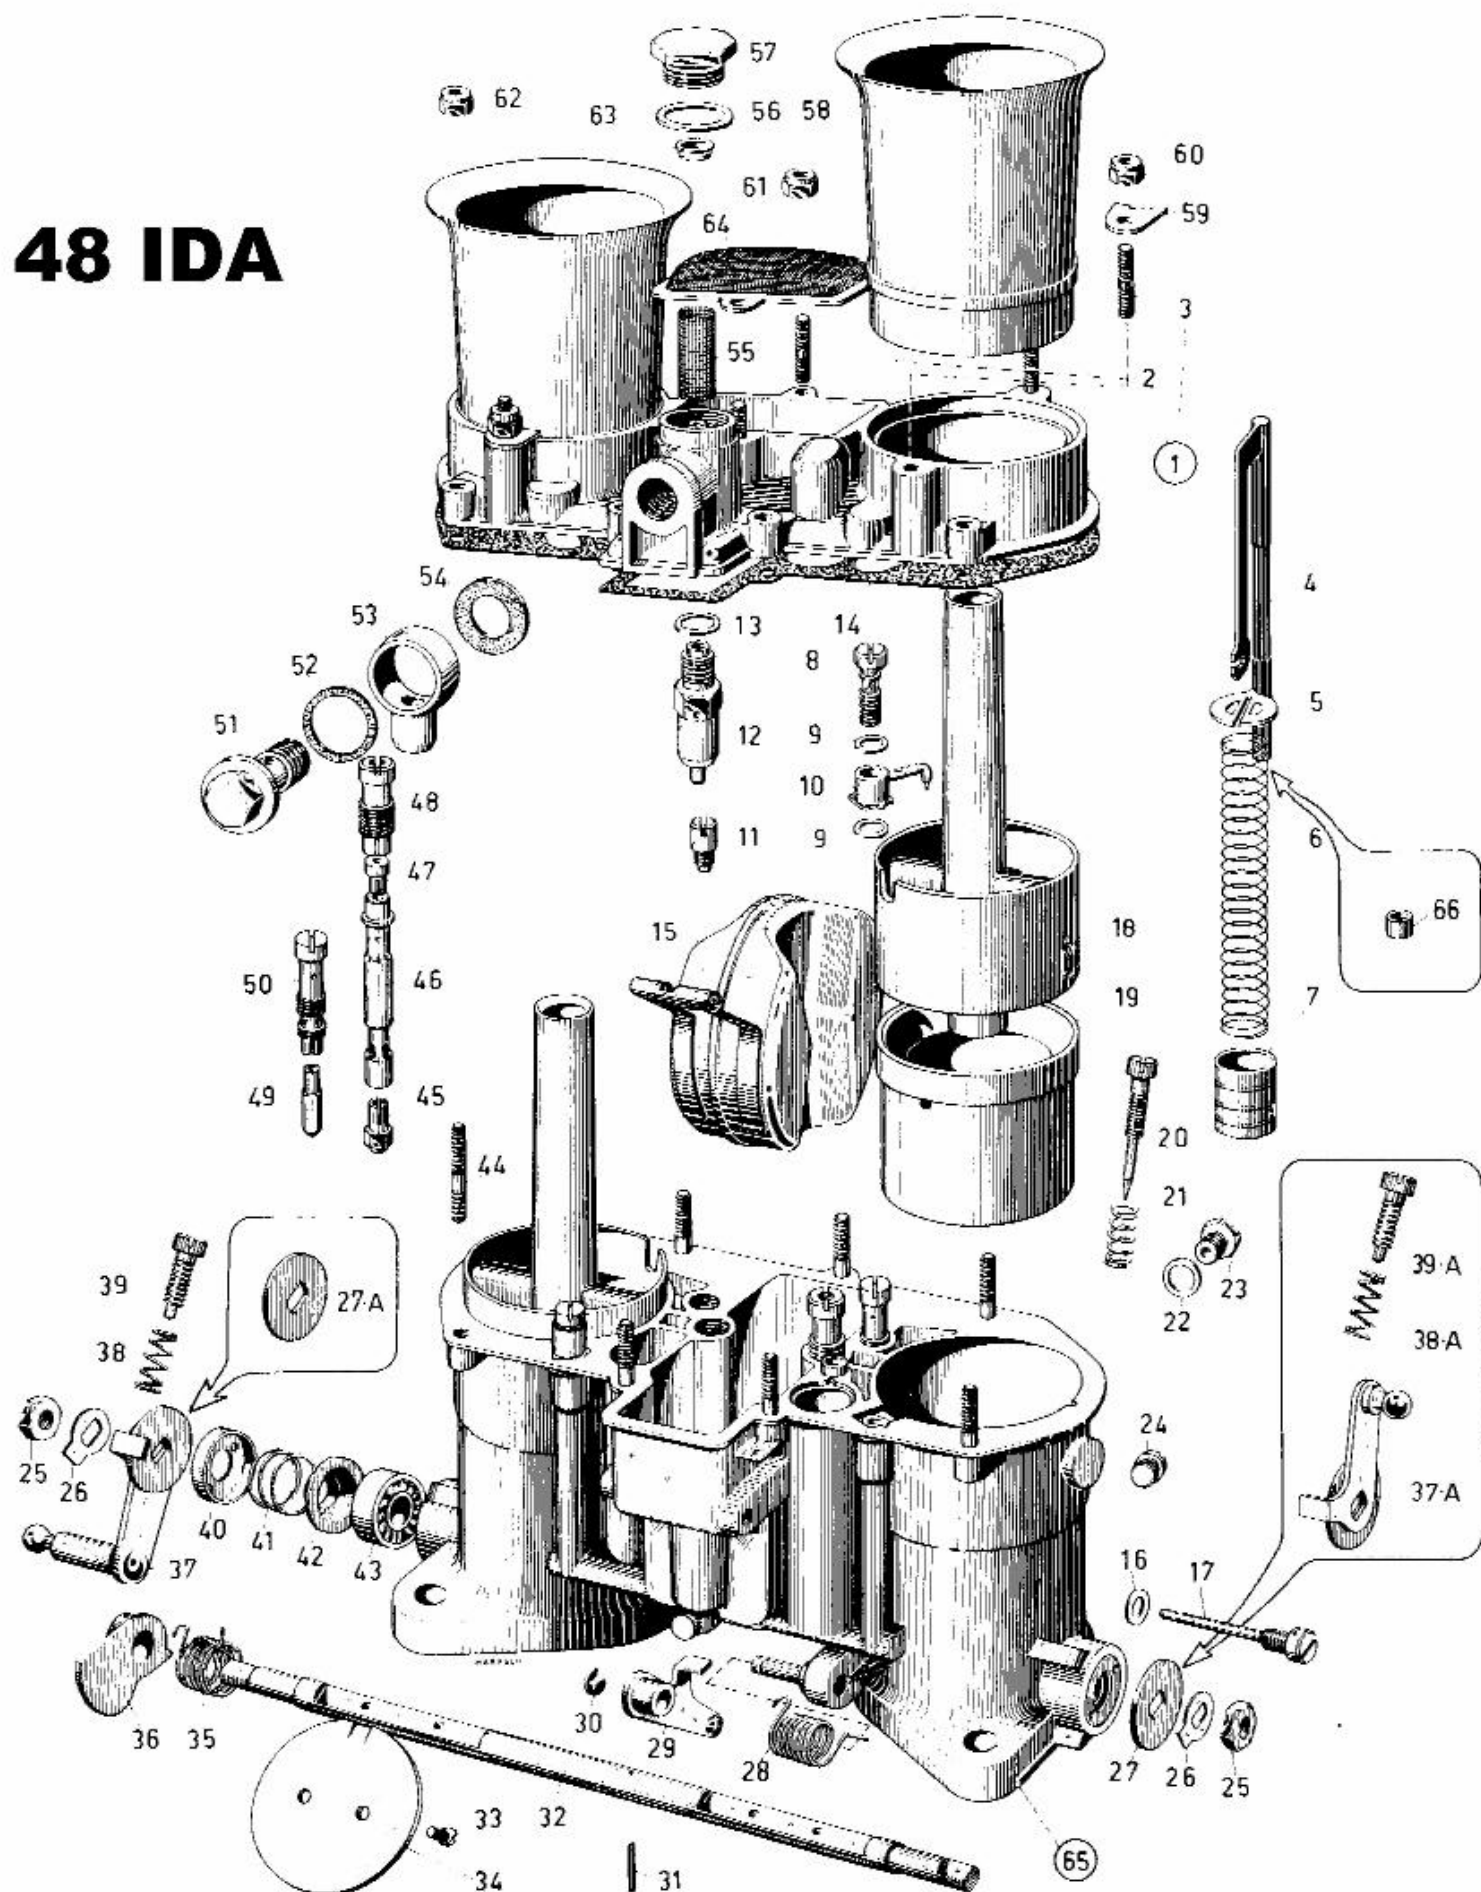


PARTS LIST

48 IDA – IDA 1

[illegible]

48 IDF XE
Part Number
19030.021

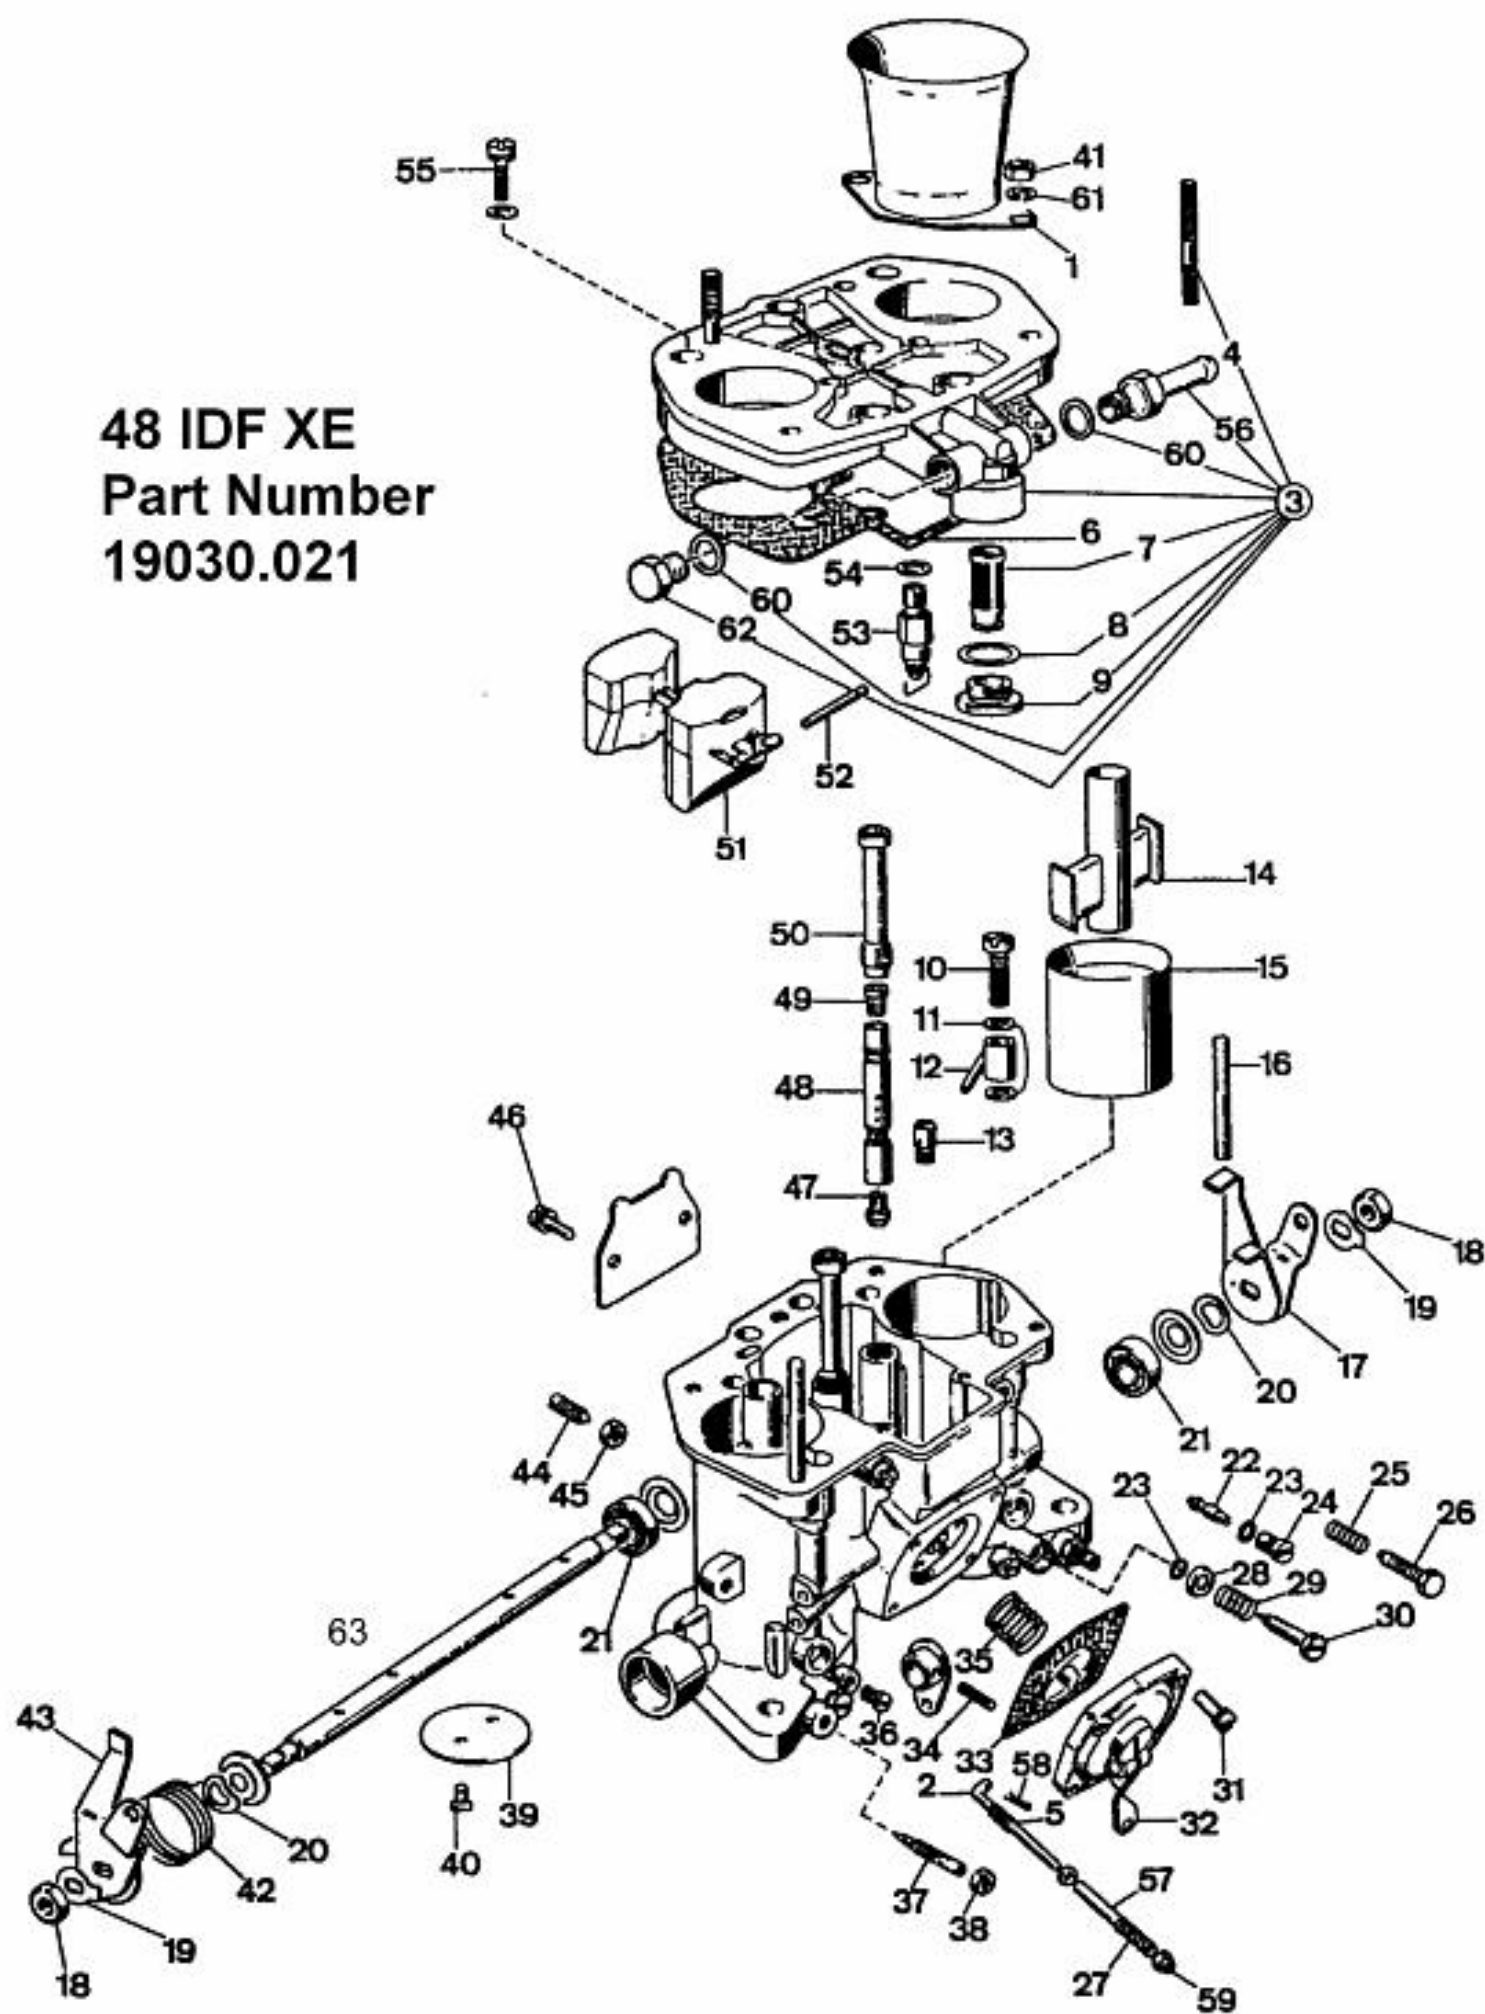

PARTS LIST


TYPE 48 IDF XE – PART NO. 19030.021

[illegible]

50 DCO SP - 1/SP

Part Number:

19650.001/.002

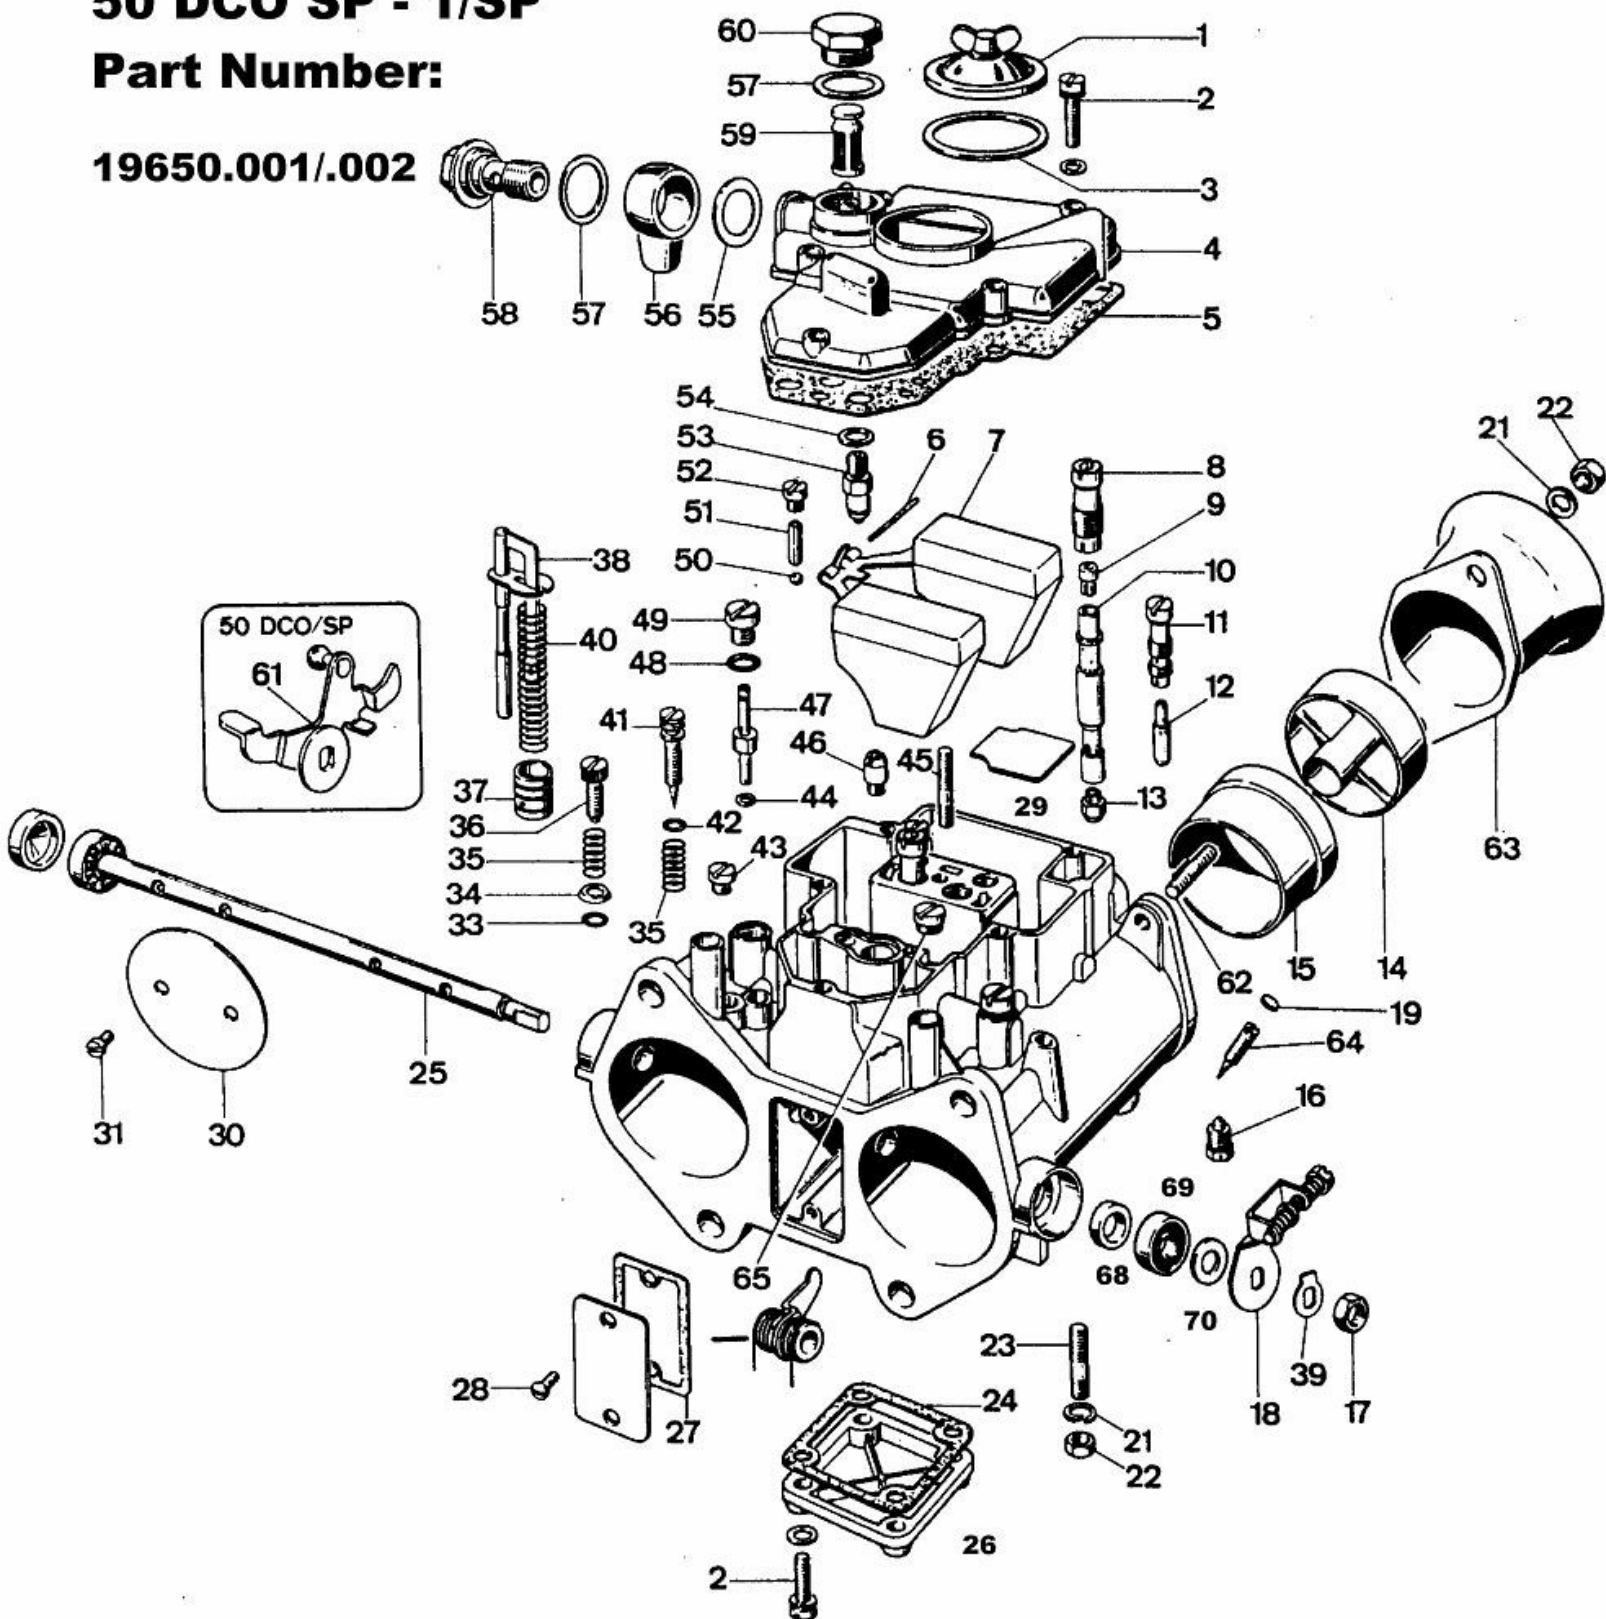

PARTS LIST
TYPE 50 DCO SP - 1/SP
PART NO. 19650.001/.002

[illegible]

AIR CORRECTOR JETS

Carb Type	Basic Part Number
ADF, DARA, DCN, DFAV, DFEV, DFI, DFM, DFV, DGAV, DGEV, DGV, DHSA, DIC DICA, DIR, DMSA, ICH, ICT, IDA 3 bbl	77201
SIZES AVAILABLE	
100, 110, 115, 120, 125, 130, 135, 140, 145, 150, 155 160, 165, 170, 175, 180, 185, 190, 195, 200, 205, 210 215, 220, 225, 230, 235, 240, 245, 250, 255, 260, 265 270	

Carb Type	Basic Part Number
DCNL, DCO, DCOE, IDA, IDF	77401
SIZES AVAILABLE	
100, 105, 110, 115, 120, 125, 135, 140, 145, 150, 155 160, 165, 170, 175, 180, 185, 190, 195, 200, 205, 210 220, 225, 228, 230, 232, 235, 240, 250, 255, 260, 265 275, 280	

Carb Type	Basic Part Number
DATRA, DCNF, DFTA, DHTA, DMTR, DMTRA	77501
SIZES AVAILABLE	
120, 125, 130, 135, 140, 145, 150, 155, 160, 165, 170 175, 180, 185, 190, 195, 200, 205, 210, 215, 220, 225 228, 230, 232, 235, 240, 250, 255, 260, 265, 275, 280	

Carb Type	Basic Part Number
DCD, DCZ	77502
SIZES AVAILABLE	
130, 140, 145, 150, 155, 160, 165, 170, 175, 180, 185 190, 195, 205, 210, 215, 220, 225, 230, 235, 240, 245 250, 270	

MAIN JETS

Carb Type	Basic Part Number
ADF, DARA, DCD, DCN, DCZ, DFAV, DFEV, DFI, DFM, DFV, , DGAV, DGEV, DGV, DHSA, DIC DICA, DIR, DMSA, ICH, ICT, IDA 3 bbl	73801
SIZES AVAILABLE	
040, 050, 060, 065, 070, 075, 080, 085, 087, 090, 095, 097, 100, 103, 105, 107, 110, 112, 115, 117, 120, 122, 125, 127, 130, 135, 137, 140, 142, 145, 150, 152, 155, 157, 160, 162, 165, 170, 175, 180, 185, 190, 195, 200, 205, 210, 215, 220	

Carb Type	Basic Part Number
DCNL, DCO, DCOE, IDA, IDF	73401
SIZES AVAILABLE	
000, 080, 085, 090, 095, 100, 105, 107, 110, 115, 120, 122, 125, 130, 133, 135, 140, 145, 150, 155, 160, 165, 170, 175, 180, 185, 190, 195, 200, 205, 210, 215, 220, 225, 230, 232, 235, 240, 245, 250, 255	

Carb Type	Basic Part Number
DATRA, DCNF, DFTA, DHTA, DMTR, DMRTRA	73405
SIZES AVAILABLE	
050, 090, 095, 097, 100, 102, 105, 110, 112, 115, 120, 125, 130, 135, 140, 145, 150, 155, 160, 165, 170, 175, 180, 185, 190, 195, 200	

**TO COMPLETE THE PART NUMBER
PLEASE TAKE THE BASIC PART #
AND ADD THE SIZE TO IT. i.e. 77201.180**

NEEDLE VALVES

Carb Type	Basic Part Number
38 DCN, DCO	79406 or 79502
SIZES AVAILABLE (IN MM)	
175, 200	

Carb Type	Basic Part Number
40 & 40 MM (3 BBL)	79508
SIZES AVAILABLE (IN MM)	
175, 200	

Carb Type	Basic Part Number
DCN, DCNF, DCOE	79503
SIZES AVAILABLE (IN MM)	
150, 175, 200, 250, 300	

Carb Type	Basic Part Number
IDF	79511
SIZES AVAILABLE (IN MM)	
125, 150, 175, 200	

Carb Type	Basic Part Number
46 & 48 IDA (2 BBL)	79504
SIZES AVAILABLE (IN MM)	
175, 200, 300	

Carb Type	Basic Part Number
32/36 DFAV, DFEV, DFV, 32/36 DGAV, DGEV, DGV 40 DFAV, DFI, IDF	79519
SIZES AVAILABLE (IN MM)	
125, 150, 175, 200	

Carb Type	Basic Part Number
DCD, DHSA, DIC, DICA, DMTR	79507
SIZES AVAILABLE (IN MM)	
150, 175, 200	

TO COMPLETE THE PART NUMBER
PLEASE TAKE THE BASIC PART NUMBER
AND ADD THE SIZE TO IT. 79503.175

IDLE JETS

Carb Type	Basic Part Number
DCD, DCN, DLED	74401
SIZES AVAILABLE (IN MM)	
040, 045, 050, 060, 065, 070, 075, 085, 090, 095, 100, 110, 115, 120, 125	

Carb Type	Basic Part Number
DARA, DATRA, DFAV, DFD, DFI, DFM, DFTA, DFV, DGAS, DGV, DGAV (small size), DHSA, DHTA, DIC, DICA, DIR, DMSA, IDA 3 bbl	74403
SIZES AVAILABLE (IN MM)	
040, 042, 045, 047, 050, 052, 057, 060, 065, 070, 075, 080, 085, 090, 100	

Carb Type	Basic Part Number
ADFA, DGV (with idle solenoid), DGAV (large size), ICH, ICT	74409
SIZES AVAILABLE (IN MM)	
040, 042, 045, 047, 050, 052, 055, 057, 060, 062, 065, 070	

Carb Type	Basic Part Number
DCNF, IDF	74405
SIZES AVAILABLE (IN MM)	
035, 040, 045, 047, 050, 052, 055, 060, 065, 070	

IDLE JETS FOR DCOE CARBURETORS

"F" SPEC	BASIC PART NUMBER	SIZES AVAILABLE (FUEL HOLE)
F1	74814	040, 050, 055, 060, 065
F2	74815	040, 050, 055
F3	74816	040, 045, 050, 055, 060, 070
F4	74817	060
F5	74818	050, 055, 060, 065, 070
F6	74819	040, 045, 050, 055, 060, 065
F7	74820	040, 045, 050 055
F8	74821	040, 045, 050, 055, 060, 065
F9	74822	040, 045, 050, 055, 060, 065
F11	74824	040, 045, 050, 055, 060, 070
F12	74825	040, 045, 055
F13	74826	050, 055, 065
F14	74827	050
F15	74828	050
F17	74830	050, 055
F18	74831	050
F19	74832	045, 050
F21	74833	055
F22	74834	055
F24	74838	045

CHOKES (MAIN VENTURIS)

CARB TYPE	BASIC PART NUMBER	SIZES
28/36 DCD (Primary BBL)	71702	21, 22, 23, 24, 26
23/36 DCD (Secondary BBL), 36 DCD	71701	19, 22, 23 24, 25, 26, 27
40 DCN, 40 DNCF	72106 or 72129	23, 24, 26, 28, 29, 30, 32, 34
40 DCOE	72302	26, 28, 29, 30, 31, 32, 33, 34, 35, 36
40 IDF	71506	27, 28, 30, 32, 34
42 DCNF	72106 OR 72129	32
42 DCOE	72304	28, 30, 32, 34
44 DCNF	72108	36, 37, 38
44 IDF	71507	32, 34, 36
45 DCOE	72116	28, 30, 32, 34, 35, 36, 38, 40
48 IDA	72128	36,38,40,42,46
48 IDF	71513	40, 41
48, 50, 55 DCO	72136	34, 36, 38, 40, 42,43,44,46,48

AUXILIARY VENTURIS

CARB TYPE	BASIC PART NUMBER	SIZES AVAILABLE
ADFA	70512	3.0, 3.5
DCD	69001	4.5
DHSA, DARA, DMSA	71113	3.5, 4.0
DATRA, DFTA, DMSA, DMTR, DMTRA	71115	4.0, 4.5
DFM, DIR, DFAV	71110	4.5
DFV, DGAV	71111	3.5
40 DCOE	70003	3.5, 4.5
40 DCN, 44 IDF	71102	3.5, 4.0, 4.5
40 DCN 21	70504	4.5
40 DCNF	71107	3.5, 4.5
40 IDA 3bbl	71103	4.5
40 IDF	69002	4.0, 4.5
42, 44 DCNF	70503	3.5, 4.0, 4.5
42 DCOE	70002	3.5, 4.5
45 DCOE	69602	3.5, 4.0
46 IDA 3 bbl	71104	4.5
48 IDA	69002	3.5

**TO COMPLETE THE PART NUMBER
PLEASE TAKE THE BASIC PART #
AND ADD THE SIZE TO IT. i.e. 72136.340**

6/7/2000

ACCELERATOR PUMP JETS

Carb Type	Basic Part Number
40 & 46 IDA 3 bbl	76201
SIZES AVAILABLE	
040, 045, 050, 060, 065, 070, 090	

Carb Type	Basic Part Number
DCN, DCNF, 40 DFAV, DFI, DGAS	76212 OR 76215
SIZES AVAILABLE	
030, 035, 040, 045, 050, 055, 060, 065, 070	

Carb Type	Basic Part Number
40 IDT, IDTP, IF3C	76202
SIZES AVAILABLE	
040, 045, 050	

Carb Type	Basic Part Number
DGV, DGAV, DGEV	76226
SIZES AVAILABLE	
040, 045, 050 (For other sizes use 76212 with secondary blocked off)	

Carb Type	Basic Part Number
DCD	76203
SIZES AVAILABLE	
045, 050, 055, 060, 065, 070, 080	

Carb Type	Basic Part Number
48 IDA	76406
SIZES AVAILABLE	
070	

Carb Type	Basic Part Number
IDF	76210
SIZES AVAILABLE	
040, 050, 055	

Carb Type	Basic Part Number
ADFA, DMTR, DATRA	76407
SIZES AVAILABLE	
040, 045, 050, 055, 060	

Carb Type	Basic Part Number
DFAV, DFD, DFM, DHSA	76211
SIZES AVAILABLE	
040, 050, 055, 060, 065, 070	

Carb Type	Basic Part Number
DCOE	76801
SIZES AVAILABLE	
030, 035, 040, 045, 050, 055, 060, 065, 070, 090	

IDLE JETS FOR 48 IDA CARBURETORS

"F"	BASIC PART	SIZES AVAILABLE
SPEC	NUMBER	(FUEL HOLE)
F10	74823	040, 045, 050, 055, 060, 065, 070, 075, 080, 085, 090, 095, 100

IDLE JET HOLDERS FOR 48 IDA CARBURETORS

BASIC PART	SIZES AVAILABLE
77903	060, 100, 120

TO FINISH THE
PART NUMBER,
TAKE THE BASIC
PART # AND ADD
THE SIZE TO IT
I.e. 77903.060

ACCELERATOR PUMP INLET AND EXHAUST VALVES

Carb Type	Basic Part Number
DCD, DCOE, IDA, IDF	79701
SIZES AVAILABLE	
000 (CLOSED), 035, 040, 045, 050, 055, 060, 070, 075, 080, 085, 090, 100, 150	

EMULSION TUBES

61440 SERIES

ADFA, DARA, DCN, DCOF, DFAV, DFD, DFI
DFM, DGAS, DGAV, DGEV, DGV, DHSA, DIC, DICA,
DIR, DLED, DMSA, ICA, ICF, ICH, ICT, IDA 3 C 3 BBL

F Series	Part Number
----------	-------------

F1	61440.150
F2	61440.166
F3	61440.181
F4	61440.196
F5	61440.182
F6	61440.211
F7	61440.226
F8	61440.212
F9	61440.241
F10	61440.261
F11	61440.281
F14	61440.301
F15	61440.321
F17	61440.351
F18	61440.356
F19	61440.342
F20	61440.365
F21	61440.371
F23	61440.372
F24	61440.213
F25	61440.488
F26	61440.151
F30	61440.515
F33	61440.502
F33	61440.502
F35	61440.526
F38	61440.352
F43	61440.302
F50	61440.216
F53	61440.217
F56	61440.218
F57	61440.219
F60	61440.325
F61	61440.326
F66	61440.220
F68	61440.328
F70	61440.197
F74	61440.304
F78	61440.222
F80	61440.223
F81	61440.224
F82	61440.329

61450 SERIES

DCNL, DCOE, IDA, IDF

F Series	Part Number
----------	-------------

F1	61450.026
F2	61450.027
F3	61450.028
F4	61450.051
F5	61450.029
F6	61450.071
F7	61450.091
F8	61450.092
F9	61450.030
F11	61450.031
F12	61450.131
F15	61450.032
F16	61450.181
F21	61450.221
F32	61450.230
F41	61450.057
F47	61450.058
F50	61450.036

61450 SERIES

DATRA, DCNF, DFT,
DFTA, DMTR, DMTRA

F Series	Part Number
----------	-------------

F21	61450.221
F22	61450.222
F24	61450.224
F25	61450.225
F27	61450.227
F30	61450.229
F33	61450.231
F36	61450.232
F38	61450.234
F39	61450.235
F42	61450.236
F43	61450.237

61455 SERIES

DCD, DCZ

F Series	Part Number
----------	-------------

F1	61455.351
F3	61455.353
F5	61455.002
F7	61455.031
F9	61455.006
F10	61455.007
F13	61455.046
F17	61455.091
F18	61455.062
F19	61455.106
F22	61455.136
F23	61455.151
F25	61455.137
F26	61455.138
F29	61455.211
F30	61455.152
F31	61455.231
F33	61455.139

6/7/2000